


### INSERT THE BULB

Insert the supplied bulb.

MAXIMUM WATTAGE 40W.


DO NOT EXCEED THE WATTAGE AS STATED

ON THE WARNING LABEL AND IN THE INSTRUCTION SHEETS

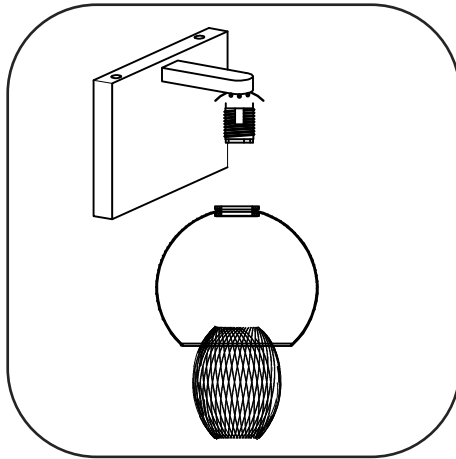

### SECURE THE GLASS AND MESH SHADE

Hold the glass shade to the fixture by fitting the shade over the socket. Then place the mesh inside the glass shade and secure the mesh by screwing onto the threads on the socket.

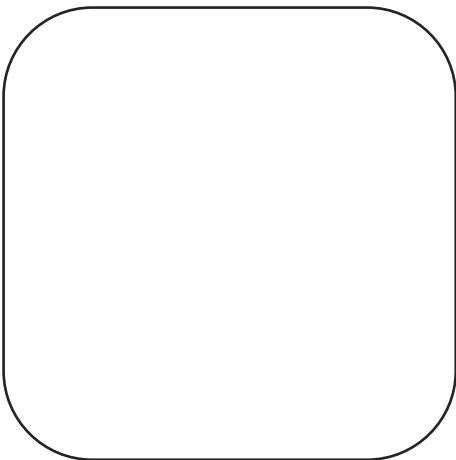

RESTORE THE ELECTRICITY AND  
CHECK THE OPERATION OF YOUR  
NEW ACCESS FIXTURE

CAUTION

Please ensure that the fitting is cool and switched off before replacing the bulb.  
DO NOT use bulbs that might exceed the maximum wattage, stated on caution label.