



- Apply thread sealant or teflon tape to SUPPLY NIPPLES (1).
- Slide COUPLING NUTS (2) onto INLET SHANKS (3).
- Thread ESCUTCHEONS (4) fully onto INLET SHANKS (3).
- Thread INLET SHANKS (3) onto SUPPLY NIPPLES (1). Distance between INLET SHANK (3) outlets must be 8" to match the VALVE (5).

2

13/32

6

- Insert RUBBER WASHERS (6) into INLET SHANK (3).
- Attach VALVE (5) to INLET SHANKS (3). Tighten both COUPLING NUTS (2) firmly.




TEST FAUCET

- Remove AERATOR (1).
- Turn HANDLES TO **OFF** POSITION.
- Slowly turn water supplies on and check all connections for leaks.
- Operate HANDLES to flush water lines thoroughly.
- Turn HANDLES to **OFF** position and replace AERATOR **(1)**.
- Thread ESCUTCHEONS against finished wall.

4 SERVICE

- To change direction of handle rotation, proceed as follows:
 - Turn HANDLE to OFF position.
 - Remove HANDLE SCREW and HANDLE.
 - Remove SPRING CLIP (1).
 - Lift STOP WASHER (2), turn 90° and replace.
 - Replace SPRING CLIP (1).
 - Replace HANDLE and HANDLE SCREW.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

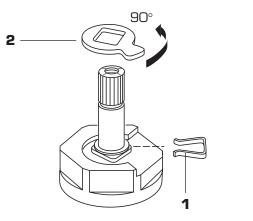

5

