


MAKE WATER SUPPLY CONNECTIONS

- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" compression. Connect left supply to Hot (Marked with a Red Line) and right supply to Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 21" long from faucet base.

Note: If additional supply length is required, installer must purchase additional parts separately.

Important: If SUPPLY HOSES (1, 2) are too long, loop as illustrated to avoid kinking.

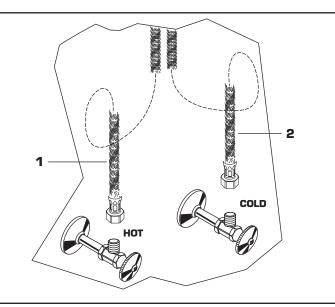

5

INSTALL SPRAY HOLDER

3


- Place the SPRAY HOLDER (1) into the appropriate mounting hole. Assemble the SPRAY HOLDER WING NUT (2) onto the shank of SPRAY HOLDER (1) from below and hand tighten. Do not use putty.
- For installation less spray, cap off SPRAY HOSE CONNECTION (3) with PIPE CAP (4).

CONNECT HOSE SPRAY

Feed SPRAY HOSE (5) through SPRAY HOLDER (1) and attach COUPLING NUT (6) of HOSE (5) to SPRAY HOSE CONNECTION (3) on valve body. Tighten COUPLING NUT (6) firmly.

TEST INSTALLED FAUCET

- Move HANDLE into "off" position and remove AERATOR (1).
- Turn on water supplies and check connections for leaks.
- Operate HANDLE (2) up and down, left and right to flush water lines thoroughly.
- For faucet with spray, direct SPRAY HEAD (3) into sink and activate SPRAY (3). Check hose connections for leaks.
- Move HANDLE (2) to "off" position and replace AERATOR (1).

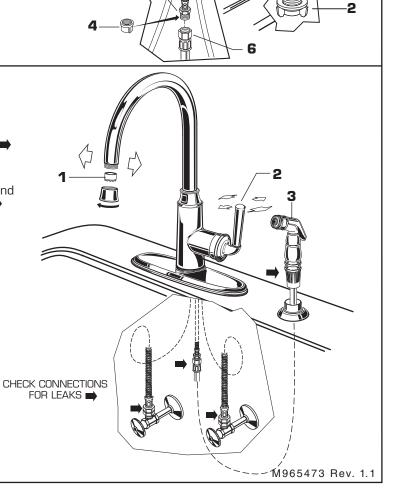


SPRAY HOSE-

CONNECTION

3

5 SERVICE

- If faucet drips, operate HANDLE several times from "off" to "on." Do not apply excessive force.
- Clogged CARTRIDGE outlets or inlets may cause reduced flow. To clean, first turn off water supply then:
 - Remove INDEX BUTTON (1), loosen HANDLE SCREW (2) and remove HANDLE (3).
 - Unthread the ESCUTCHEON CAP (4). Unthread three MOUNTING SCREWS (5).
 - Lift CARTRIDGE (6) off MANIFOLD (7).
 - Clean MANIFOLD (7) and CARTRIDGE (6) ports.
 - Place CARTRIDGE (6) onto MANIFOLD (7) and tighten MOUNTING SCREWS (5) alternately.
 - Replace ESCUTCHEON CAP (4), HANDLE (3), tighten HANDLE SCREW (1) and install INDEX BUTTON (2).
- Spout leakage. If fitting leaks above or below spout RETAINING COVER (8) remove SPOUT (9) as follows and check SPOUT O-RING. First turn off water supply.
 - Unthread spout RETAINING COVER (8).
 - Remove SPOUT (9) by pulling up gently while moving SPOUT (9) side to side.
 - Check SPOUT O-RING (10) for damage. Replace if necessary.
 - The DIVERTER (11) can be cleaned by unthreading from faucet body. Rinse the DIVERTER (9) clean and thread DIVERTER (11) back into faucet body.
- Reverse procedure to reinstall SPOUT (9).

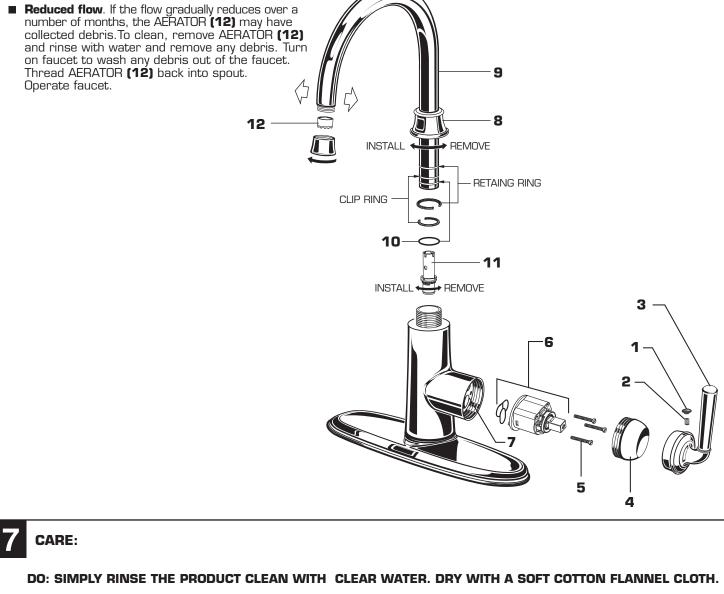

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

