

Intertek

DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure your product is recognized as an official purchase and is eligible for warranty coverage.

Mail in the completed registry card (Pg. 2) or register online at <u>www.swcorp.com/register</u>.



PRODUCT REGISTRATION*

IMPORTANT: YOUR WARRANTY WILL NOT BE RECOGNIZED UNLESS THIS CARD IS FULLY COMPLETED AND RETURNED OR ONLINE REGISTRATION IS COMPLETED.

To ensure that your warranty is registered and confirmed please do one of the following:

- 1. Register online at <u>www.swcorp.com/register</u>. You will be asked to fill out the same information you would in the registration card. Registering online is fast, secure and ensures we receive your information.
- 2. Complete, cut-out and mail the registration card below. By returning this registration card we confirm the date of purchase for your new product. This confirmation will allow us to process any warranty claims.

Product Registration	n Card	
- Name	Address	
City	State Zip	
^{>} hone	Email	
Date of Purchase		
nstaller's Name	Phone	
	carefully and understand and agree that any installation, operation or maintenan instructions and guidelines contained in the owner's manual and installation guid	
Signature	Date	

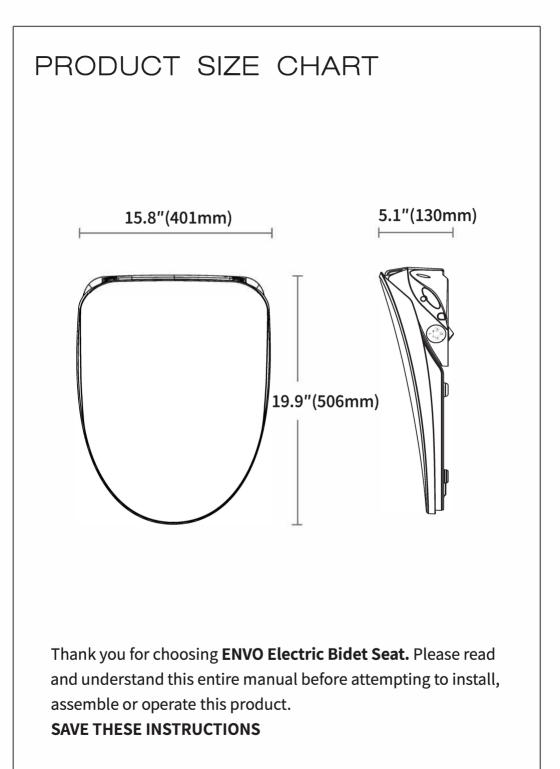


TABLE OF CONTENTS

SAFETY PRECAUTIONS	PG.1
COMPONENTS	PG.3
ELECTRIC BIDET SEAT INSTALLTION	PG.4
GUILDINGS FOR FIRST USE	PG.8
OPERATION INSTRUCTION OF SIDE KEY	PG.9
REMOTE CONTROL INSTRUCTIONS	PG.10
CLEANING&MAINTEANANCE	PG.13
LONG-TIME PERSERVATION	PG.15
PRODUCT PARAMETERS	PG.15
FUNCTION LIST	PG.16
TROUBLE SHOOTING	PG.17

SAFETY PRECAUTIONS

Please carefully read the safety precautions before installation. This is important and must be observed.

Anger 🕂

Only connect to a Ground-Fault Circuit-Interrupter(GFCI) protected grounded socket. Do not remove the ground pin or use a ground adapter.

Otherwise, electric shock will be caused by fault or short circuit.

MARNING

•Any modification to your ENVO Electric Bidet Seat will lead to warranty failure. If cables, plugs or other components need to be repaired or replaced, they need to be handled by qualified electricians.

•Any replacement shall be provided by ANZZI. The use of a third-party replacement will invalidate the warranty.

•Cut off the power supply before maintenance.

•Ensure that the bathroom is well ventilated to avoid moisture accumulation. Installing the smart toilet in a humid place may cause electrical failure of the product.

• In any case, the socket shall be installed at a position greater than 19-11/16"(500mm) from the bathtub.

•Do not touch the power socket with wet hands, <u>Otherwise it may cause electric</u> shock.

• Do not pour water, hot water or detergent onto the top of the Electric bidet seat, power supply or plug.

•Make sure the Electric bidet seat is away from flames or combustibles.

• Do not put your fingers or anything at the outlet of the heater, **Otherwise it may cause burns or electric shock**.

•Do not excessively pull or bend the cable. If there is any damage to the cable or plug, cut off the power supply. Use the cable provided by ANZZI for replacement.

•Do not bend or squeeze the water inlet hose hard, <u>Otherwise it may lead to water leakage</u> or reduce the water inlet pressure.

•When power failure occurs during cleaning and the nozzle is not reset, do not push it back by hand. The nozzle will reset itself after the power supply is restored.

•If your ENVO Electric Bidet Seat has the following problems, please stop using it. Turn off power supply and supply stop.

——Pipe, hose or product leaks.

- ——Product breakage.
- ——The product has abnormal sound or peculiar smell.
- ——Smoke from the product.

• Do not use while bathing .

Do not place or store product where it can fall or be pulled into a tub or sink.

Do not place in or drop into water or other liquid.

Do not reach for a product that has fallen into water. Unplug immediately.

Strong magnets inside, if the body is equipped with a pacemaker and other auxiliary medical equipment, please do not use.

SAFETY PRECAUTIONS

• If you are not sure whether the product has been correctly grounded, please find a qualified electrician or sales and service personnel to check and confirm and make sure the power supply provides the matching voltage and power required by the product.

• Review all local plumbing and building codes related to products.

•Ensure that the water pressure of the water supply is 20PSI(138kPa)-80PSI(552kPa)

• The water supply pipe must be at least 1/2" copper pipe to provide the optimum flow for the normal operation of the product.

• Carefully check the new Electric bidet seat for damage.

•Use the water inlet hose supplied with the product.

• Do not stand on the Electric Bidet Seat or place any heavy objects on your ENVO Electric Bidet Seat .Otherwise, it may be damaged and cause personal injury or soak the floor.

• Don't expose the seat to the sun. Otherwise the product may turn yellow or fade.

• Do not install Electric Bidet Seat on moving vehicles such as RV's or boats.

• Don't lean against the toilet lid.

• When children, the old or disabled people use this toilet, they need to pay close attention. Adjust the appropriate toilet seat temperature for the people mentioned aboved, as well as the people having allergic skin.

• Do not use this Electric Bidet Seat when you are sleepy.

• Beware of low-grade burns. When sitting for a long time on the toilet seat, switch the toilet seat temperature adjustment to "OFF". When any of the following persons use a heated seat or warm air drying, someone should switch the toilet seat temperature adjustment to "OFF" and switch the drying air temperature to "Low".

-Young children, the aged and other users are unable set the temperature appropriately themselves.

The ill, physically disabled and others who do not have freedom of movement.
Those using any medicines that cause drowsiness (sleeping medicine or cold medicine), those who have been drinking heavily, anyone severely fatigued and anyone else liable to fall asleep.

• The Electric Bidet Seat requires fresh water only.


• Clean this product with a clean soft cloth. Do not use any irritating detergent to clean this product.

• Always unplug the plug from the outlet before removing the main unit.

• Any replacement of parts must only be performed by qualified service personnel.


• When the ambient temperature is freezing or not using the Electric Bidet Seat over an extended period of time, drain the water out of it and shut the supply stop off, and pull the electrical plug from the outlet.

NOTE: ENVO does not assume any responsibility for the losses caused by the improper installation and behavior listed above or other improper operations.

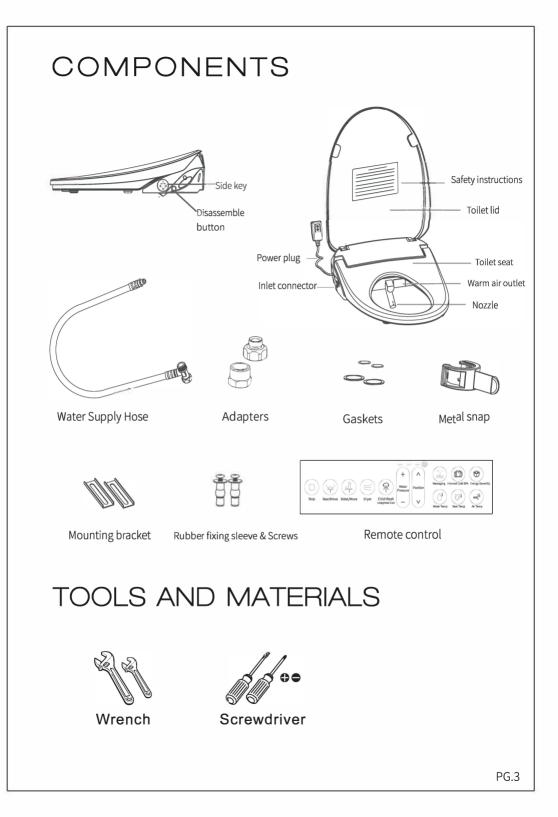

ELECTRIC BIDET SEAT


STEP 1 | INSTALL THE MOUNTING PLATE

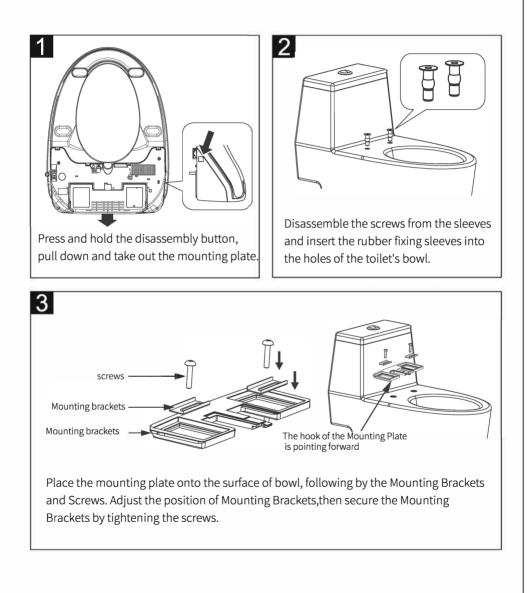


STEP 2 | INSTALL THE WATER SUPPLY HOSE

1

Make sure that the front of the water supply hose is equipped with an O-ring and the O-ring of the water supply hose is not **covered** with dust. Insert it straight into the Inlet connector at the side of the Electric Bidet Seat.

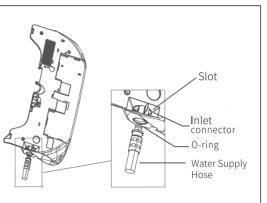


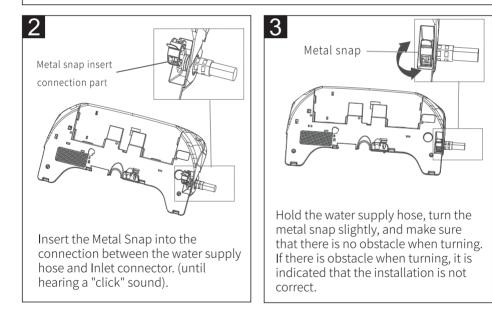


STEP 2 | INSTALL THE WATER SUPPLY HOSE

4

Slide the Electric Bidet Seat toward the mounting plate until you hear a "click" sound.

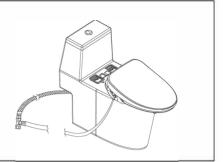

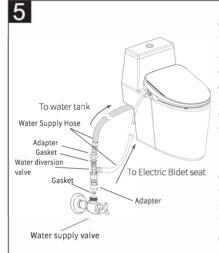

①Close the water supply stop. Disconnect the water supply hose of the toilet and the supply stop;


⁽²⁾For 3/8" compression outlet: Install compatible adapter with gasket to the outlet and secure it. Install the water diversion valve next. Then, install the other adapter with gasket to the water diversion valve and install the water supply hose to finish the installation;

③For 1/2" compression outlet: Install the water diversion valve to the outlet and secure it. Then, install the water supply hose to finish the installation;

④Be sure to tighten it during installation, otherwise it may cause water leakage.


6

Turn on the water supply valve. Check all connections at arrows for leaks.Retighten if necessary, but do not overtighten.

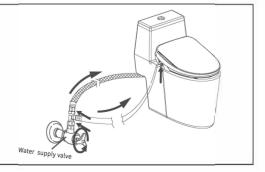

STEP 3 | INSTALL THE RETAINING SEAT

•The following picture shows the installation method.

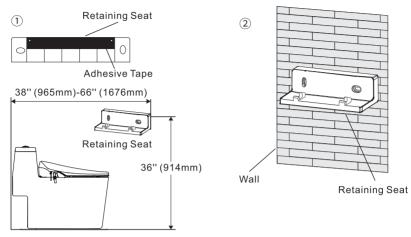

Select a smooth and even surface to ensure the control holder remains seated.
 Tear off the adhesive tape and press against wall.

NOTE: Clean the surface prior to affixing the control holder. Apply pressure firmly and evenly. Allow 15 minutes for adhesive to cure.

STEP 4 | BATTERY INSTALLTION OF REMOTE CONTROL

Install two new AAA batteries (not included) to the remote control.

The battery box is on the back of the remote controller. Push the lid down to open the battery box and install.

Note:

 
• Clean the battery and battery box contact before installing the battery.

• If the battery is dead or the product is not used for a long time, please remove the battery.

• Don't mix old and new batteries.

• Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel cadmium, nickel manganese) batteries.

• Don't throw used batteries into the garbage can, please throw them into your local battery collection center.



GUILDINGS FOR FIRST USE

1 Open water supply valve and check for any leaks.


⁽²⁾ Make sure the plug is plugged into the socket and the light is on. Press the "Test" button: The plug light should be off. Press the "RESET" button: The light of the plug should be on.

DO NOT USE IF "TEST & RESET" FAILS! CALL TECHNICAL SUPPORT FOR MORE ASSISTANCE.

3 When the Electric Bidet Seat is powered ON, you will hear an audible beep.


④ When the cover is lifted a small amount of water will flow to pre-wet the inner bowl.

⑤ After the user sits on the seat a small amount of water will flow to wash the nozzle.

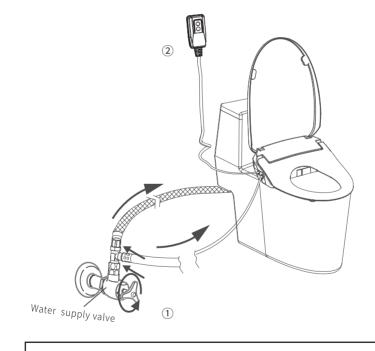

THE ELECTRIC BIDET SEAT' S FEATURES WILL NOT WORK UNLESS YOU' RE SITTING ON THE SEAT!

 OPERATION INSTRUCTION OF SIDE KEY



This key will stop any currently running function. Press and hold for 3 seconds (when not sat on) to turn OFF the power. Press and hold for 3 seconds again to turn the power back ON. Press and hold for 3 seconds (while sitting) to start the dryer function. The air temperature can be preset by the Air Temp key on the remote control.



While sitting, press this key to start the front wash. The runtime is 4 minutes. Press the key again to turn ON/OFF the reciprocating cleaning. The water temperature can be preset by the Water Temp key of the remote control.



While sitting, press this key to start the rear wash. The runtime is 4 minutes. Press the key again to turn ON/OFF the reciprocating cleaning. The water temperature can be preset by the Water Temp key of the remote control.

REMOTE CONTROL



Press this key to stop any function currently active. Press and hold for 5 seconds (while NOT sitting) to turn power ON/OFF.

Stop



Rear/Move

While sitting, press this key to start the Rear Wash.
The runtime is 4 minutes.
When Rear Wash is active:
Press this key again to turn reciprocating cleaning ON/OFF.
Press the "Massage" key to turn Massage ON/OFF.
Press the "Position /\ V" key to adjust the stream's position.
Press the "Water Temp" key to adjust the water temperature.

Press the "Water Pressure +/-" key to adjust the water pressure.



Bidet/Move

While sitting, press this key to start the Front Wash. The runtime is 4 minutes. When Front Wash is active: Press this key again to turn reciprocating cleaning ON/OFF. Press the "Massage" key to turn Massage ON/OFF. Press the "Position \land V" key to adjust the stream's position.

Press the "Water Temp" key to adjust the sitearn's position.

Press the "Water Pressure +/-" key to adjust the water pressure.



While sitting, press this key to start the "Dryer" function. The runtime is 4 minutes.

When the dryer function is ON press the "Air Temp" key to adjust the air temperature.



While sitting, press and hold for 2 seconds to start the "Child Wash" function. The runtime is 4 minutes. Low-level water pressure and temperature is locked to ensure a safe washing experience for the child.



Press this key during rinsing to select between 3 levels of water pressure. Except for Child Wash.

Press this key during rinsing to select between 3 stream positions. NOTE: When the reciprocating cleaning or drying function is ON, the nozzle position cannot be adjusted. This function is only applicable to Rear, Bidet, Hot/Cold Spa modes.



This function can only be activated when rinsing is ON (except for Hot/Cold Spa and Child Wash). When activated the water stream's pressure will alternate to achieve the massaging effect. Press the key to turn this function ON/OFF.



While sitting, press this key to start the "Hot / Cold Spa" function. The runtime is 4 minutes.

The water temperature will alternate between hot and cold. While rinsing pressing this key will turn ON/OFF the reciprocating cleaning mode.

Press the "Water Temp" key to adjust the water temperature. Press the "Water Pressure +/-" key to adjust the water pressure.



Press this key to turn Energy Saving mode on. The indicator light on the side panel will turn ON. When ON, the Energy Saving mode will automatically turn OFF when the user sits on the seat. It will automatically turn ON 10 minutes after the user leaves the seat. Press and hold for 3 seconds to turn ON/OFF the Night Light. The light will remain on for 10 minutes then automatically turn OFF.



Press this key to cycle between 4 different seat heating temperatures. Normal / Low / Medium/ High.

The more lights - - - on, the higher the temperature.



Press this key to cycle between 4 different air dryer temperatures. Normal / Low / Medium/ High.

The more lights - - - on, the higher the temperature. Press and hold for 3 seconds to turn ON/OFF the deodorizer.



Press this key to cycle between 4 different water temperatures. Normal / Low / Medium/ High.

The more lights **— — —** on, the higher the temperature. Press and hold for 3 seconds to turn ON/OFF the inner bowl pre-wetting function.



Press and hold the UP arrow key for 3 seconds when NOT seated. The nozzle will extend out and self-wash with water. While the nozzle is out you can use a brush to clean the nozzle. Press the "Stop" key to retract the nozzle.

CI FANING&MAINTENANCE

Precautions before maintenance:


① Make sure that the power is turned off.

② Do not allow water to enter the interior of the product during maintenance.

③ Make sure that the detergent is scrubbed to avoid sticking between the body of the product and the gap of the toilet.

Product surface maintenance

Please wring out the soft cloth after the soaking and use it again. If the surface of the product is dirty, use a neutral detergent for the cleaning.

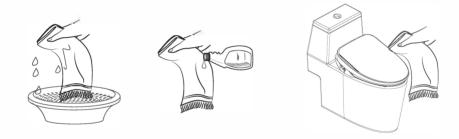

Nozzle cleaning and maintenance

key for 3 secends, the nozzle will protrude and start flushing. You can use Press the a brush to clean.

Note: Do not use a steel brush for cleaning.



Clean the filter screen

When the water pressure is too low to operate the toilet normally, please clean the filter screen by following steps.

STEP 1 | Close the supply stop.





STEP 2 | Remove the filter screen.Detach the Electric Bidet Seat from the mounting plate.Place the Electric Bidet Seat vertically.Remove the filter screen by a screwdriver.

STEP 3 | Clean the filter screen. Note: Do not use any detergent. Clean with fresh water only. Do not squeeze the filter screen during cleaning to avoid deformation of the filter screen.



STEP 4 | Reinstall the filter screen and turn on the supply stop. Reinstall the filter screen in the order of which it was removed. Note: After turning on the supply stop, check for leakage of all connections.

MARNING

- ANZZI is not responsible for any damage caused by the use of detergents containing chlorine (calcium hypochlorite).
- Always unplug before cleaning.

- Always TEST your detergent in an inconspicuous area before applying it to the entire product surface.
- Wipe and rinse the surface with water immediately after applying detergent. Rinse and dry the excessive spraying on surfaces.
- Do not soak the surface with detergent. Use a soft, wet sponge or cloth. Do not clean the surface with abrasive materials, such as brushes or scouring pads.

LONG-TIME PERSERVATION



ď

①Drain the water of the tank.

②Disconnect the power.

③Remove the batteries from remote control.

PRODUCT PARAMETERS

Product type	Instant heating		
Product model	TL-AZEB101B TL-AZEB103B TL-AZEB105B		
Product Name	Electric Bidet Seat		
Rated power	1080W		
Maximum power	1450W		
Rated voltage	110-120V~		
Rated frequency	60Hz		
Range of inlet water pressure	minimum necessary water pressure 0.07 MPa (when flowing), maximum water pressure 0.75Mpa (when stationary)		
Waterproof grade	IPX4		
Warm water temperature	Grade 4 (normal temperature - Maximum 39 ℃ ± 2 ℃)		
Warm air temperature	Grade 4 (normal temperature - Maximum 50 °C ± 5 °C)		
Seat temperature	ture Grade 4 (normal temperature - Maximum 39 °C \pm 2 °C)		

FUNCTION LIST

	TL-AZEB101B	TL-AZEB103B	TL-AZEB105B
Deodorization	_	0	\bigcirc
Photocatalyst	-	-	0
Cold and hot SPA	\bigcirc	0	\bigcirc
Child Spray	0	0	0
Bowl Pre-Rinsing	-	0	\bigcirc
Massaging	\bigcirc	\bigcirc	\bigcirc
Oscillating Spary	\bigcirc	\bigcirc	\bigcirc
Adjustable Position	\bigcirc	\bigcirc	\bigcirc
Heated Water	\bigcirc	\bigcirc	\bigcirc
Photosensitive night light	\bigcirc	\bigcirc	\bigcirc
Night light	\bigcirc	\bigcirc	\bigcirc
Energy saver	\bigcirc	\bigcirc	\bigcirc
Soft Closing lid	\bigcirc	0	0
Seat Pressure Sensor	\bigcirc	0	0
Dryer	0	0	0
Heated Seat	\bigcirc	0	\bigcirc
Self Cleaning Nozzle	\bigcirc	\bigcirc	\bigcirc
Front / Feminine Wash	\bigcirc	\bigcirc	\bigcirc
Rear Wash	\bigcirc	0	0

Note: "O" represents the configuration of this function. The function is based on the actual machine.

TROUBLE SHOOTING

THE ELECTRIC BIDET SEAT' S FEATURES WILL NOT WORK UNLESS YOU' RE SITTING ON THE SEAT!

Failure to Work

Make sure the outlet is powered. Make sure the plug is connected properly and making full contact.

Rinsing and Washing functions not producing water

Make sure the water supply isn't cut off. Make sure the water supply valve is open. Make sure there are no kinks or bends in the supply hose.

Weak Water Stream

Check the plumbing's water pressure. Check filter for dirt and debris. Make sure the nozzle isn't blocked and free from dirt and debris.

TROUBLE SHOOTING

Water Shuts-Off While Cleaning

It's normal for the cleaning functions to turn off after 4 minutes.

Water is not Hot

Make sure the Water Temperature is set to low or normal.

Air Dryer is not Hot

Make sure the Air Temperature is set to low or normal.

Air Dryer Shuts Off

It's normal for the air dryer to turn off after 4 minutes.

Seat is not Hot

Make sure the seat heater isn't set to low or OFF. Check to make sure if the seat isn't in Energy Saving mode.

