

IMPORTANT INSTRUCTIONS FOR FAN-FORCED HEATER USE

Please note: The TH106 comes factory set in baseboard mode (even though the Honeywell Owner’s Guide incorrectly reflects a factory setting of fan mode). If using the TH106 to control a fan-forced heater, you must change the setting for switch 3.

To change the setting from baseboard to fan heater: The configuration switches are on the back of the thermostat cover. Change factory setting for switch 3 to the right, or ‘ON’ position (5 minute cycle length). See page 2 of your thermostat Owner’s Guide, Section ③ Configuration, for more detailed information on switch settings.

