

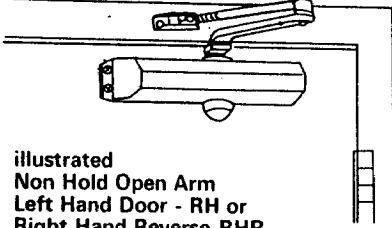
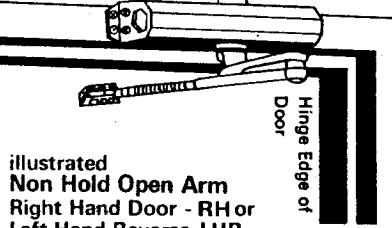
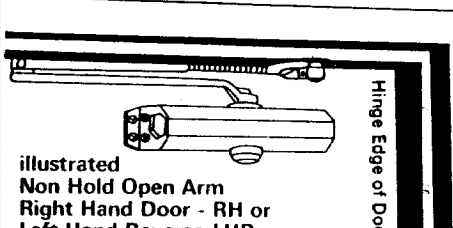
CAL-ROYAL

PRODUCTS, INC.

Surface Mounted
Interior Door Closer
Model: 700 Series
Size : 2, 3, 4, 5.
No Hold-Open/Hold-Open
Optional Back Check

Installation Instructions

700 SERIES

<p>Regular Arm Installation Closer installs on PULL/HINGE side of door.</p>  <p>illustrated Non Hold Open Arm Left Hand Door - RH or Right Hand Reverse-RHR See Page 2</p>	<p>Top Jamb Installation Closer installs on frame on PUSH/STOP side of door.</p>  <p>illustrated Non Hold Open Arm Right Hand Door - RH or Left Hand Reverse-LHR See Page 3</p>	<p>Parallel Arm Installation Closer installs on PUSH/STOP side of door.</p>  <p>illustrated Non Hold Open Arm Right Hand Door - RH or Left Hand Reverse-LHR See Page 4</p>
---	---	---

CLOSER ADJUSTMENT

CLOSING CYCLE

NOTE : Closing arcs ("CLOSE" and "LATCH") are controlled by two(2) separate speed adjusting valves adjust the CLOSING speed first, then adjust the LATCHING speed.

- "CLOSING" speed adjustment is accomplished by full rotations of the speed adjusting valve.
 - Turn the speed adjusting valve **CLOCKWISE** for a **SLOWER** CLOSE arc closing speed.
 - Turn the speed adjusting valve **COUNTER-CLOCKWISE** for a **FASTER** CLOSE arc closing speed.
- "LATCH" speed adjustment is accomplished by full rotations of the speed adjusting valve.
 - Turn the speed adjusting screw **CLOCKWISE** for a **SLOWER** Latch arc closing speed.
 - Turn the speed adjusting screw **COUNTER-CLOCKWISE** for a **FASTER** Latch arc closing speed.

CAUTION!! Do not turn speed adjusting valve more than two(2) full turns counter-clockwise from its factory set position, as two speed adjusting valves could become dislodged from the door closer body, resulting in the loss of internal fluid and failure of the device.

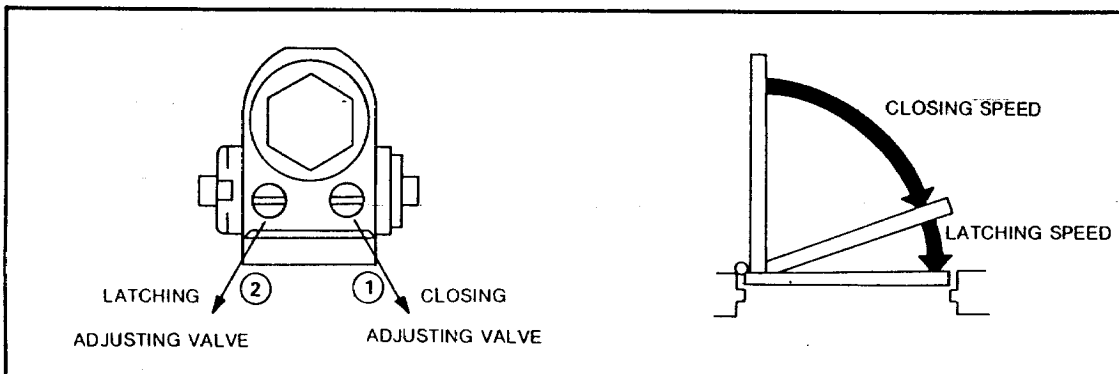


CHART TO DETERMINE HAND OF DOOR

