Ш

S

Ш

 α

 α


Ш

S

Percy® **Single Control Monoblock** and Vessel Faucet

Pixie Handle Monoblock - Model D3510510C Loop Handle Monoblock - Model D3510512C Pixie Handle Vessel - Model D3510515C Loop Handle Vessel - Model D3510517C

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

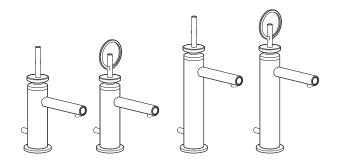

RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.








Adjustable Wrench

Flat Blade Screwdriver

ROUGHING-IN DIMENSIONS:

For reference

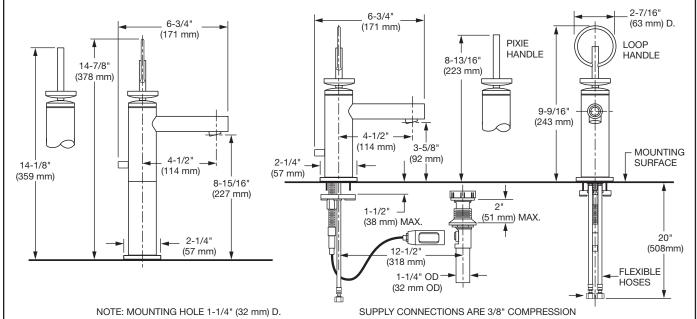

In the United States:

Piscataway, New Jersey 08855 Attention: Director of Customer Care

information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

www.DXV.mx


Product names listed herein are trademarks of AS America, Inc.

M965708 Rev. 1.0 (5/17)

1 INSTALL FAUCET


CAUTION Turn off hot and cold water supplies before beginning.


- Seat O-RING SEAL (1) into under side of FAUCET BASE (2).
- Feed FAUCET SUPPLIES (3), MOUNTING STUD (4) and DRAIN CABLE ASSEMBLY (8) through the mounting hole of lavatory or mounting surface. Fig. A.
- From below, push GASKET (7) and RETAINING WASHER (5) onto MOUNTING STUD (4). Secure Faucet with MOUNTING NUT (6), pulling faucet to front of sink, so SUPPLIES (3) rests against mounting hole. Before final tightening, make sure collar on MOUNTING NUT (6) is seated into RETAINING WASHER (5). Fig. B.
- Adjust Faucet so that it is centered. Tighten MOUNTING NUT (6) to complete faucet mounting.

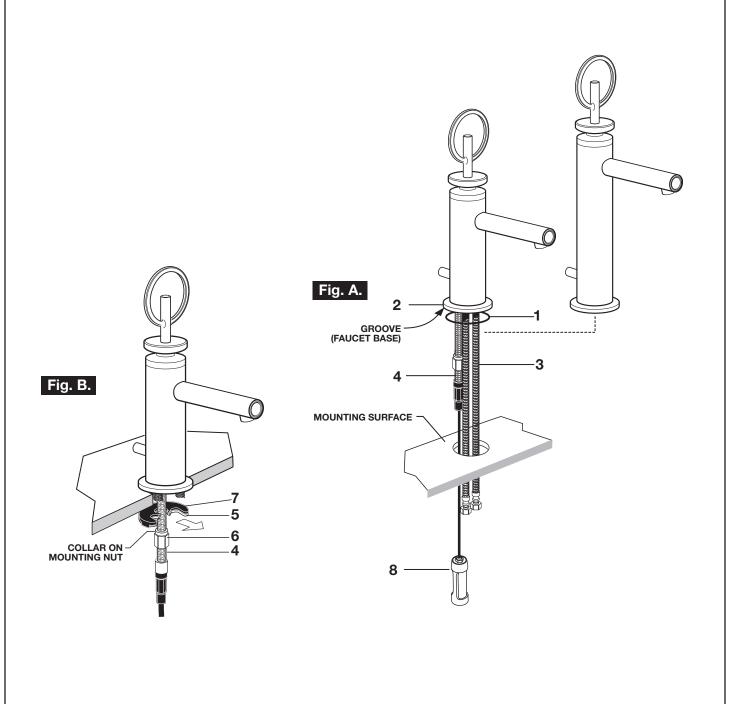

2 POP-UP DRAIN

- Remove CLEAR PLASTIC COVER (1). Fig. A.
- Remove FOAM SPACER (2) from under DRAIN POP-UP (3). Fig. A.
- Tighten TAILPIECE (4) on DRAIN BODY before installing DRAIN BODY. Fig. B.

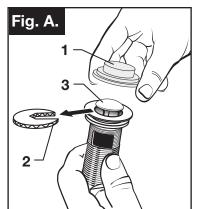

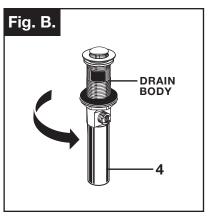



REMOVE MOUNTING WASHERS AND LOCKNUT

- Thread LOCKNUT (1) counter-clockwise and remove from drain body. Remove PLASTIC WASHER (2) and pull off RUBBER CONE WASHER (3) Fig. A.
- Drop DRAIN BODY (4) through sink drain hole. Make sure WHITE FOAM GASKET (5) is under flange of DRAIN BODY (4). Fig. B.

Note: No plumber's putty or caulk is required.

• The CABLE ATTACHMENT POINT (6) must face towards the rear of the SINK. Fig. B.

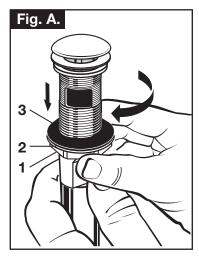


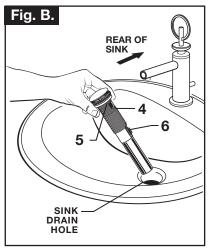

4 ATTACH DRAIN FROM BELOW FIXTURE


 From under side of SINK install RUBBER CONE WASHER (3),
 PLASTIC WASHER (2) and LOCKNUT (1) onto DRAINBODY (4).

Note: The CABLE ATTACHMENT POINT (5) must face towards the rear of the SINK.

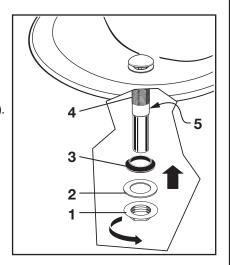


5 TIGHTEN LOCKNUT


• Tighten LOCKNUT (1) firmly with Adjustable Wrench or Channel Locks.

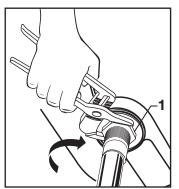

6 FLANGE GASKET AND POP-UP KNOB

- Check DRAIN FLANGE in SINK to ensure that WHITE FOAM GASKET (3) is fully compressed and not visible. Fig. A.
- POP-UP KNOB (1) must be fully down. Fig. B.

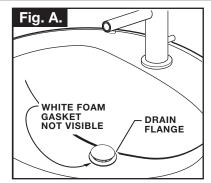


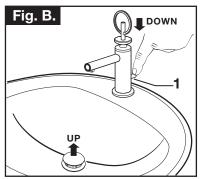

7 ATTACH CABLE CONNECTOR

- Thread CABLE CONNECTOR (1) clockwise onto DRAIN BODY CONNECTION (2) and hand tighten. Fig. A.
- Your new POP-UP DRAIN installation is now complete. **Fig. B.**


Note: Tailpeice on pop-up drain is 1-1/4" (32 mm) O.D. **Fig. B.**

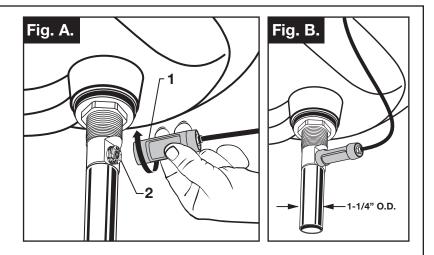

8 CHECK OPERATION OF POP-UP

Operate LIFT KNOB (1) to verify that STOPPER (2) opens and closes.

Note: If STOPPER **(2)** does not open and close properly then refer to the "troubleshooting section" of these instructions.

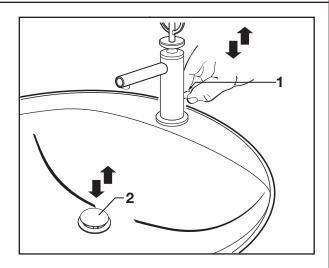


9 MAKE WATER SUPPLY AND WASTE CONNECTIONS

- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies.
 Connection on fitting supplies are 3/8" (10 mm) compression. Connect SUPPLY SUPPLY (1) (Marked with a Red Band) to the Hot wall valve and SUPPLY HOSE (2) (Marked with a Blue Band) to the Cold wall valve.
- Faucet supplies are 20" long from faucet base.

Note: If additional supply length is required, installer must purchase additional parts separately.

Important: If SUPPLY HOSES (1, 2) are to long, loop as illustrated to avoid kinking.

 Connect 1-1/4" O.D. (32 mm) tailpiece on POP-UP DRAIN to waste outlet.

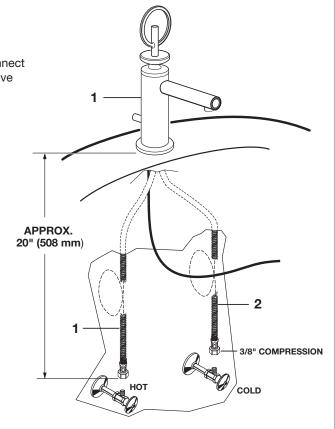


10 TEST INSTALLED FITTING

- With HANDLE (1) in OFF position, remove AERATOR (3). Turn on WATER SUPPLIES (2) and check all connections for leaks.
- Operate HANDLE (1) to flush water lines thoroughly. Replace AERATOR (3).

CHECK DRAIN CONNECTIONS

- Operate POP-UP KNOB (4) and fill lavatory with water. Check that DRAIN STOPPER (5) makes a good seal and retains water in sink. If DRAIN STOPPER (5) does not seal properly, please refer to Troubleshooting section in these instructions.
- Release POP-UP KNOB (4) down and check all drain connections and "P" trap for leaks. Tighten if necessary.

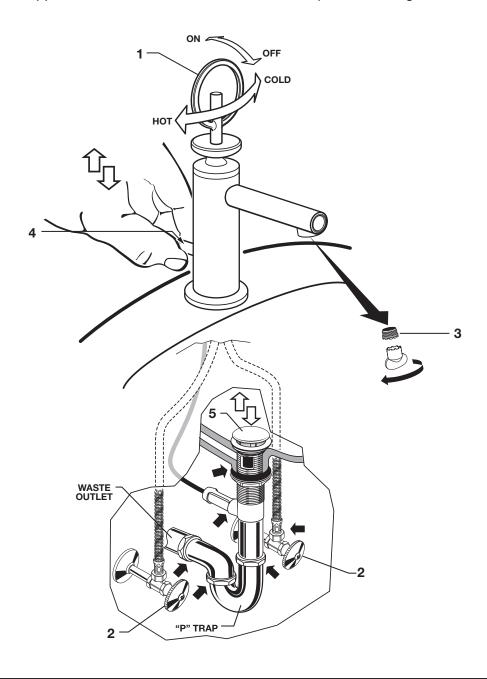

11 CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

Speed Connect® Drain Troubleshooting Guide

If sink does not hold water even though Stopper is in the "down" position:

• Follow CABLE ADJUSTMENT PROCEDURE.

If Stopper does not raise up fully or sink drains too slowly:

• Follow CABLE ADJUSTMENT PROCEDURE.

If you need to remove the Stopper:


• Follow STOPPER REMOVAL PROCEDURE.

If you would like the ability to remove your Stopper simply by lifting it out of the drain:

• Follow STOPPER INSTALLATION PROCEDURE for "Unlocked" mode.


CABLE ADJUSTMENT PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" in the illustration. Fig. B.
- Use a small screwdriver to rotate the Cam in the clockwise direction as far as it will go. At this point the Stopper should be in the UP position. **Fig. B, C.**
- Push DOWN on the Lift-Knob to make sure it is fully down. Fig. C.
- Re-attach the Cable to the Drain Body Connection (2) by threading the Cable Connector (1) clockwise onto the Drain Body Connection (2) and hand-tighten. Fig. A.

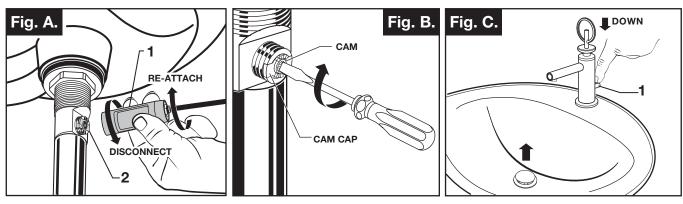

STOPPER REMOVAL PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" and "Cam Cap" in the illustration. Fig. B.
- Use fingers or small screwdriver under either side of the Cam Cap to pry it out from the Drain. Fig. D.
- Remove the Cam by pulling it straight out while wiggling gently to loosen the Rubber Seal. Fig. E.
- The Stopper can now be removed by lifting it out of the Drain. Fig. F.

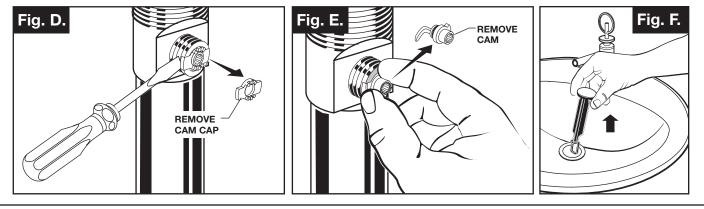

STOPPER INSTALLATION PROCEDURE


The Stopper can be installed two ways, "Locked" Mode (Stopper cannot be removed) or "Unlock" Mode (Stopper is removable).

LOCKED MODE:


- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. **Fig. G.**
- To install the stopper in "Locked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the rear of the Sink. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. G.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. **Fig. J.**
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in Troubling Shooting Guide to complete installation. Stopper will be in "Locked" mode and not be removable.

UNLOCKED MODE:


- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. **Fig. H.**
- To install the stopper in "Unlocked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the front of the Sink. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. H.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in "Troublingshooting Guide" to complete installation. Stopper will be in "Unlocked" mode and removable.

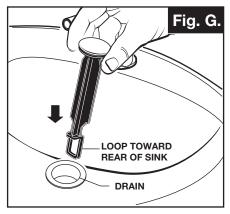


Locked Mode (Vandal Proof)

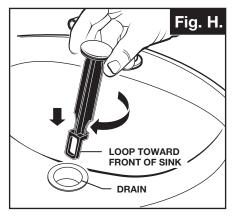

Unlocked Mode

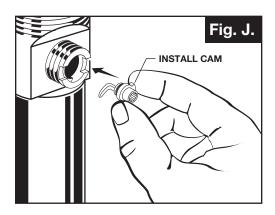

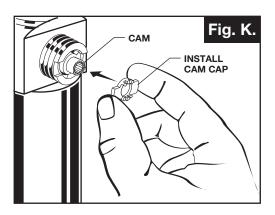

M965708 Rev. 1.0 (5/17)

M964631-YYY0A

M964633-0070A

LOOP HANDLE KIT (D3510512C, D3510517C)

Percy®

Single Lever Monoblock and Vessel Faucets

MODEL NUMBERS

Monoblock

Pixie Handle

D3510510C

Loop Handle

D3510512C

Vessel

Pixie Handle


D3510515C

Loop Handle

D3510517C

Replace the "YYY" with appropriate finish code

POLISHED CHROME	100
BRUSHED NICKEL	144

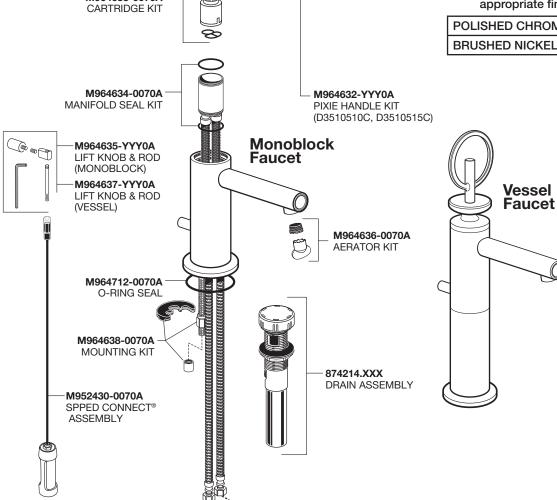

M921935-0070A