Instructions

75-62511 – Chrome 75-62511-BN – Brushed nickel




Certifications






Two Handle Lavatory Faucet with Pop-up

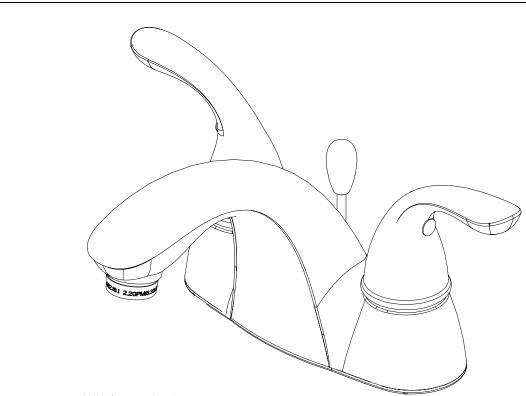

*Image may vary slightly from actual product

Tools Required

 Adjustable Wrench Groove Joint Pliers Pipe Wrench Phillips Screwdriver





If you solder the joints during installation of the faucet, the seats, cartridges, and washers must be removed before using a flame or the warranty will be voided on these parts.

Protect your eyes with safety glasses when cutting or soldering water supply lines.

Cover the sink drain to avoid losing parts.

Things You May Need

Installations may vary depending on how the previous faucet was installed. Supplies necessary for the installation of your faucet are not all included; however, they are available wherever plumbing supplies are sold.

Maintenance

Your new lavatory faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

Important Points

Prior to beginning installation, turn off the hot and cold water lines, then turn on the old faucet to release built-up pressure. When installing your new faucet, turn the connector nuts finger tight, then use one wrench to hold the fitting and a second wrench to tighten the nut. Connections that are too tight will reduce the integrity of the system.

Wrap all threaded connections with PTFE pipe tape available at your local hardware or plumbing supply store. Always wrap in a clock-wise direction.

Contact Us

For Customer Service please call 877-319-3757, or go to homewerksww.com.

Instructions

75-62511 – Chrome 75-62511-BN – Brushed nickel



Certifications







CALIFORNIA LEAD PLUMBING LAW

Two Handle Lavatory Faucet with Pop-up


Preparation and Assembly

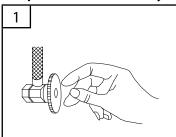

Locate water supply inlet and shut off water supply valve. These are usually found under the sink or near the water heater. Remove old faucet. Clean and dry sink surface area where new faucet will be mounted.

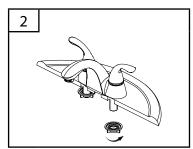


Place new faucet through holes in top of sink. From underside, slide washers onto threaded rods. Secure with washer and nuts.

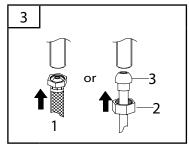


Connect water supply lines.
(1) Use 1/2" IPS faucet supply lines or (2) use coupling nuts (not supplied) with (3) ball-nose risers (not included).
Turn water supply or shut-off valve back on and check for leaks. If leaks occur, gently tighten the faucet connections.


Installation: Pop-Up Drain

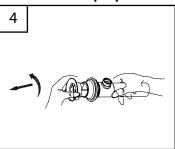


Remove flange from pop-up main body. Leave large black washer (not included with plastic pop-ups) and nut on drain body.

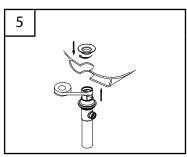


Add PTFE pipe tape to the threads on the drain body. Add Plumbers Putty to bottom of flange per manufacturers directions. Insert threaded end of drain body up through drain hole and attach flange to body with ball rod pointing to the rear of the sink. Tighten the flange.

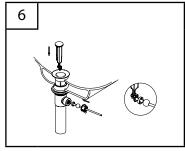


Unscrew the nut from the pop-up body and take off the spring clip from the ball rod (Please note: The white packing ring must remain on the ball rod) Place the nut on the ball rod (Insert the ball rod onto the side hole of drain, slide the nut on and tighten securely.

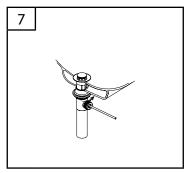

Thread locknut from underside of sink until rubber washer seats securely inside opening of sink. Tighten locknut. Wipe off excess putty. If model has plastic wing nut, tighten securely. If nut is brass, tighten with a wrench

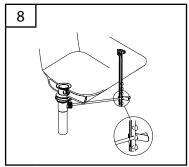

Place one end of spring clip on end of ball rod. Insert rod across and through hole in lift rod strap. Secure other end.

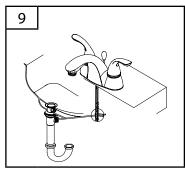

Insert bottom of lift rod into hole at top of pop-up strap. Tighten with thumb screw.

Instructions

75-62511 – Chrome 75-62511-BN – Brushed nickel



Certifications




£



Two Handle Lavatory Faucet with Pop-up

Preparation and Assembly cont.

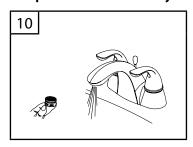

Important: After installation is completed, remove aerator. Turn on water supply and allow both hot and cold water to run for at least one minute each. While water is runner, check for leaks. Replace aerator. Tighten nuts slightly to stop minor leaks. If problems persist, refer to troubleshooting chart.

Troubleshooting

PROBLEM: Leaks underneath handle.

CAUSE: Bonnet has come loose or O-ring on cartridge is dirty or twisted.

- 1. Move the handle to the off position. Remove the index button. Unscrew the handle screw and remove the handle (Diagram A).
- Tighten the bonnet by turning it clockwise (Diagram B). Move the
 cartridge stem to the on position. The leak should stop draining out from
 around the cartridge stem.
- around the cartridge stem.

 3. If the leak does not stop, shut off the water supply. Remove the bonnet by turning it counter-clockwise. Lift out the cartridge valve. Inspect the larger O-ring on the cartridge bonnet. If it is damaged, replace the cartridge by calling customer service.
- 4. Position the cartridge back into the faucet body (Diagram C). Make sure the ridges on the two sides of the cartridge bonnet fit into the grooves on the two sides of the faucet body. Tightly screw the bonnet onto the faucet body.
- 5. Re-install the handle.

PROBLEM: Water does not completely shut off.

CAUSE: Rubber valve seat is dirty, stuck or broken.

ACTION

Ε

 Shut off the cold water supply. If leak stops, the problem is on the cold side. If leak continues, the problem is on the hot side. Shut off the hot water supply to determine if both the cold and the hot sides have problems.

- Remove the handle on the problem side. Loosen the bonnet by turning it counter-clockwise (Diagram D). Lift out the cartridge assembly.
- Replace the cartridge in the faucet body. Make sure that the ridges on the two sides of the cartridge bonnet fit into the grooves on the two sides of the faucet body (Diagram E). Tightly screw the bonnet onto the faucet body.
- 4. Re-install the handle.

PROBLEM: Faucet leaks under aerator.

CAUSE: Aerator incorrectly fitted.

 
ACTION:

- Unscrew the aerator by turning it clockwise (Diagram F). Inspect the black rubber packing inside the aerator. The rubber packing should be flat.
- 2. Screw the aerator onto the spout end and tighten.

 
PROBLEM: Improper water pattern.

 
CAUSE: Aerator dirty or parts inside aerator are improperly installed. ACTION:

 
- 1. Remove the aerator from the spout end by turning it clockwise.
- 2. Gently flush the small parts inside the aerator to clear away any debris.
- 3. Re-install the small parts as shown in the exploded diagram (Diagram G). Metal screens must be flat and plastic supporter must be straight.
- 4. Screw the aerator onto the spout end and tighten.

 


 












Specifications



Certifications




75-62511 – Chrome 75-62511-BN – Brushed nickel

Physical Characteristics

- Description: 2 lever handle lavatory faucet with 4" center set,
 1/4-turn ceramic cartridges, brass waterways, and pop-up
- Max. Flow Rate: 2.2 GPM (8.3 LPM)
- ASME A112.18.1/CSA B125 Certified
- Meets ANSI/NSF 61-9 Low Lead Requirements
- This product complies with 0.25% weighted average lead content on wetted surfaces
- Total Weight of Item: 1697.55g

No.	Part Description	Material
1	Handle	C37700+ABS+PC
2	Set screw	S.S.
3A	Hot index (Red)	NBR N6501
3B	Cold index (Blue)	NBR N6501
4	Connector	Steel Q235A
5	Inverter	POM M90
6	Bonnet	Zinc alloy EZDA 3#
7	Washer	POM M90
8A	Hot cartridge	Brass C37700+POM M90+S.S.302+ H65+Silica get+Ceramic
8B	Cold cartridge	
9	Escutcheon	Zinc ZZnA14
10	Body assembly	Brass C37700+Brass 27000
11	Aerator assembly	EPDM E7008F
12		Neoperl
13		Brass C37700
14	Putty guard	Zinc ZZnA14
15	Screw	S.S.304
16	Base plate	PP20C
17	Mounting nut	ABS PA727
18	Lift rod assembly	Brass C37700
19		S.S.304
20	Pop-up assembly	Plastic

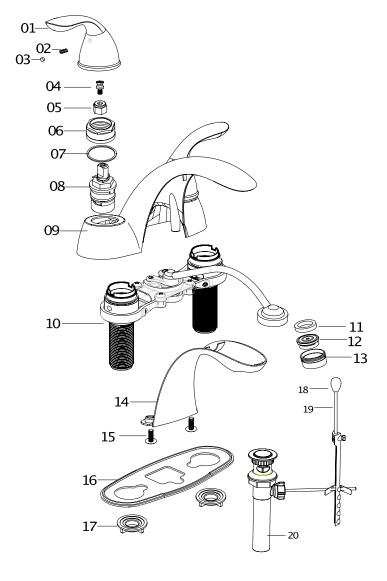

Rough-In

75-62511 – Chrome 75-62511-BN – Brushed nickel



Certifications



Two Handle Lavatory Faucet with Pop-up

