



Exploded View of Wash System

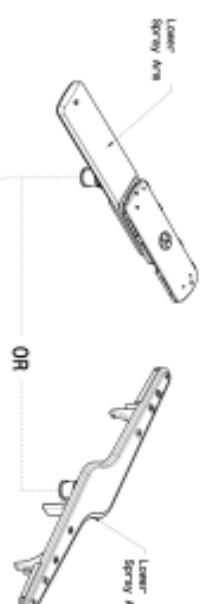

Standard Dry Air Flow

When the control advances to the "dry" portion of the cycle, a linear actuator retracts a valve, which opens a vent path through the console into the kitchen. The heated, moist air leaving the dishwasher through the console vent causes drier air to be drawn into the unit by way of intake vents located at the bottom of the door. The water on the dishes is evaporated into drier air and the venting process continues. The heating element is turned **ON** and **OFF** during the entire drying cycle.

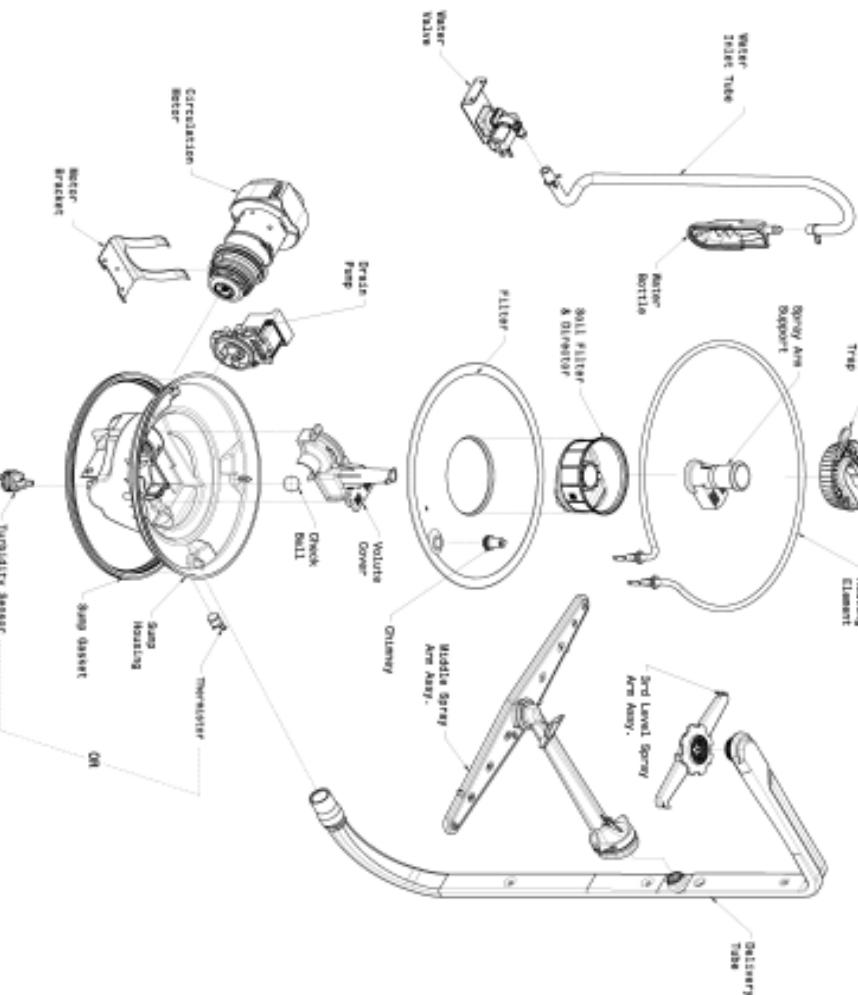

Detergent and Rinse Aid Dispenser

The detergent and rinse aid dispenser is a one piece component consisting of a molded detergent cup and a built-in rinse aid dispenser.

The detergent cup has a spring loaded cover and the rinse aid dispenser has a removable cover.

Liquid rinse aid is added to the dispenser up to the fill line indicator. The amount of rinse aid released can be adjusted by turning the arrow indicator from one, being the least amount, to four, being the greatest amount.

- shut off electricity to dishwasher,
- remove outer door panel assembly,
- disconnect wiring to the actuator,
- remove the six screws,
- replace the dispenser,
- replace and reinstall screws,
- rewire actuator.

Tub and Door Seal

The door seal is pressed into the tub channel for an interference fit. Center the gasket (marked on back) at the tub top center and press in place



Pump Assembly

The pump assembly is driven by a synchronous motor. Rotation is in the counterclockwise direction at 3600 RPM. The motor drives a pump which supplies 100 percent filtered water at a rate of approximately 12 GPM to one spray arm at a time. The spray arm's operation is altered by small "pauses" of the motor during the wash cycle.

Draining is accomplished by using a small separate synchronous drain pump mounted to the side of the sump. The drain pump is connected to the main pump by a small rubber hose. The drain check valve is located at the discharge end of the drain pump. The drain hose

is attached by a worm gear clamp to the discharge end of the drain pump.

The drain hose must have a loop at a **minimum height of 32 inches** in order to insure proper drainage.

The main pump can easily be removed by disconnecting the upper spray arm supply tube hose, the drain pump connector hose, the wiring harness connections made at the circulation motor, the water heat thermistor located on the bottom of the pump and rotating the four sump retainers toward the middle of the sump.

Product Specifications

Electrical

Rating 120 Volts, 60Hz
Separate Circuit, 15 amp min.- 20 amp max.
Motor (Amps) 1.8
Heater Wattage 900
Total Amps (load rated) 10.0
TempAssure 140°F ±5°F (60°C ±3°C)
TempBoost 145°F ±5°F (63°C ±3°C)
Sanitize 150°F ±5°F (66°C ±3°C)
Hi-Limit Thermostat 200°F (93°C)

Voltage checks of the heater should be made in the dry portion of the service test mode.

900 Watt Heater

Refer to the cycle chart on the reverse side to determine when the heater is on during the wash cycle. The heater cycles **ON** and **OFF** for brief periods during the drying cycle.

Trouble Shooting Tips

A WARNING

Personal Injury Hazard

Always disconnect the dishwasher from the electrical power source before adjusting or replacing components.

Symptom	Check the Following	Remedy
Dishwasher will not operate when turned on.	1. Fuse (blown or tripped). 2. 120 VAC supply wiring connection faulty. 3. Electronic control board defective. 4. No 12 VAC power to control. 5. Motor (inoperative). 6. Door switch (open contacts). 7. Door latch not making contact with door switch. 8. Touch pad circuit defective. 9. No indicator lamps illuminate when START or OPTIONS are pressed.	1. Replace fuse or reset breaker. 2. Repair or replace wire fasteners at dishwasher junction box. 3. Replace control board. 4. Replace control board. 5. Replace motor/impeller assembly. 6. Replace latch assembly. 7. Replace latch assembly. 8. Replace console assembly. 9. Replace console assembly.
Motor trips out on internal thermal overload protector.	1. Improper voltage. 2. Motor winding shorted. 3. Glass or foreign items in pump.	1. Check voltage. 2. Replace motor/impeller assembly. 3. Clean and clear blockage.
Motor hums but will not start or run.	1. Motor (bad bearings). 2. Motor stuck due to prolonged non-use.	1. Replace motor assembly. 2. Rotate motor impeller.
Dishwasher runs but will not heat.	1. Heater element (open). 2. Electronic control board defective. 3. Wiring or terminal defective. 4. Hi-Limit thermostat defective.	1. Replace heater element. 2. Replace control board. 3. Repair or replace. 4. Replace thermostat.
Dishwasher cover will not latch or open.	1. Latch mechanism defective. 2. Electronic control board defective. 3. Wiring or terminal defective. 4. Broken spring(s). 5. Defective actuator.	1. Replace dispense. 2. Replace control board. 3. Repair or replace. 4. Replace dispense. 5. Replace dispense.
Dishwasher will not fill with water.	1. Water supply turned off. 2. Defective water inlet fill valve. 3. Check fill valve screen for obstructions. 4. Defective float switch. 5. Electronic control board defective. 6. Wiring or terminal defective. 7. Float stuck in "UP" position.	1. Clear restrictions. 2. Replace control board. 3. Replace pump. 4. Check for blockage, clear. 5. Replace pump assembly. 6. Repair or replace. 7. Clean float.
Dishwasher water siphons out.	1. Drain hose (high) loop too low. 2. Drain line connected to a floor drain not vented.	1. Turn water supply on. 2. Replace water inlet fill valve. 3. Disassemble and clean screen. 4. Repair or replace. 5. Replace control board. 6. Repair or replace. 7. Clean float.
Detergent left in dispenser.	1. Detergent allowed to stand too long in dispenser. 2. Dispenser wet when detergent was added. 3. Dispenser held closed or blocked by large dishes. 4. Improper incoming water temperature to properly dissolve detergent. 5. See "Detergent cover will not open."	1. Detergent allowed to stand too long in dispenser. 2. Dispenser wet when detergent was added. 3. Dispenser held closed or blocked by large dishes. 4. Improper incoming water temperature to properly dissolve detergent. 5. See "Detergent cover will not open."

SERVICE DATA SHEET

P/N: 807027901

FRIGIDAIRE Electronic Series

This information is intended for use by persons having electrical and mechanical training and a level of knowledge of these subjects generally considered acceptable in the appliance repair trade. Electrolux Home Products North America cannot be responsible, nor assume any liability, for injury or damage of any kind arising from the use of this Service Data Sheet.

Color Code

BK.....Black
BU.....Blue
PK.....Pink
R.....Red
BK.....Red/Black
RY.....Red/Yellow
VIO.....Violet
W.....White
Y.....Yellow

Operation

To start... Close and latch door. Press START/CANCEL pad.
To delay start... Close and latch door. Press DELAY START pad to select desired delay time.
To select a new cycle or option... Press desired cycle and/or option pad. The indicator lights will change. Press START/CANCEL within 15 seconds to begin cycle.
To cancel cycle... Press START/CANCEL. Dishwasher will drain for 90 seconds, then shut off.
For controls lock... Press and hold the AIR DRY pad for 8 seconds to lock, repeat to unlock.

Water/Service Test

The water/service test is a special function initiated from the power failure mode or idle mode.


While in Power Failure Mode, simultaneously press the AIR DRY and START/CANCEL pads for 1/2 second. While in Idle Mode, simultaneously press the HI-TEMP WASH and START/CANCEL pads for 3 seconds.

The dishwasher will then step through the test cycle per the chart. Pushing the START/CANCEL pad will advance the dishwasher to the next step.


STEP	TOTAL TIME (SEC)	WATER VALVE	CIRCULATION MOTOR	DRAIN MOTOR	HEATER	DISPENSER	VENT	WASHING LED	SANITIZED LED	DRYING LED	CLEAN LED
1 FILL/DISPENSER	60	1	0	0	0	1	1	1	0	0	0
2 FILL	27	1	0	0	0	1	1	1	0	0	0
3 WASH/HEAT/DISP.	60	0	1	0	1	1	1	1	0	0	0
4 PAUSE	0.4	0	0	1	0	1	1	1	0	0	0
5 WASH/HEAT	75	0	1	0	1	0	1	1	0	0	0
6 WASH/HEAT/DISP.	60	0	1	0	1	1	1	1	0	0	0
7 DRAIN	90	0	0	1	0	0	0	0	0	0	0
8 DRY	90	0	0	1	X	0	0	0	1	0	0
TOTAL	480										
		X - denotes selectable option									

CLEANED stays on until door is opened or cycle is started.

Cycle Selection Options

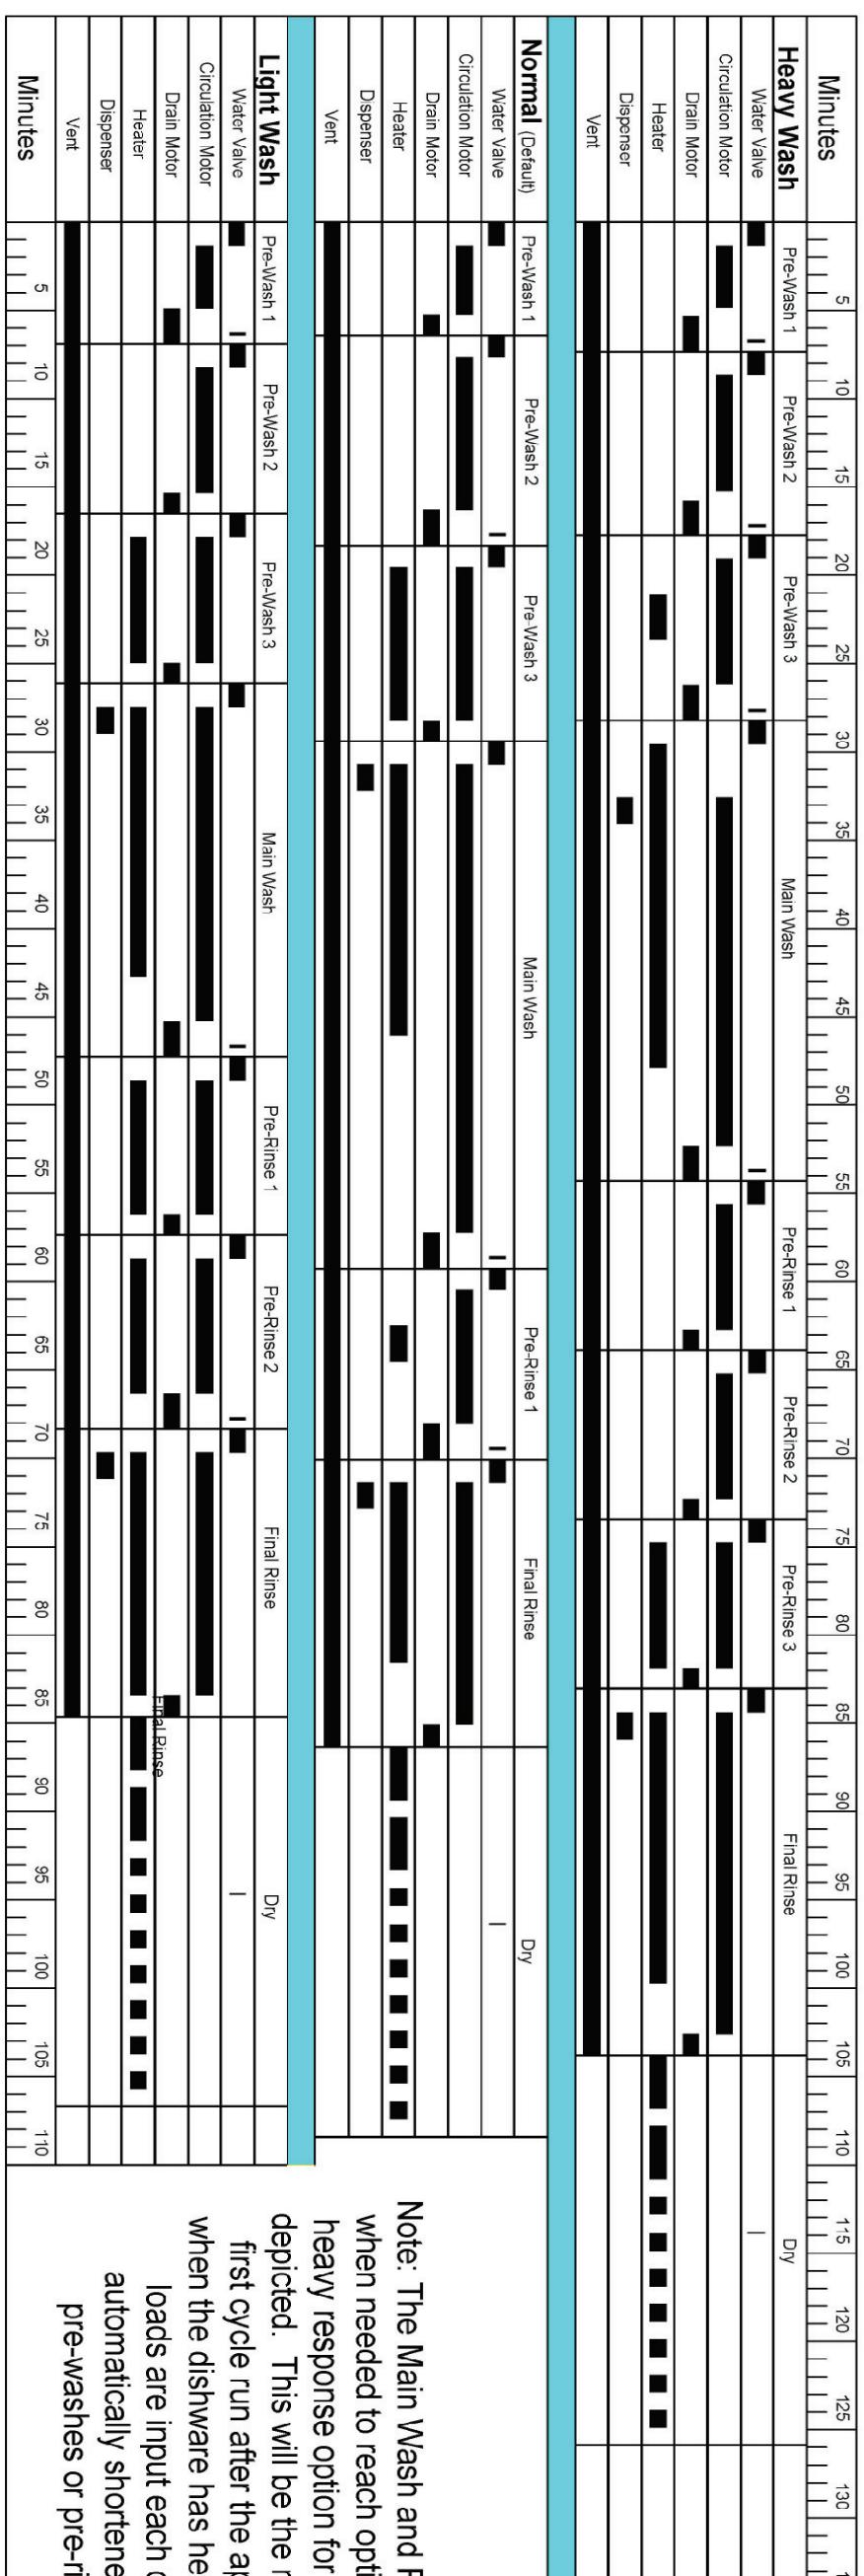

Note: The Main Wash and Final Rinse may be lengthened when needed to reach optimal wash temperatures. The heavy response option for each of these three cycles is depicted. This will be the response if any of these is the first cycle run after the application of power and also when the dishware has heavy soil loading. If lighter soil loads are input each of these cycles would be automatically shortened by eliminating as many pre-washes or pre-rinses as is appropriate.

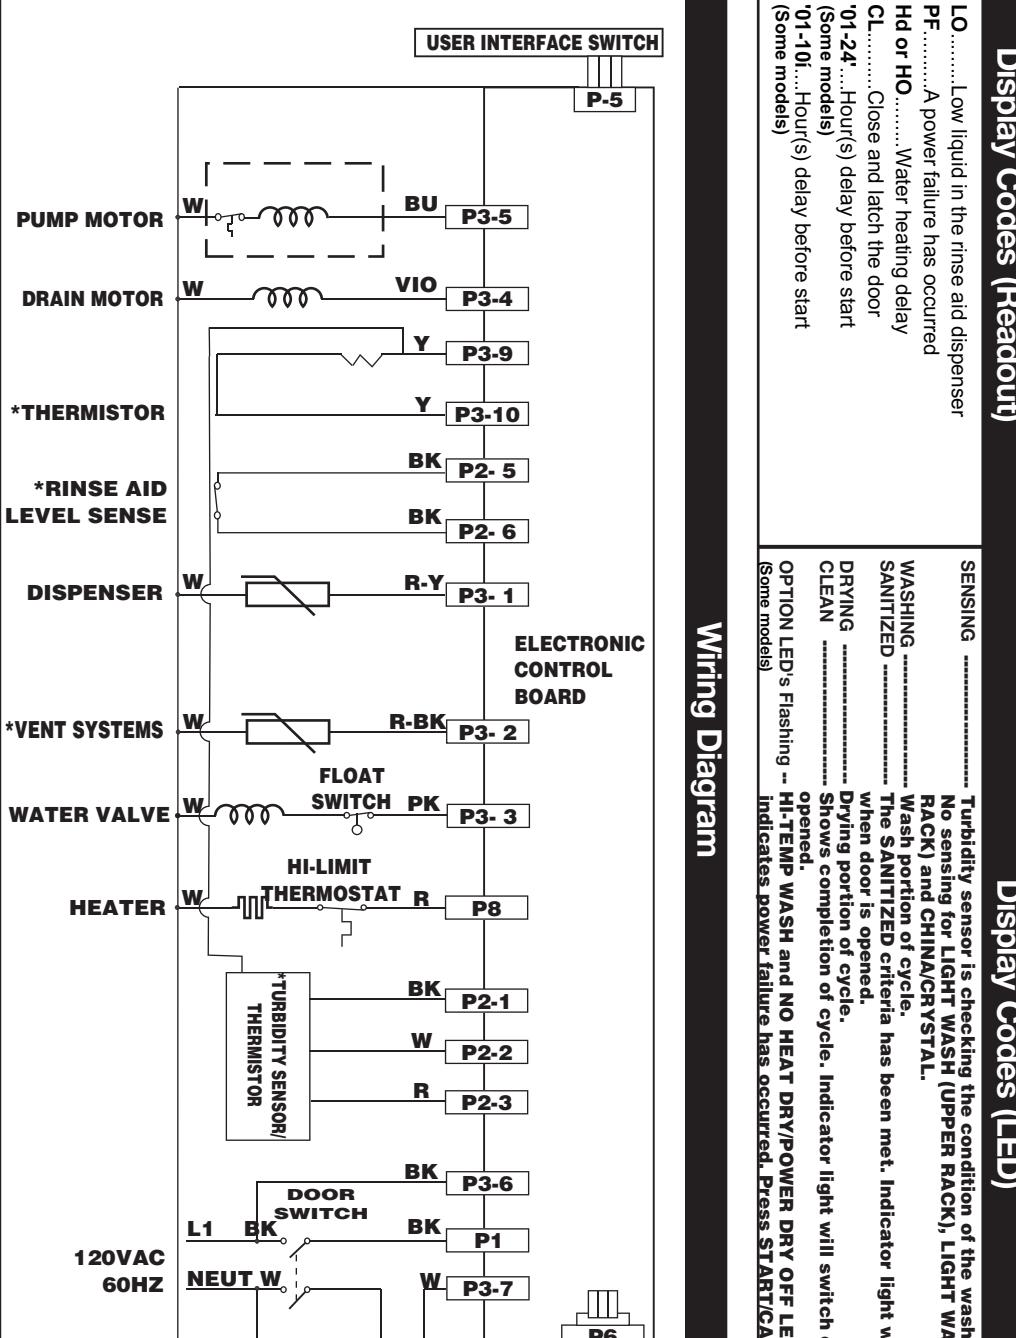

Display Codes (LED)

SENSING	Turbidity sensor is checking the condition of the wash/rinse water.
BU	No sensing for LIGHT WASH (UPPER RACK), LIGHT WASH (LOWER RACK) and CHINA/CRYSTAL.
PF	A power failure has occurred
Hd or HO	Water heating delay
CL	Close and latch the door
'01-'24'	Hour(s) delay before start (Some models)
'01-'10'	Hour(s) delay before start (Some models)
CLEAN	Shows completion of cycle. Indicator light will switch off when door is opened.
DRYING	Drying portion of cycle.
OPTION LED's Flashing	Shows completion of cycle. Indicator light will switch off when door is opened.
Indicates power failure has occurred. Press START/CANCEL pad and	OPTION LED's Flashing -- HI-TEMP WASH and NO HEAT DRY/POWER DRY OFF LED's flashing

Wiring Diagram