


PARTS GUIDE

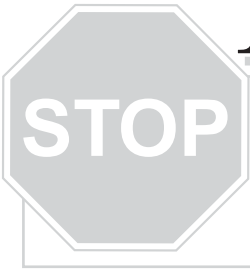


Using the Parts Guide below, check to make sure all parts are included in the box.
 If parts are missing or damaged call 1-888-830-1326.
PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

Before installing your fan, record the following information for your records and warranty assistance.

Model Name _____
 Catalog No. _____
 Serial No. _____
 Date Purchased _____
 Where Purchased _____

Fan Parts (Not Drawn to Scale)

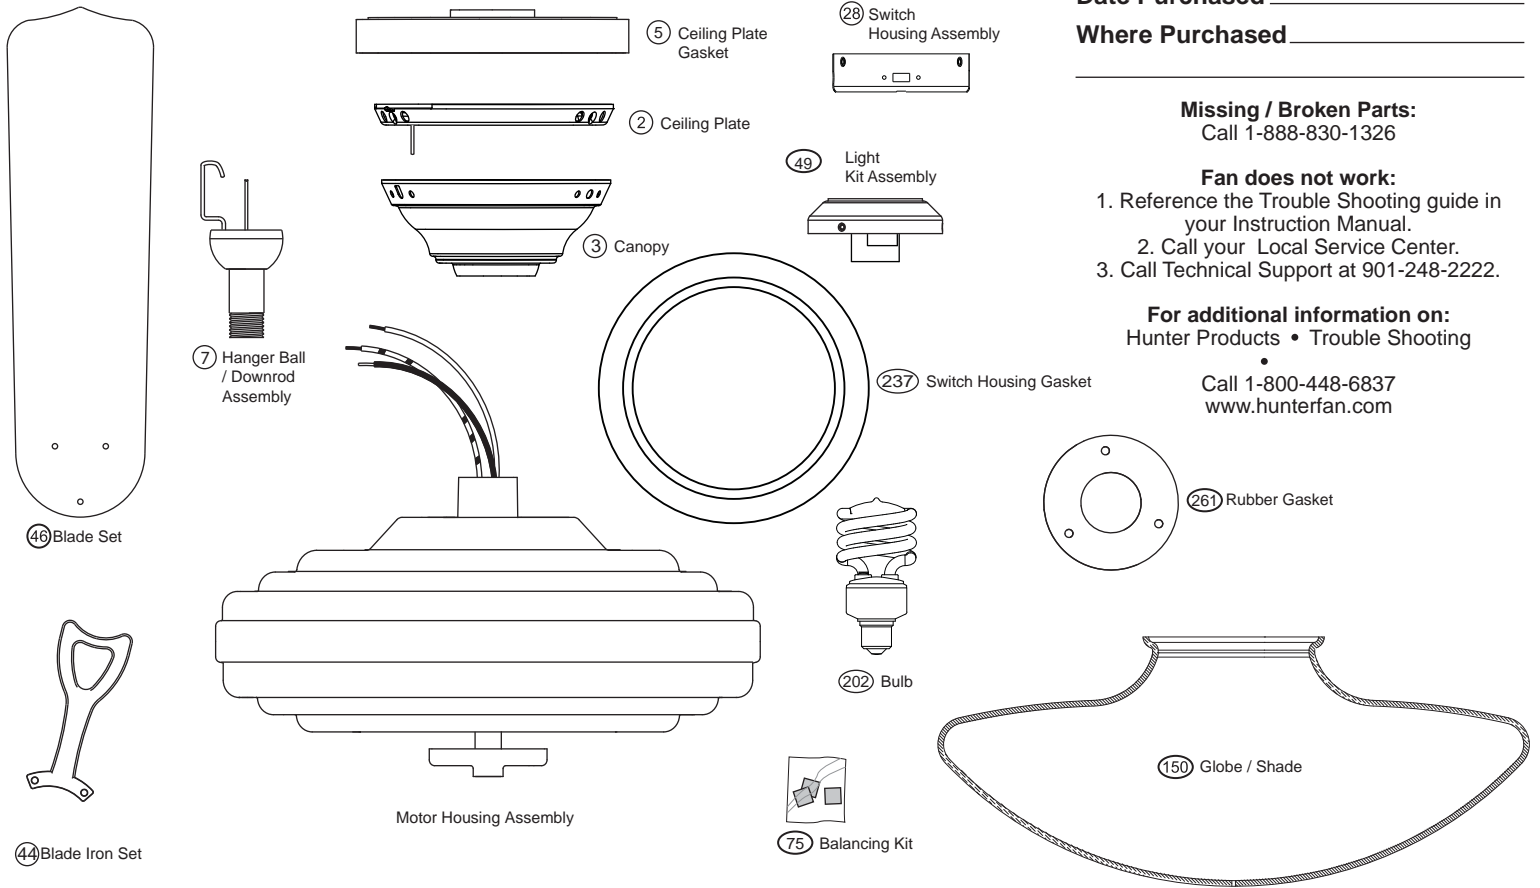


Missing / Broken Parts:
 Call 1-888-830-1326

- Fan does not work:**
1. Reference the Trouble Shooting guide in your Instruction Manual.
 2. Call your Local Service Center.
 3. Call Technical Support at 901-248-2222.

For additional information on:
 Hunter Products • Trouble Shooting
 Call 1-800-448-6837
www.hunterfan.com

Hardware (Drawn to Scale)

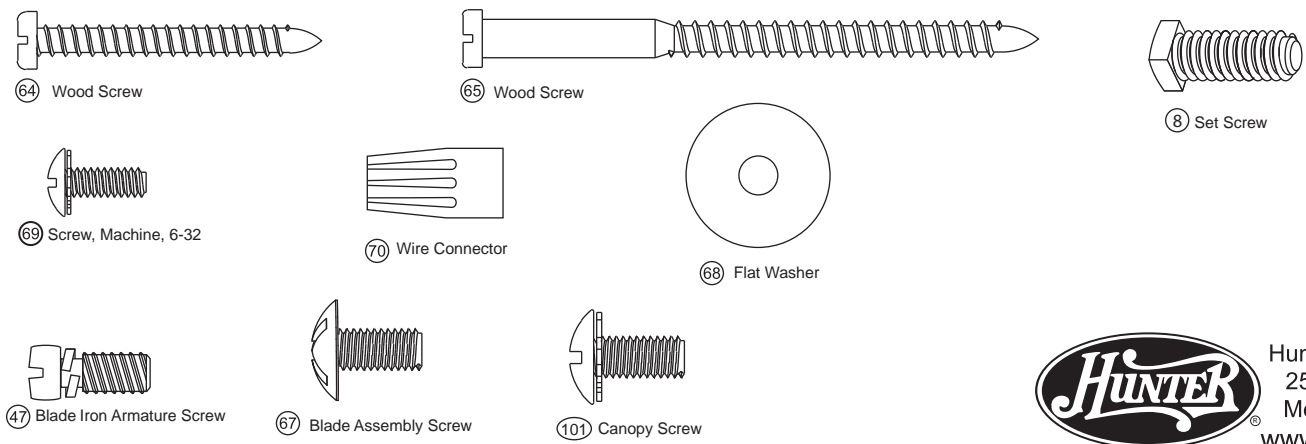

Part List		Model #	23697
		Asm. Dwg. #	97469-01
		Finish	White
Item #	Item Name	Qty	Part #
2	Ceiling Plate	1	83535-01
3	Canopy	1	85100-01
7	Hanger Ball / Downrod Assembly	1	-----
8	Set Screw	1	-----
64	Screw, Wood	2	-----
65	Screw, Wood	2	-----
68	Flat Washer	4	-----
101	Canopy Screw	4	-----
5	Ceiling Plate Gasket	1	74254-01
237	Switch Housing Gasket	1	74562-01
261	Rubber Gasket	1	74563-01
28	Switch Housing Assembly	1	93526-03
49	Light Kit Assembly	1	87860-01
150	Globe / Shade	3	92965-03
44	Blade Iron Set	1	93754-01
46	Blade Set	1	74002-45
	* Hardware Kit	1	97469-00-860
47	Blade Iron Armature Screw	11	-----
67	Blade Assembly Screw	16	-----
69	Screw, Machine, 6-32	3	-----
70	Wire Connector	4	-----
259	CFL Bulb	1	65634-01
75	Balancing Kit	1	07570-01

98000-01-810

07/20/07