
TO THE PURCHASER OF JADO BRA	SS PRODUCTS		JADO	To ensure that
<b>Attention installer:</b> Please leave This Pamphlet for T	he Owner		Products	read these inst
<text><text><text><text><text><text><text><text><text><text><text><text><text><text><text><text><text></text></text></text></text></text></text></text></text></text></text></text></text></text></text></text></text></text>	he de service of the		JADO USA 6615 West Boston Chandler, AZ 85226 Phone: (800) 227-2734 Fax: (800) 552-JAD0(5236) www.jadousa.com	
		109637B	©JADO USA 2003	

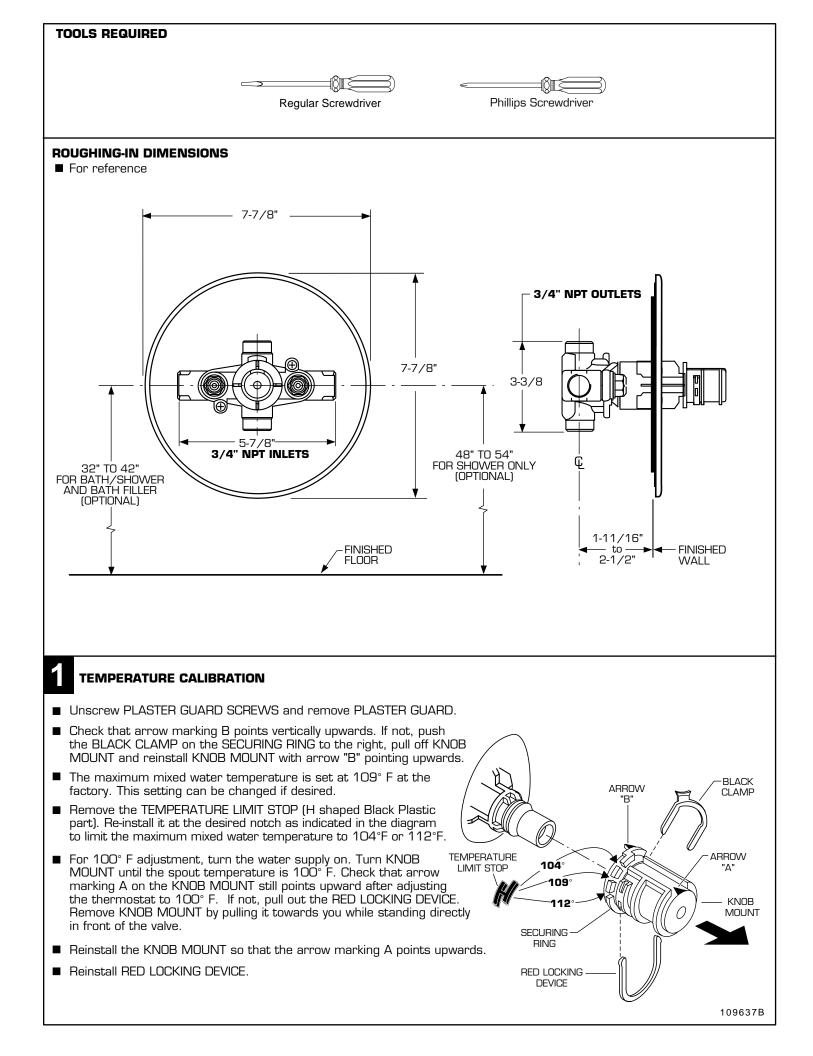





## **TRIM INSTALLATION** Push CAP (1) over the O-RING SEAL (2). Push ESCUTCHEON HOLDER and SEAL (3) with lightly greased O-ring seal over CAP (1) and secure with SCREWS (4). ■ Align PINS (6) on back side of ESCUTCHEON (5) with the TWO HOLES (7) in ESCUTCHEON HOLDER (3) and press ESCUTCHEON (5) flush against finished wall 3 HANDLE INSTALLATION Align the two splines in LEVER HANDLE (1) with the knob mount arrow and push LEVER HANDLE (1) onto KNOB MOUNT (2). ■ With (2.5 mm) HEX WRENCH (3)(supplied) tighten SET SCREW (4) in HANDLE (1). TRANSPOSED SUPPLY PIPING Should the hot and cold water supply pipes have been transposed making adjustment impossible, proceed as follows: ■ Shut off water supply. Remove handle and rim Remove check stops and re-install them transposed. ■ Important note: RED CHECK STOP is now on the right of the mixer body and the BLUE CHECK STOP is now on the left. Turn the water supply back on and perform the temperature adjustment in step 1. 5 **OPERATING THE VALVE** ■ Rotate handle counter-clockwise from cold to the maximum hot temperature desired that was preselected in step one.

