



ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

CAUTION: INJURY TO PERSONS AND DAMAGE TO THE LAMP AND/OR MOUNTING SURFACE MAY RESULT IF THE LAMP IS PULLED AWAY FROM THE SURFACE: TO REDUCE THE LIKELIHOOD OF SUCH INJURY OR DAMAGE, MOUNT ONLY ON A SURFACE THAT IS MECHANICALLY SOUND.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER AND DRILL.

UNPACK THE LAMP: CHECK THE CONTENTS OF THE BOX. YOU SHOULD HAVE RECEIVED THE FOLLOWING: BACKPLATE ASSEMBLY, HARP, SHADE AND FINIAL. HARDWARE PACKAGE: (2) 8-32 x 1" SCREWS, (2) NUTS, (6) SCREWS, (6) ANCHORS, (2) CORD COVERS, MOUNTING CHANNEL AND (2) CAP NUTS.

ASSEMBLE THE FIXTURE:

1. REMOVE THE WALL BRACKET FROM THE BACKPLATE BY REMOVING THE (2) CAP NUTS ON THE FRONT OF THE BACKPLATE.
2. PLACE WALL BRACKET IN THE DESIRED LOCATION ON THE WALL AND MARK WITH A PENCIL. (NOTE: THE WALL BRACKET SHOULD BE MOUNTED ON A WALL STUD USING A SCREWDRIVER. IF MOUNTING ON A HOLLOW AREA, DRILL 1/4" PILOT HOLES AND INSERT ANCHORS WHERE THE LOCATION WAS MARKED.) PLACE THE WALL BRACKET ON THE WALL, INSERT AND TIGHTEN SCREWS. (SEE WALL BRACKET ASSEMBLY ABOVE)
3. MOUNT THE BACKPLATE TO THE WALL BRACKET WITH THE (3) CAP NUTS REMOVED ABOVE.
4. SQUEEZE LEGS OF HARP TOGETHER AND INSERT THE TWO ENDS INTO SOCKET COVER.
5. PLACE THE SHADE ONTO HARP AND SECURE WITH FINIAL.
6. INSTALL A 150 WATT MAX. MEDIUM BASE 3-WAY TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.
7. TO INSTALL CORD COVER, MOUNT CHANNEL ON THE WALL WITH SCREWS AND ANCHORS. (SEE ABOVE) WITH CORD BEHIND COVERS, PRESS CORD COVERS ONTO CHANNEL.
8. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.

