


KitchenAid®

30" DUAL FUEL DOUBLE OVEN CONVECTION RANGE

MODELS:

KFDD500ESS01 (Stainless)

COOKTOP PARTS

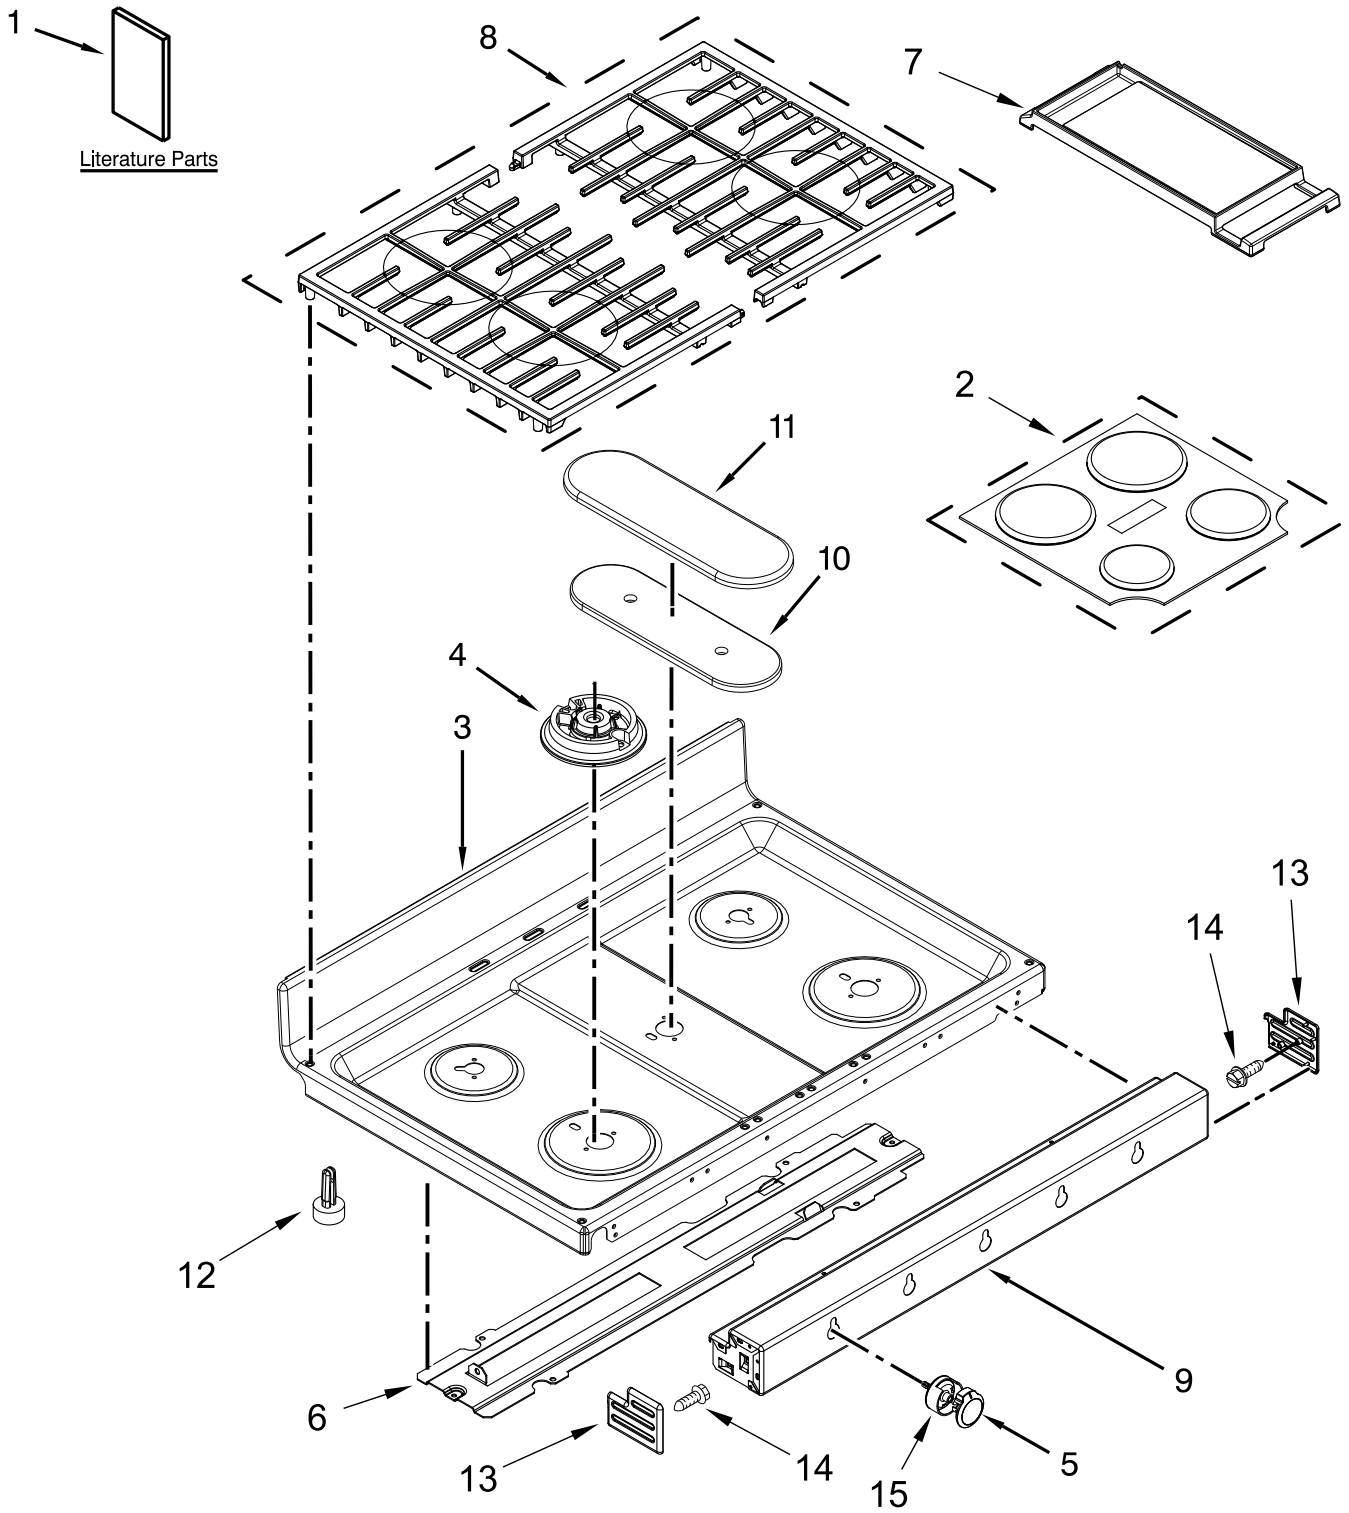


COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10694061	Guide, Use & Care
	W10694070	Instructions, Installation
	W10647745	Sheet, Tech
	9762761	Tips, Safe Cooking (English)
	W10065852	Tips, Safe Cooking (French)
2	W10299236	Kit, Burner Cap
3		Cooktop
	W10330921	Stainless
4	W10406878	Head, Burner (17.5K)
		(Left Front)
	W10406243	Head, Burner (6K)
		(Left Rear & Right Rear)
	W10406797	Head, Burner (12K)
		(Right Front)
	W10336094	Head, Burner (Center)
5		Knob, Control
	W10643306	Stainless
6	W10518258	Bracket, Cooktop Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10432544	Griddle
8	W10649701	Kit, Grate
9		Panel, Manifold
	W10711043	Stainless
10	W10333445	Base, Burner (Fish Burner Only)
11		Kit, Burner Cap (Fish Burner Only)
	W10171140	Black
12	8016P022-60	Glide, Main Top
13		Endcap, Manifold
	W10772020	Stainless (Left)
	W10772019	Stainless (Right)
14	7101P634-60	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15		Bezel
	W10437082	Stainless
		FOLLOWING PARTS NOT ILLUSTRATED
	W10233363	Cord, Power
	W10745677	Harness, Main
	W10409840	Harness, EOL (MRC)
	W10408058	Harness, Spark
	W10745683	Harness, Sensor & Locks
	8019P026-60	Clip, Wire
	7111P017-60	Clamp, Wire
	W10591270	Kit, LP Conversion

CONTROL PANEL PARTS

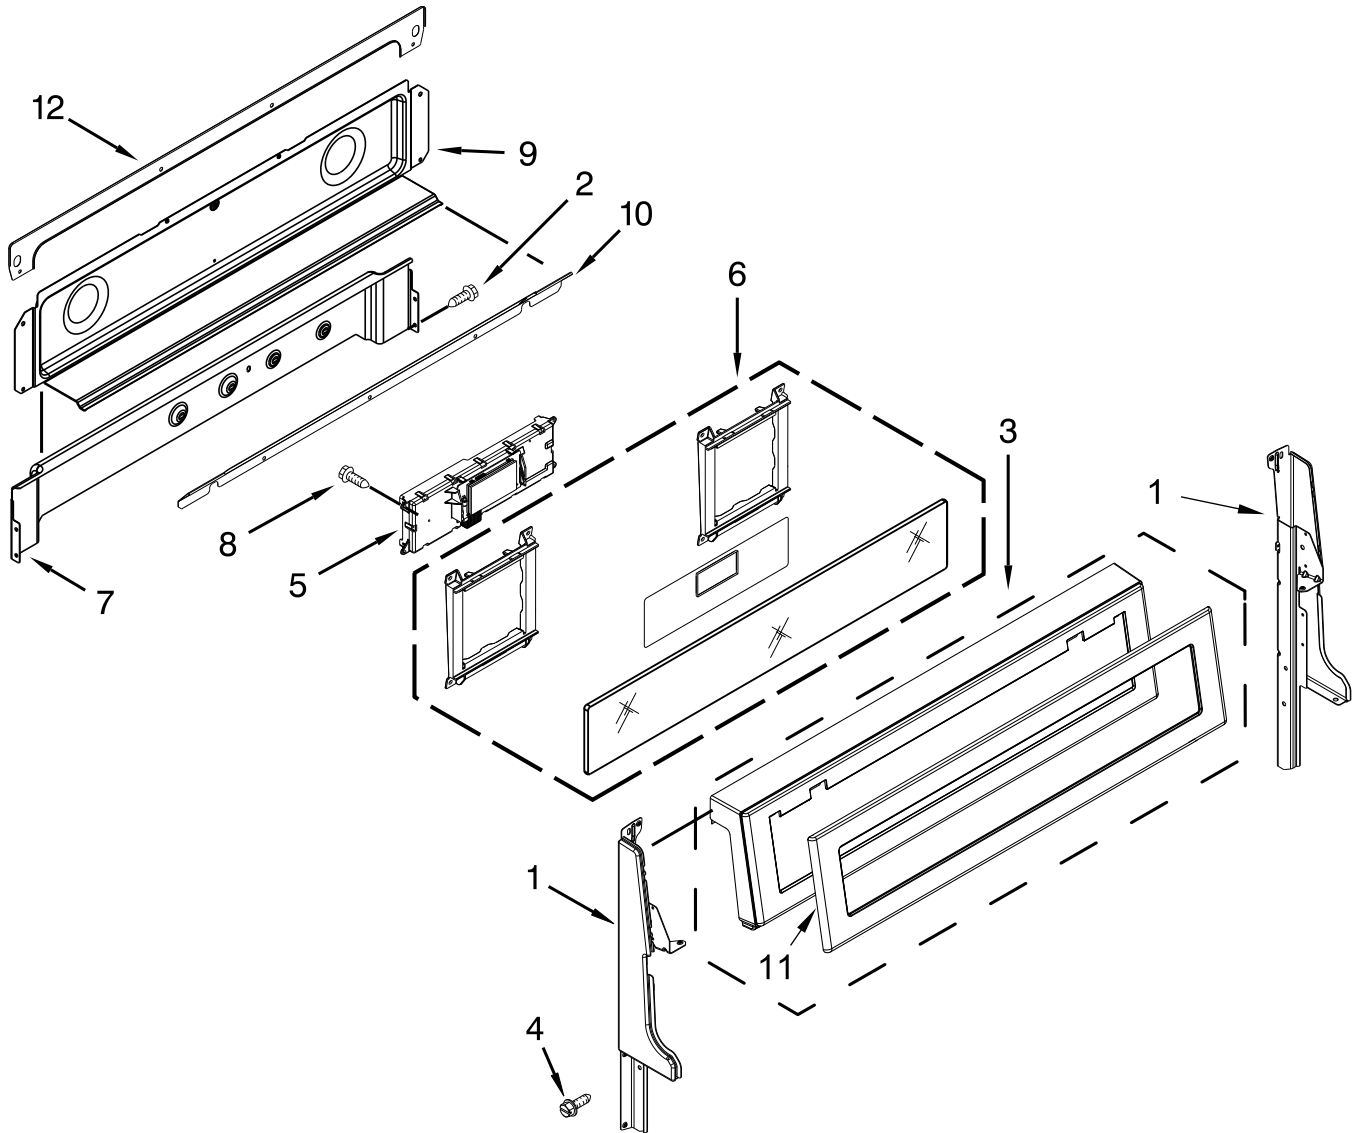


CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard
	W10782761	Black (Left)
	W10782763	Black (Right)
2	7101P426-60	Screw
3		Console
	W10645854	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	7101P634-60	Screw
5	W10649466	Control, Electronic
6		Assembly, User Interface
	W10692425	Black
7	W10278697	Shield, Vent
8	7101P434-60	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10776098	Cover, Backguard
10	W10299338	Shield, Wire Cover
11		Skin, Control Panel
	W10645842	Stainless
12	W10292689	Cover, Wire Filler

MANIFOLD PARTS

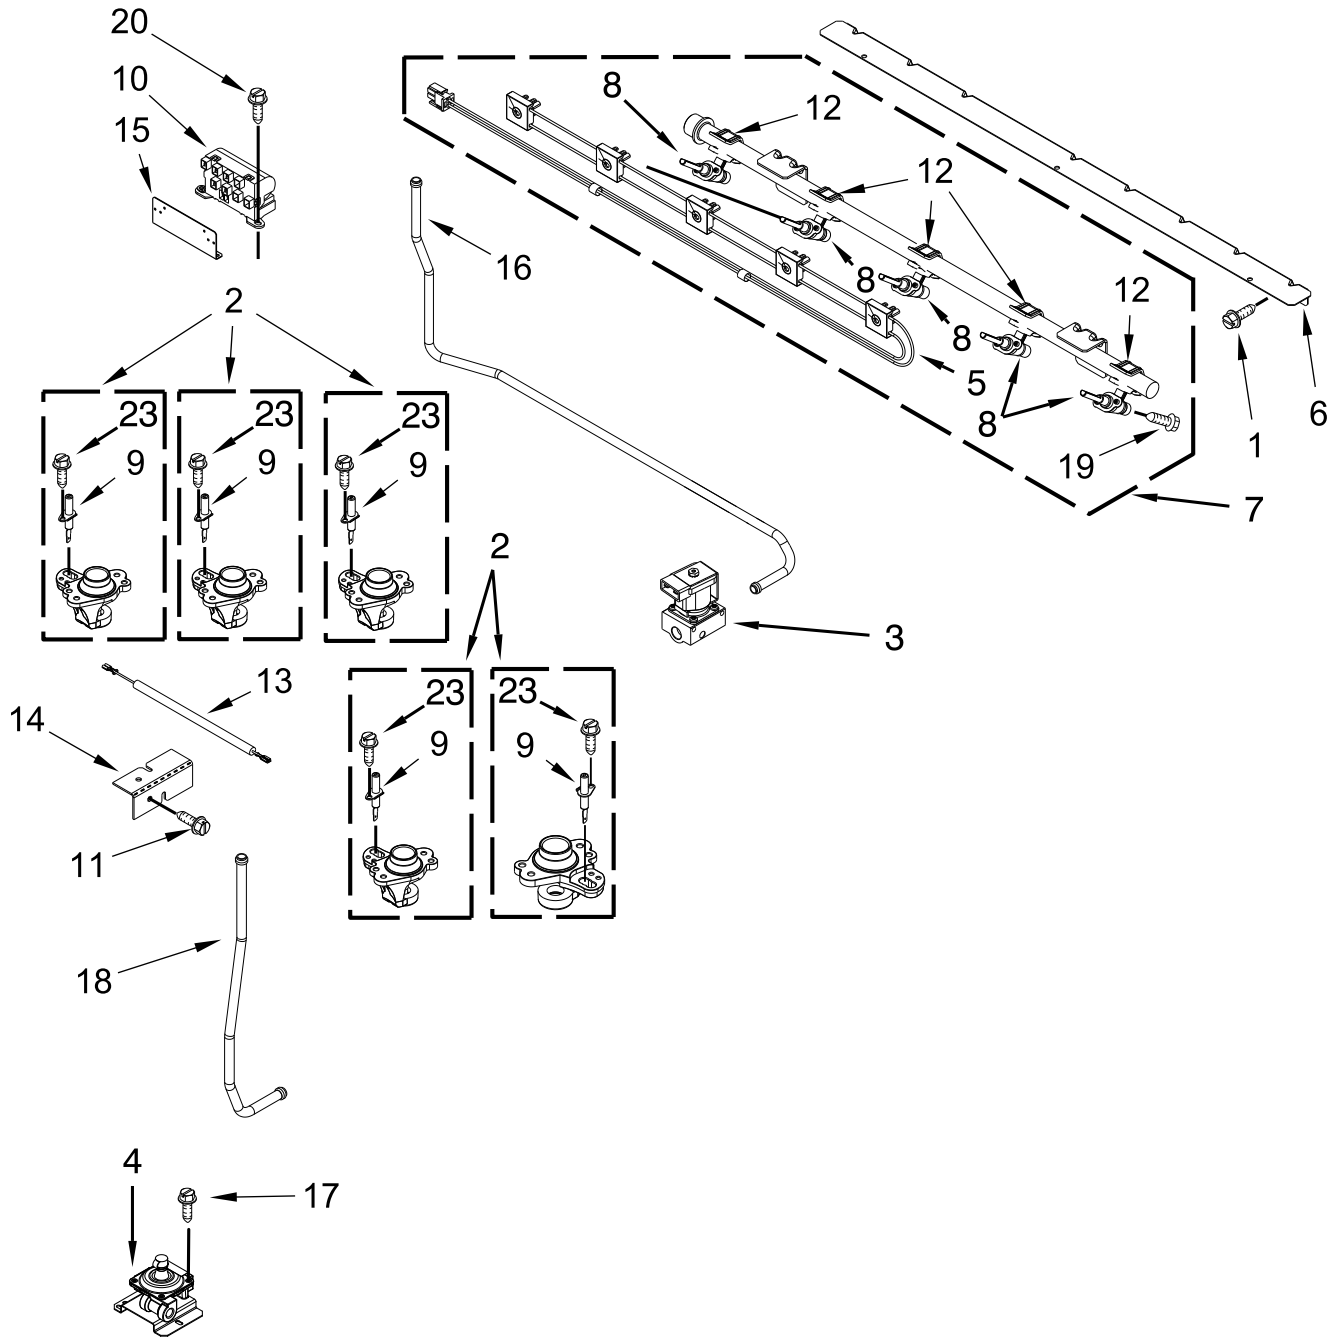


MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P653-60	Screw
2	W10643268	Holder, Orifice (17K) (Left Front)
	W10643269	Holder, Orifice (5K) (Left Rear)
	W10643270	Holder, Orifice (10K) (Right Front)
	W10643271	Holder, Orifice (5K) (Right Rear)
	W10643272	Holder, Orifice (7K) (Center)
3	W10368614	Valve, Shut Off

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10582429	Regulator, Pressure
5	W10664240	Harness, Switch
6	W10276466	Bracket, Manifold (Bottom)
7	W10642365	Assembly, Manifold
8	W10718180	Valve (Left Front)
	W10718182	Valve (Left Rear & Right Rear)
	W10718181	Valve (Right Front & Center)
9	W10407676	Electrode, Spark
	W10407677	Electrode, Fish

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
10	7431P053-60	Module, Spark
11	W10217535	Screw
12	W10295996	Bracket, Saddle Valve
13	W10322044	Extension, Electrode
14	W10324366	Holder, Electrode Extension
15	W10319059	Bracket, Spark Module
16	W10642388	Tubing (Supply Shutoff To Manifold)
17	7101P635-60	Screw (Black)
18	W10524331	Tubing (Supply Regulator to Shutoff)
19	W10295997	Screw, Valve
20	7101P338-60	Screw


CHASSIS PARTS

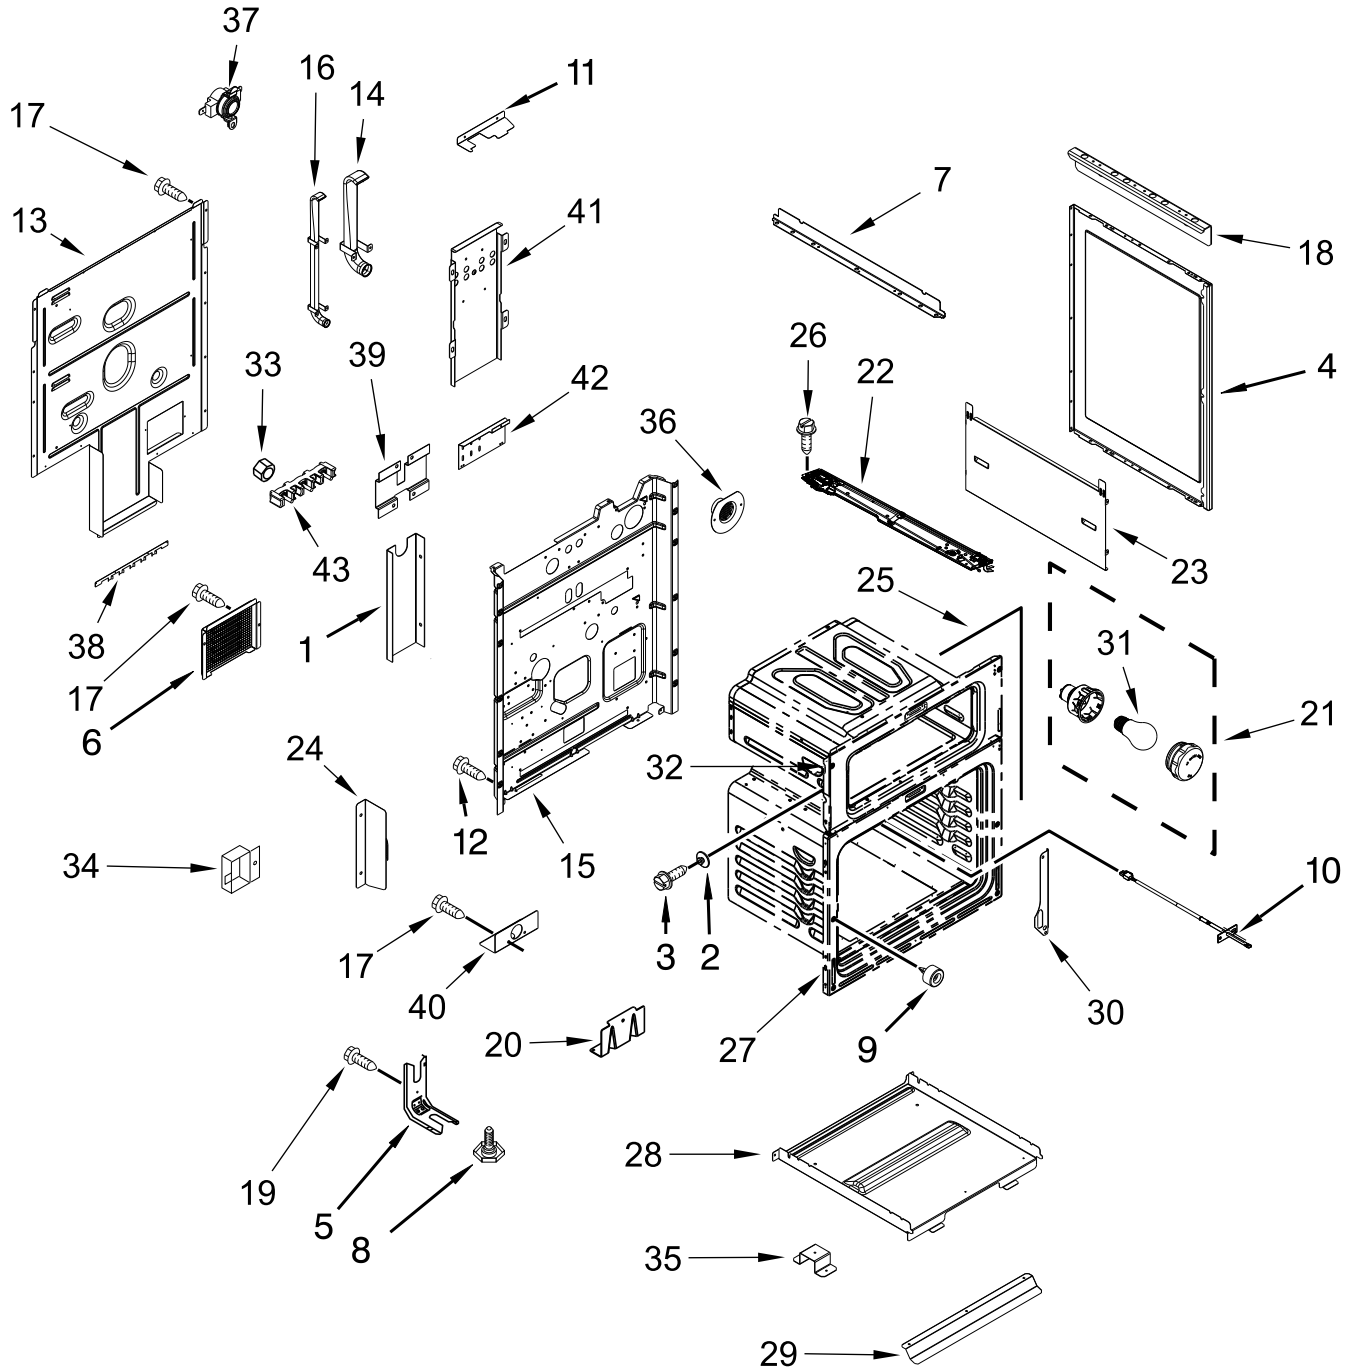

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	21	W10454648	Assembly, Light	38	8036P012-60	Shield, Power Cord
2	W10237689	Spacer, Side Panel	22	W10683517	Lock, Rear Mount	39	7003P104-60	Insulator, Heat Shield
3	W10267456	Screw, Shoulder	23	W10538516	Shield, Side Insulation	40	W10190166	Bracket, Power Supply
4	W10668723	Panel, Side Black	24	W10268559	Cover, Lower Wire	41	W10261388	Bracket, Terminal
5	3801F656-51	Bracket, Anti-Tip	25	W10337392	Gasket, Oven Door (Upper)	42	W10332449	Shield, Cord
6	W10312612	Cover, Access (Terminal Block)		W10269069	Gasket, Oven Door (Lower)	43	W10246624	Block, Terminal Following Parts Not Illustrated
7	W10357697	Bracket, Side Panel	26	7101P375-60	Screw	W10271637		Insulation, Floor
8	7101P507-60	Foot, Leveler	27	W10308654	Front, Main (Lower)	W10272326		Insulation, Hidden Bake Pouch
9	W10105790	Bumper & Screw	28	W10548601	Pan, Element	W10204079		Insulation, Middle
10	7430P044-60	Sensor, Oven	29	W10253470	Bracket, Retaining	W10204085		Insulation, Main Front Strip
11	W10268558	Cover, Lower Wire	30	W10410463	Cover, Hinge (Left)	W10308393		Insulation, Wrapper
12	7101P635-60	Screw (Black)		W10410461	Cover, Hinge (Right)	W10322111		Insulation, Back
13	W10261386	Cover, Main Wire	31	311255	Bulb, Oven Light			
14	W10337391	Tube, Vent (Upper)	32	W10606341	Front, Main (Upper)			
15	W10668730	Back, Main	33	3400029	Nut			
16	W10323793	Tube, Vent (Lower)	34	8285593	Cover, Connector			
17	7101P426-60	Screw	35	W10260545	Clip, Retaining			
18	W10319087	Bracket, U Channel	36	W10322408	Adapter, Vent Tube			
19	7101P485-60	Screw, Anti-Tip Kit	37	7403P899-60	Switch, High Limit			
20	W10260703	Support, Lower Oven						

UPPER DOOR PARTS

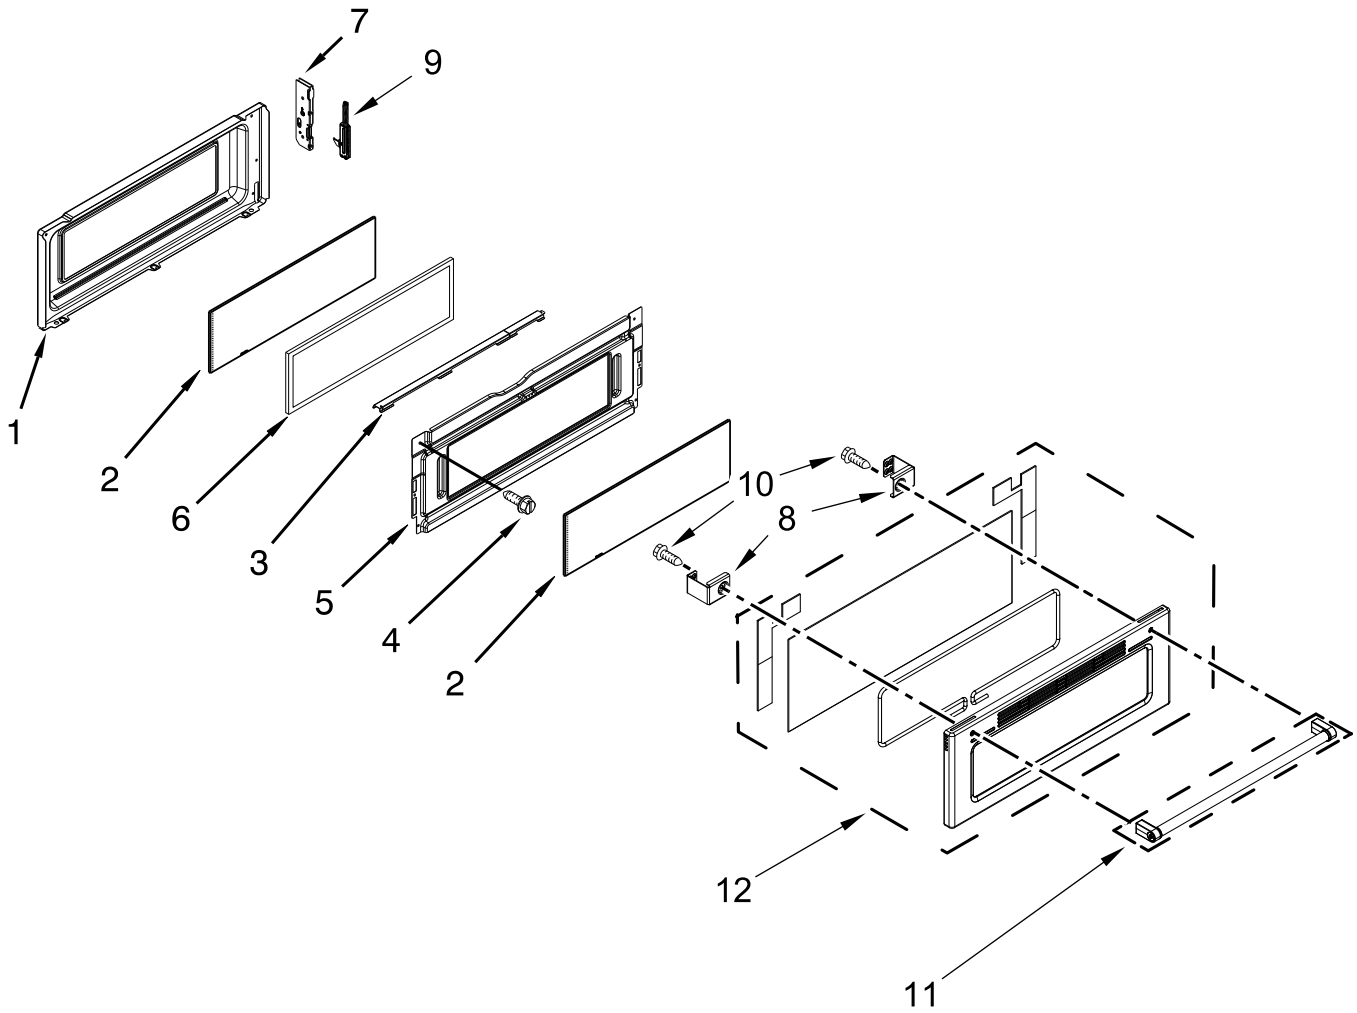


UPPER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10485721	Lining, Door
2	W10272707	Glass, Inner
3	W10272708	Frame, Glass
4	W10292297	Screw
5	W10485723	Retainer, Insulation
6	W10321271	Insulation, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10289077	Receiver, Hinge
8	W10645182	Bracket, Door Handle
9	W10485733	Hinge, Door (Left)
	W10485732	Hinge, Door (Right)
10	W10480830	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11		Assembly, Handle
	W10674701	Stainless
12		Assembly, Door
	W10645192	Stainless


LOWER DOOR PARTS

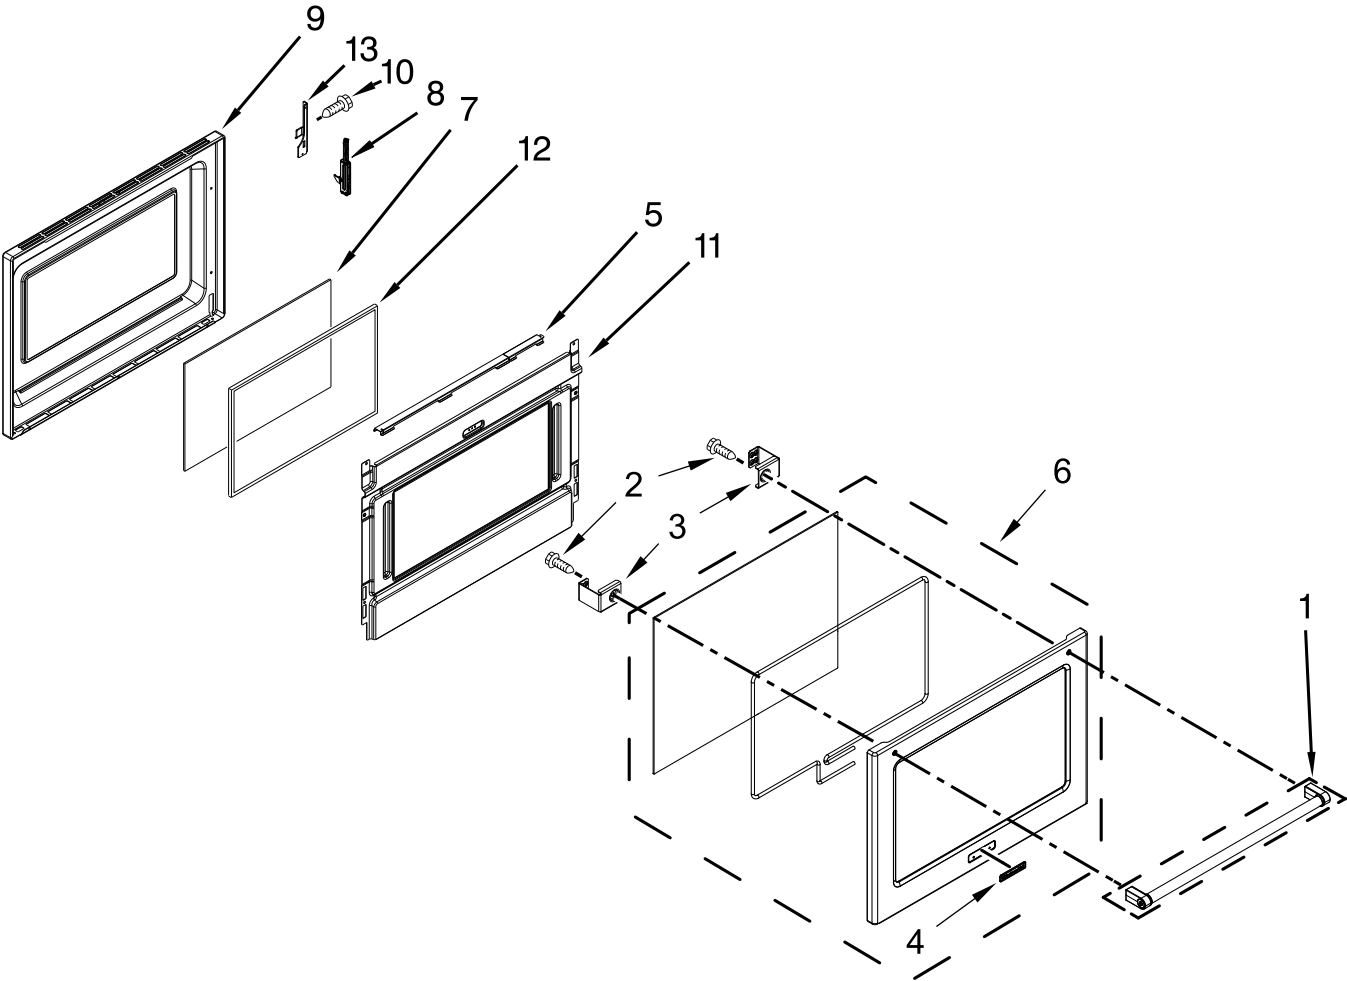

LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Handle	6		Assembly, Door	11	W10340464	Retainer, Insulation
	W10674701	Stainless		W10645181	Stainless	12	W10321285	Insulation, Door
2	W10480830	Screw	7	9757706	Glass, Inner	13	W10272329	Receiver (Left)
3	W10645182	Bracket, Door Handle	8	W10335434	Hinge, Door (Left)		W10272328	Receiver (Right)
4		Badge		W10335433	Hinge, Door (Right)			
	W10518672	Grey	9	W10292008	Lining, Door			
5	W10272594	Frame, Glass	10	W10292297	Screw			

INTERNAL OVEN PARTS

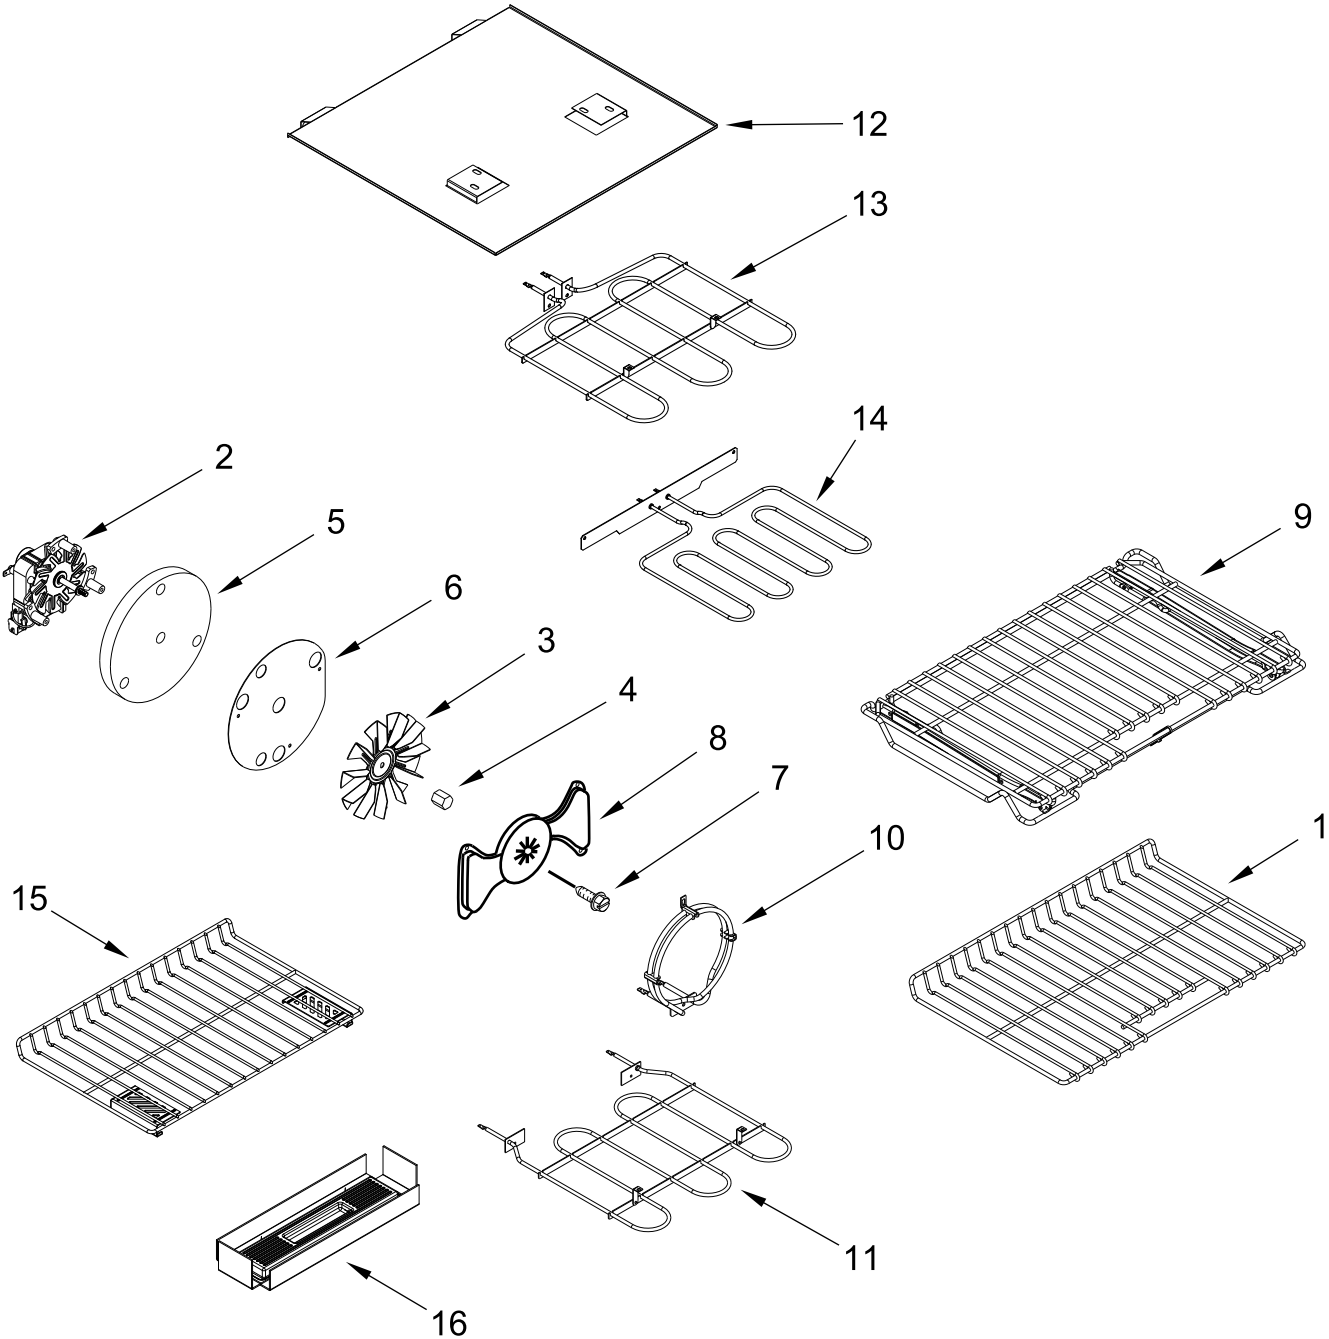

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10570887	Rack, Oven
2	W10631505	Fan, Convection
3	W10631503	Blade, Fan
4	W10631504	Nut, Acorn
5	W10274268	Insulation, Convection Motor
6	W10339476	Plate, Insulation
7	4449154	Screw
8	8303962BU	Cover, Fan

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10570870	Rack, Oven (Telescoping)
10	W10271639	Element, Convection (240VAC)
11	W10249979	Element, Broil (Lower)
12	W10319762	Shield, Broil
13	W10317476	Element, Broil (Upper)
14	W10249981	Element, Bake (Upper & Lower)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10685968	Rack, Steam
16	W10686408	Kit, Reservoir (Steam Rack)

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	W10355049	Wipes, Stainless Steel Cleaning