


KitchenAid®

30" FREE STANDING ELECTRIC RANGE CONVECTION

MODELS:

KFEG500EWH0 (White)
KFEG500EBL0 (Black)
KFEG500ESS0 (Stainless)


COOKTOP PARTS

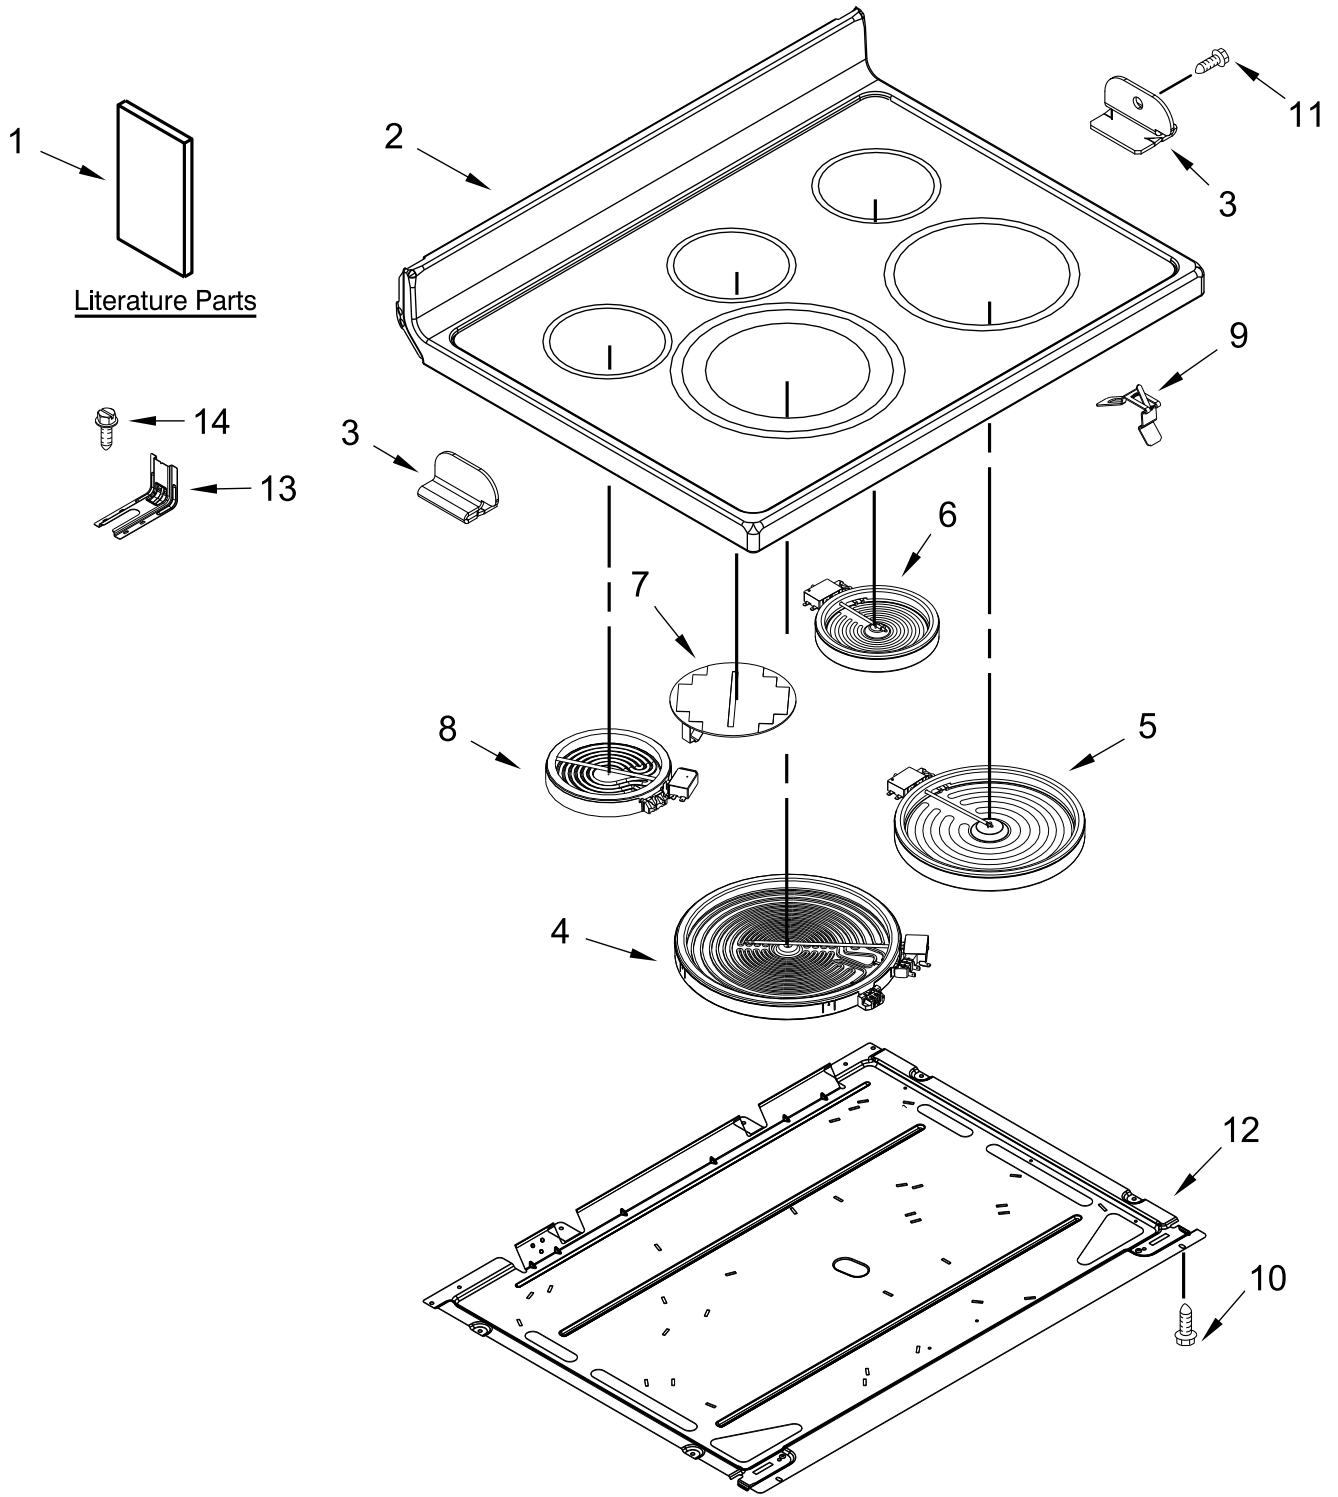

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10162040	Element (3000/1900W)	12	W10691223	Pan, Radiant Element
	W10694003	Use and Care Guide			(Left Front)	13	W10306542	Bracket, Anti-Tip
	W10400064	Guide, Quick Start (English)	5	W10275048	Element (3000/1400W)	14	7101P485-60	Screw, Anti-Tip Kit
	W10694021	Tech Sheet			(Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W10694026	Installation Instructions	6	8273994	Element (1200W)	W10349654		Harness, Cooktop (Right)
	9762761	Tips, Safe Cooking (English)	7	W10388247	Element, Warm Zone	W10349716		Harness, Cooktop (Left)
2		Cooktop			(Center Rear)	W10580267		Harness, Main
	W10697350	White	8	W10342780	Element (1300W)	W10349640		Harness, Sensor
	W10697351	Black			(Left Rear)	W10174460		Harness, Warm Zone
	W10697352	Stainless	9	W10225448	Spring, Element			
3	W10607641	Bracket, Cooktop (Left)	10	3196169	Screw			
	W10607642	Bracket, Cooktop (Right)	11	3196172	Screw			


CONTROL PANEL PARTS

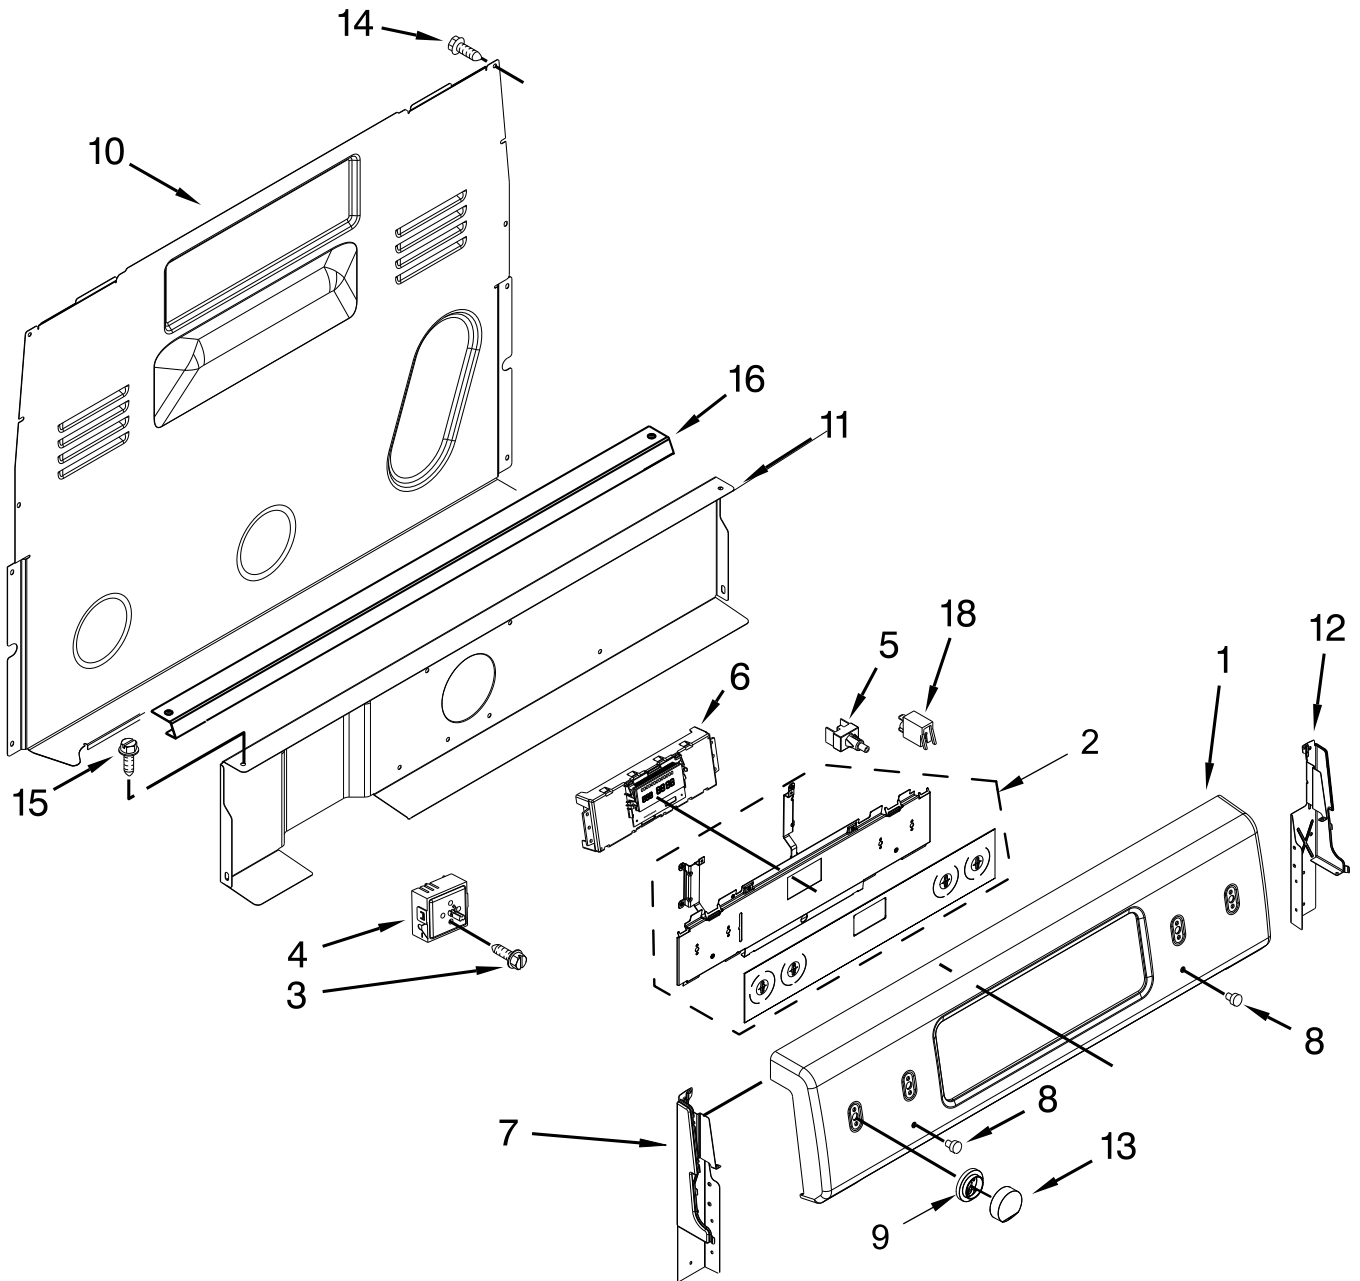

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Backguard	4	W10437092	Switch, Infinite (Dual)	9		Bezel
	W10645847	White			(Left Front & Right Front)		W10645811	Stainless
	W10645865	Black		W10437094	Switch, Infinite (Hyper)	10	8272473	Cover, Upper Rear
	W10645867	Stainless			(Left Rear)	11	W10134247	Shield, Heat
2		Active Overlay Assembly		W10578768	Switch, Infinite (Single)	12		Endcap
	W10645817	White			(Right Rear)		W10184434	White (Right)
	W10692149	Black					W10184438	Black (Right)
3	3400882	Screw	5	8523265	Light, Indicator (125V)	13		Knob
				W10643263	Control, Maxwell		W10645810	Stainless
			6		Endcap	14	3196178	Screw
			7	W10184433	White (Left)	15	W10362924	Screw
				W10184437	Black (Left)	16	W10525121	Bracket, Console Mounting
			8	3196068	Lens, Indicator			


CHASSIS PARTS

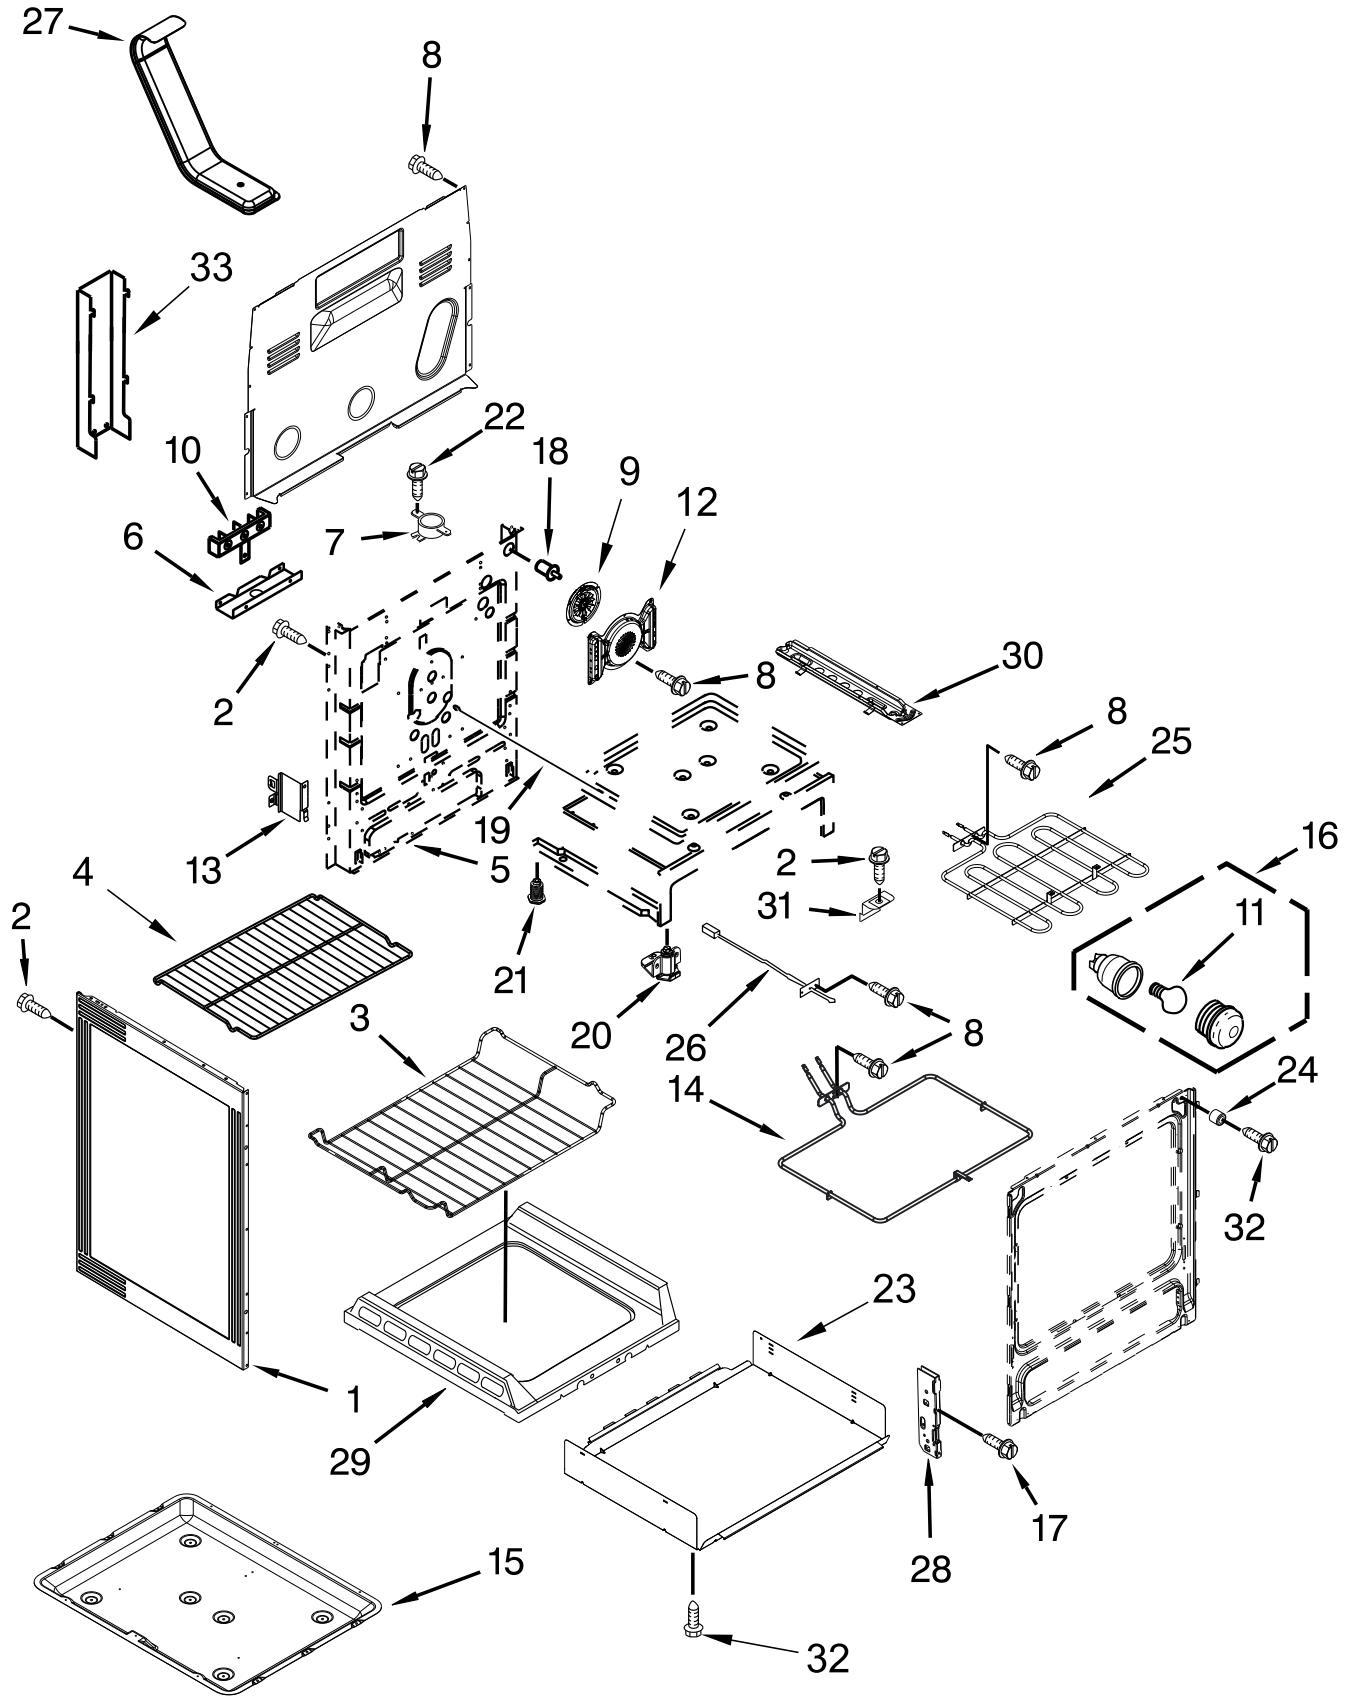

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	13	W10273002	Bracket, Oven Support	28	W10289077	Receiver, Hinge
	W10575396	White	14	W10774342	Element, Bake	29	W10774446	Bottom, Oven
	W10162245	Black	15	W10346147	Pan, Bake	30	W10390007	Assembly, Base Rail (Right)
2	3196172	Screw	16	W10454648	Assembly, Light		W10390008	Assembly, Base Rail (Left)
3	W10289145	Rack, Oven (Gull-Wing)	17	W10031780	Screw	31	W10035900	Support, Oven Bottom
4	W10531060	Rack, Oven	18	W10627802	Switch, Door	32	3196165	Screw
5		Back, Main (Not Serviced)	19	W10273192	Rod, Door Switch	33	W10326122	Cover, Terminal Block
6	3186034	Bracket, Service	20	W10341186	Assembly, Front Foot			INSULATION
7	3196548	Fuse, Thermal	21	W10058460	Foot, Leveling		W10194393	Insulation, Wrap
8	W10362924	Screw	22	3196172	Screw		W10225524	Insulation, Back
9	W10617484	Assembly, Convection	23	W10726740	Shield, Heat		W10225523	Insulation, Bottom
10	W10245259	Block, Terminal	24	9758701	Spacer, Door		W10281322	Kit, Bare Wire Adapter Block
11	311255	Bulb, Oven Light	25	W10544951	Element, Broil		4820F015-59	Insulation, Strap
12	W10346153	Baffle, Full Convection	26	W10586204	Sensor			
			27	W10134285	Tube, Vent			

DOOR PARTS

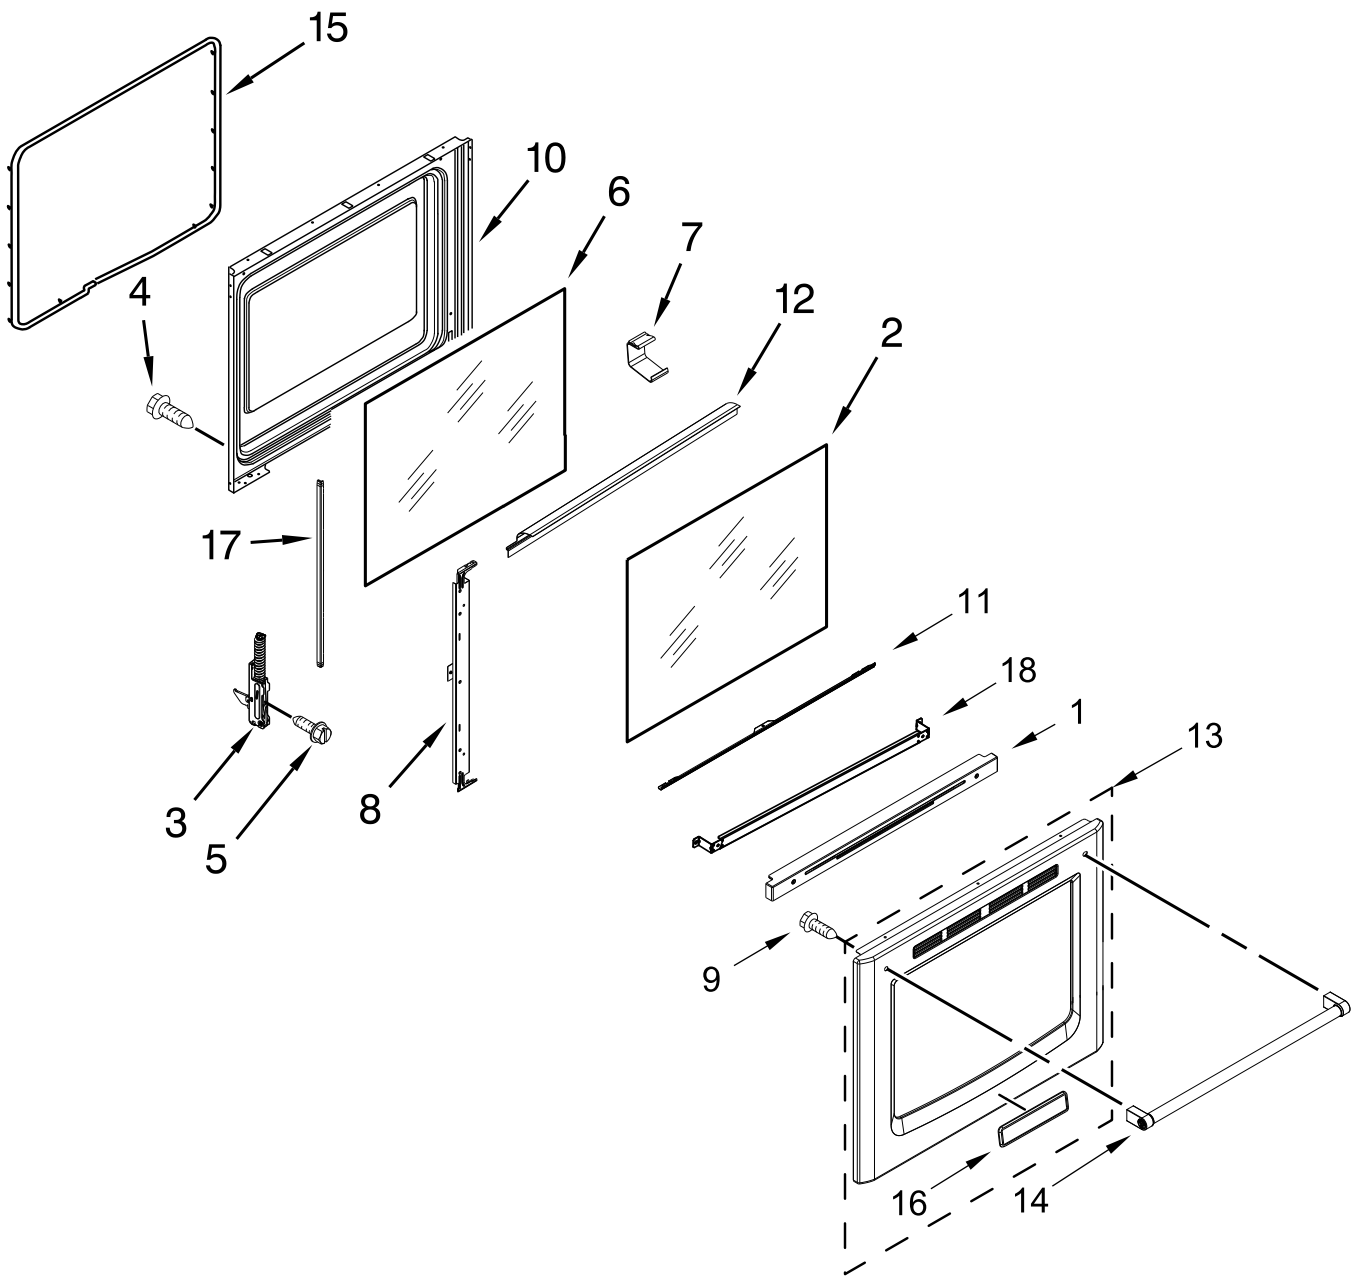


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10335331	White
	W10294855	Black
2		Glass, Outer Door
	W10495962	White
	W10665481	Black
3	W10440013	Hinge, Door (Active)
4	W10031790	Screw
5	W10362924	Screw
6	W10300487	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10137382	Clip, Panel
8	W10294851	Rail, Door
9	W10241367	Screw
10	W10297318	Liner, Door
11		Trim, Lower
	W10333990	White
	W10334031	Black
12	W10294853	Bracket, Glass Liner
13		Glass Assembly, Outer Door
	W10692526	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14		Handle, Door
	W10551000	Stainless
15	W10162385	Gasket, Door
16		Badge
	W10518672	Grey
17		Trim, Side
	W10334003	White
	W10334004	Black
18	W10541911	Bracket, Glass Upper Handle

DRAWER PARTS

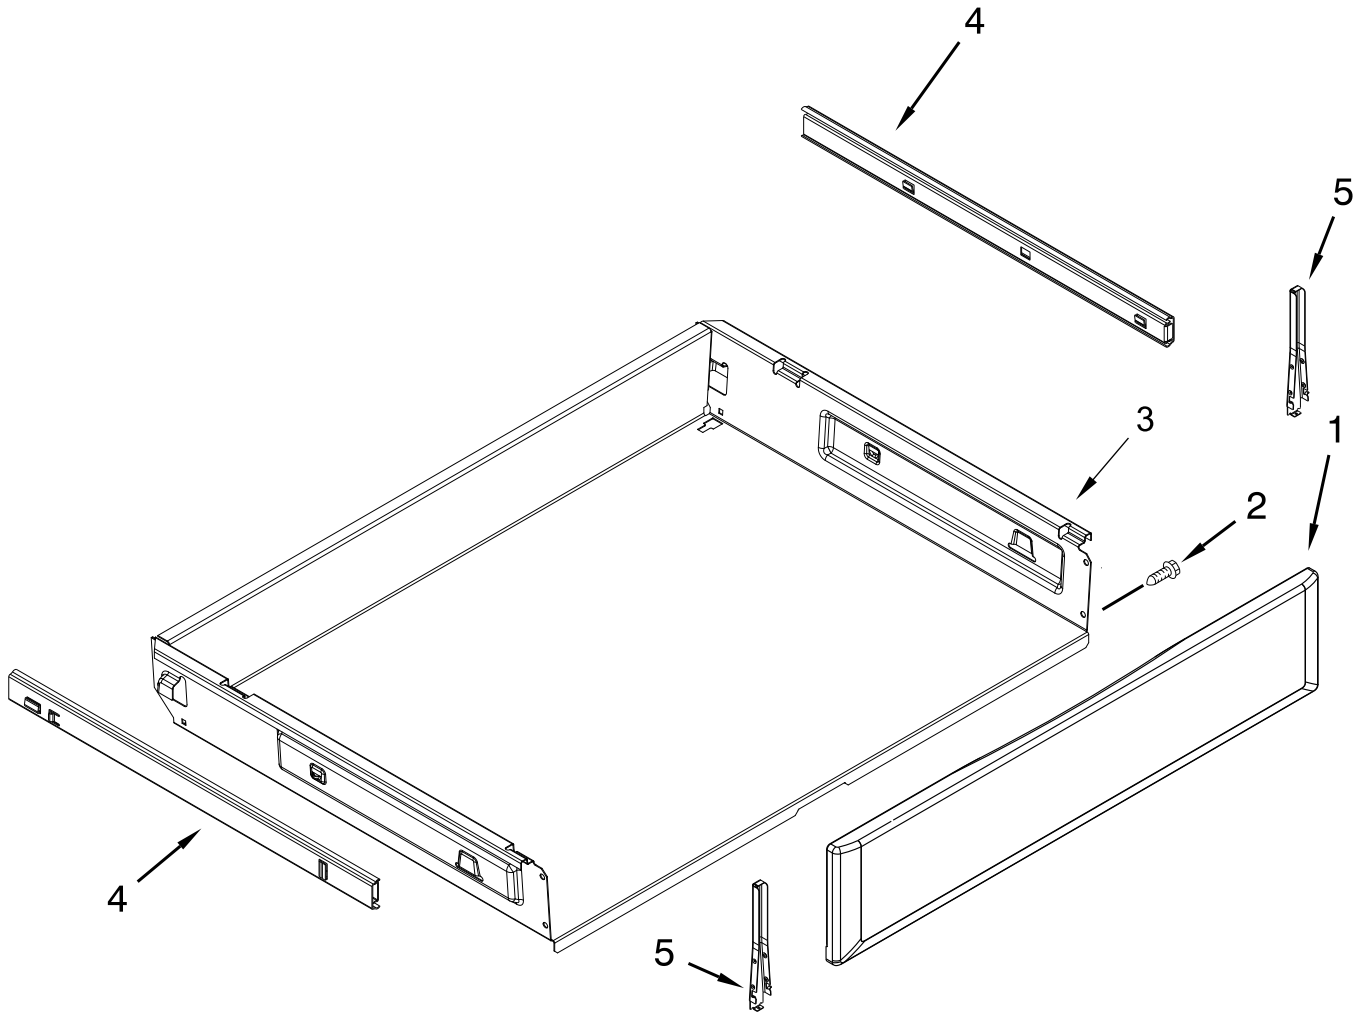

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W10330051	White
	W10330052	Black
	W10330054	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
2	3196169	Screw
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	350938	Gray Primer
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	31463	Protectant, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	W10432019	Alt Cleaning Kit
	WA906B	Scraper, Cooktop
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	W10205524	Split Oven Rack
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	241430	Aluminum Foil