




**30" BUILT-IN ELECTRIC COMBO WALL OVEN
(FINGERPRINT RESISTANT)**

MODELS:

MMW9730FZ01 (Stainless)

OVEN PARTS

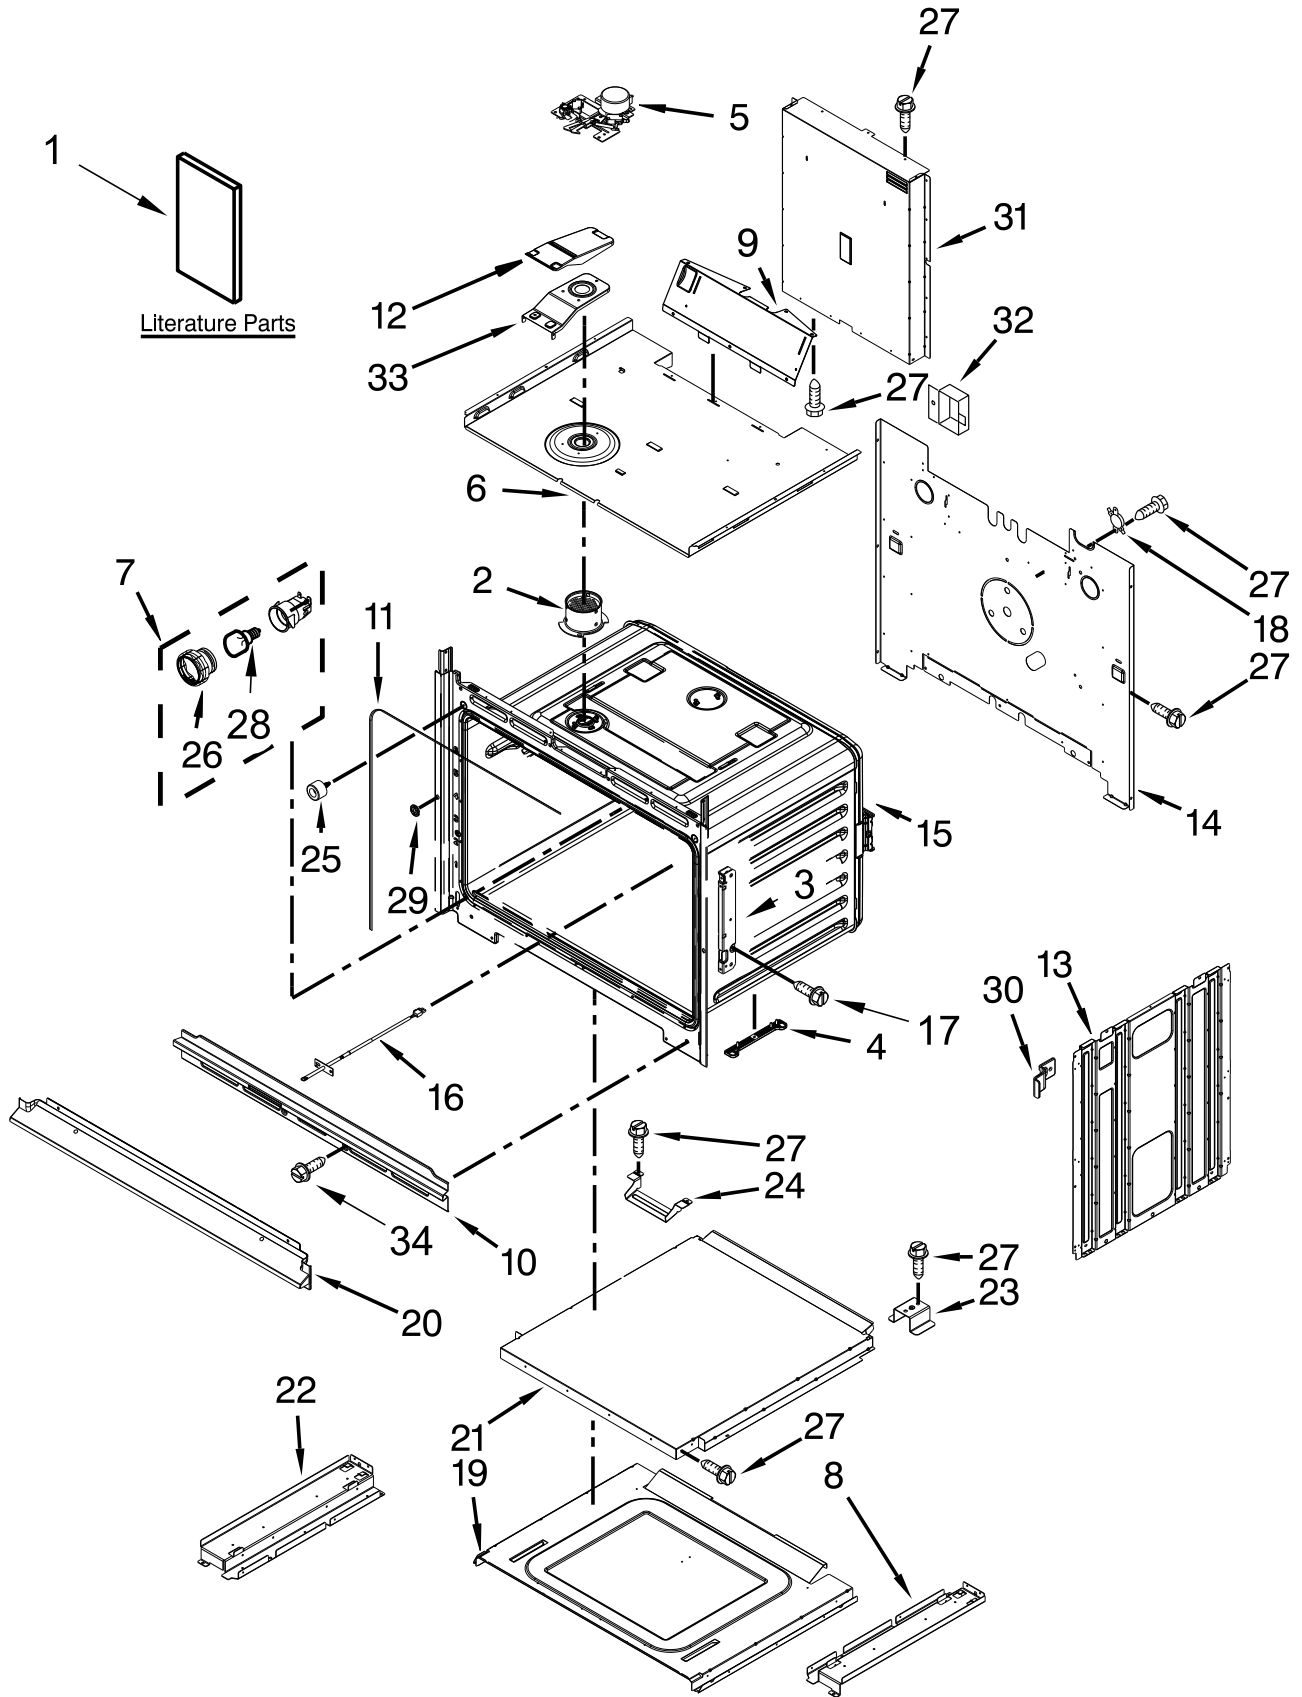


OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10696163	Instructions, Installation
	W10875903	Guide (Oven), Use & Care
	W10875904	Guide (Microwave), Use & Care
	W10796080	Sheet, Tech
2	W10282946	Tube, Vent
3	W10616802	Receiver, Hinge
4	W10618102	Spacer, Base
5	W10618131	Latch, Motorized
6	W10813743	Top, Chassis
7	W10734063	Assembly, Light
8	W10283021	Support, Base (Right)
9	W10641572	Deflector, Blower
10	W10283042	Vent, Combo Center
11	W10282960	Gasket
12	W10616810	Cover, Vent Exhaust
13	W10318190	Side, Chassis

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10813703	Back, Chassis
15		Liner, Oven (Not Serviceable)
16	W10622170	Probe, Sensor
17	W10254050	Screw
18	4449751	Thermostat (TOD)
19	W10834867	Base, Chassis
20		Assembly, Bottom Vent
	W10869571	Stainless
21	W10283008	Chassis, Bottom Duct
22	W10283020	Support, Base (Left)
23	W10213759	Support, Air Channel
24	W10351308	Spacer, Chassis Bottom Duct
25	W10351278	Bumper & Screw
26	W10412722	Lens, Light
27	7101P426-60	Screw
28	W10412711	Bulb, Light
29	W10283016	Grommet, Front Frame

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
30	W10347649	Spacers, Front
31	W10519703	Cover, Back Duct
32	8285593	Cover, Connector
33	W10616809	Base, Vent Exhaust
34	W10607120	Screw
		Following Parts Not Illustrated
	W10520715	Insulation, Wrap
	W10282944	Insulation, Cavity
	W10778561	Harness, Main
	W10775068	Harness, Door Latch
	W10778562	Harness, Communication
	313438	Clip, Harness
	W10392129	Strap, Ground
	4450800	Screw, Grounding
	4450950	Conduit, Combo
	4448664	Clamp, Conduit


CONTROL PANEL PARTS

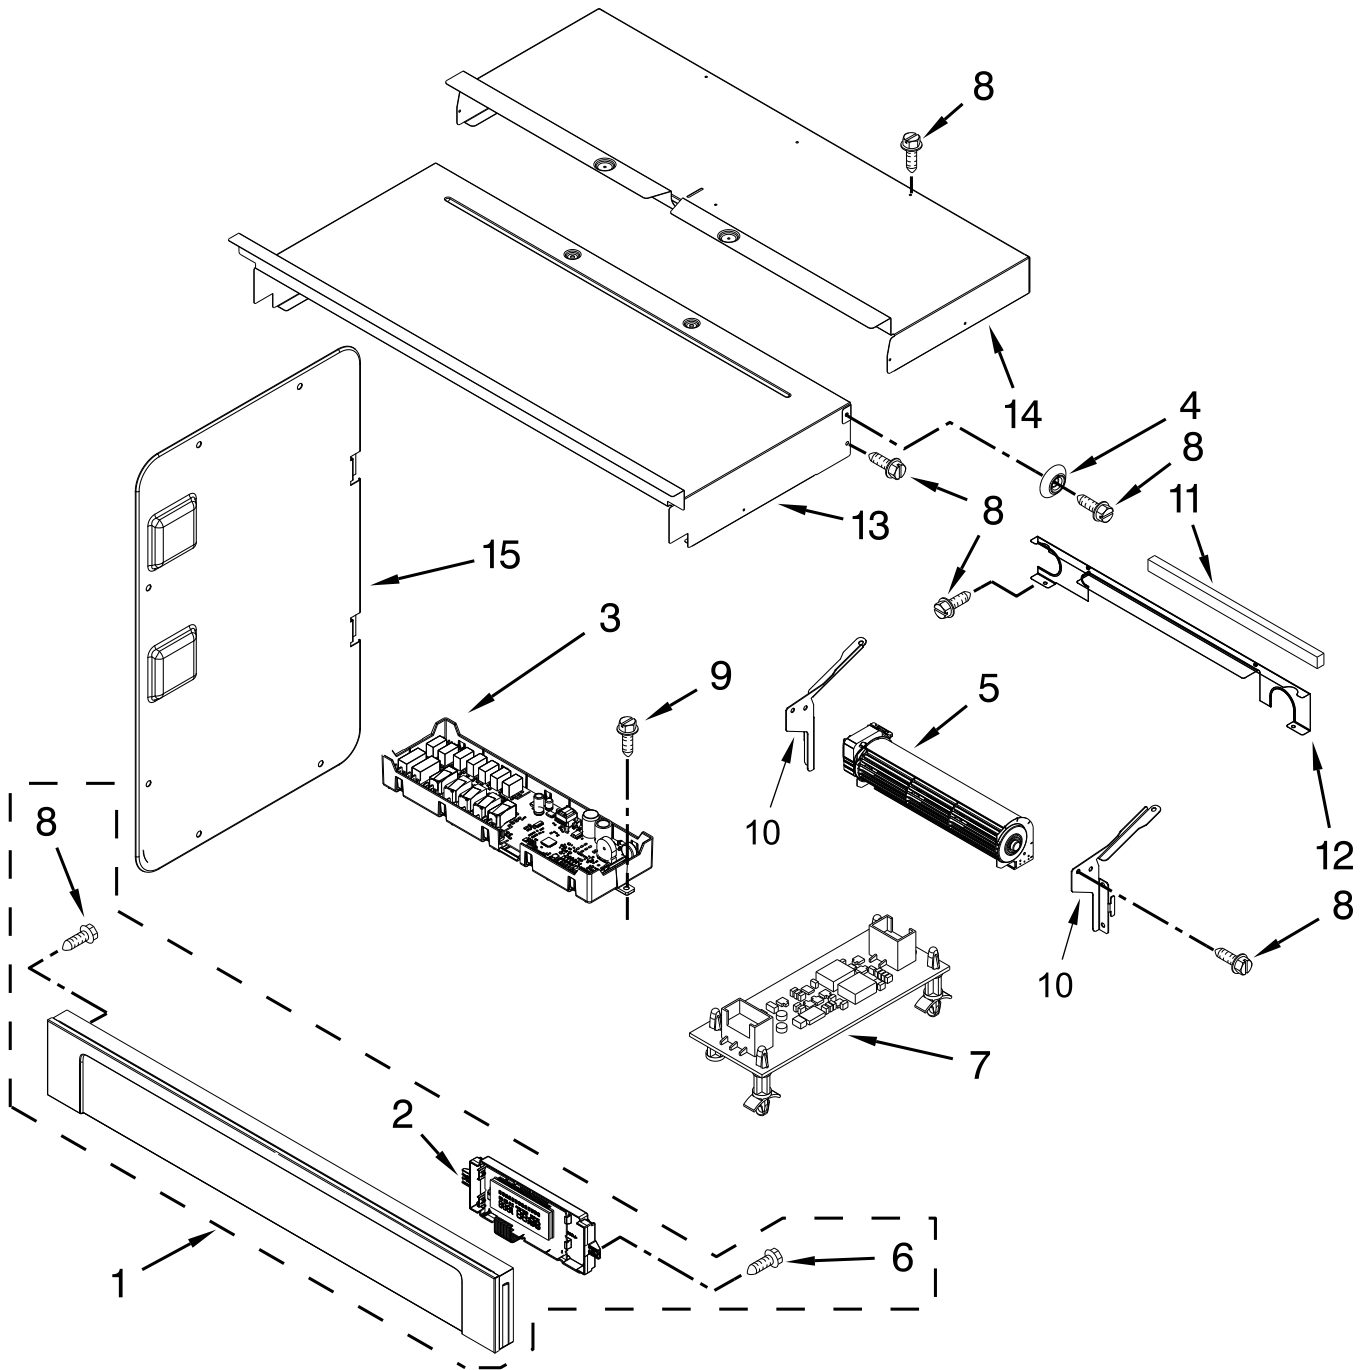

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Control Panel (Includes Overlay)	6	7101P403-60	Screw	11	4451758	Block, Foam
	W10877221	Stainless	7	W10412514	Board, Wide Interface	12	W10618126	Chassis, Back Divider
2	W10752316	Board, Display MRC2	8	7101P426-60	Screw	13	W10318158	Chassis, Cover Top Front 30"
3	W10882112	Board, MRC2 Main	9	7101P434-60	Screw	14	W10283031	Chassis, Cover Top Back 30"
4	W10618105	Spacer, Lateral	10	W10655463	Bracket, Blower (Left)	15	W10655467	Chassis, Combo Side
5	W10661038	Blower		W10655462	Bracket, Blower (Right)			


OVEN DOOR PARTS

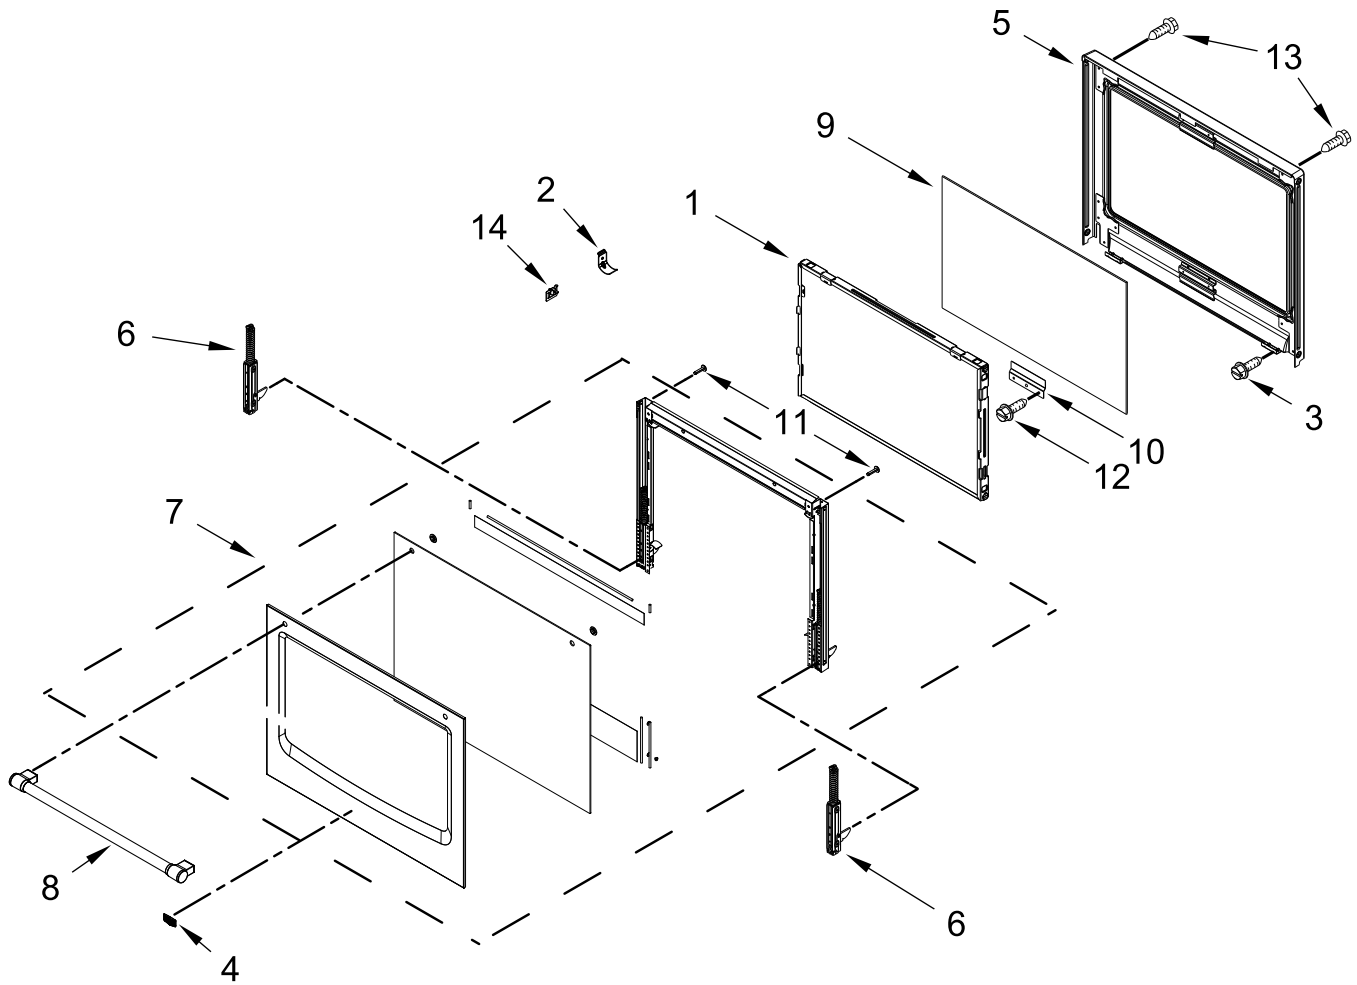

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	7		Assembly, Door Glass	11	W10480830	Screw
2	W10284285	Spring, Door Glass Fixation		W10879748	Stainless	12	7101P426-60	Screw
3	3196183	Screw	8		Assembly, Door Handle	13	7101P635-60	Screw (Black)
4	W10612925	Badge		W10834521	Stainless	14	W10653954	Clip, Spring Metal
5	W10709147	Assembly, Liner	9	W10678524	Glass, Inner			
6	W10639069	Hinge, Door	10	W10284297	Bracket, Glass			

INTERNAL OVEN PARTS

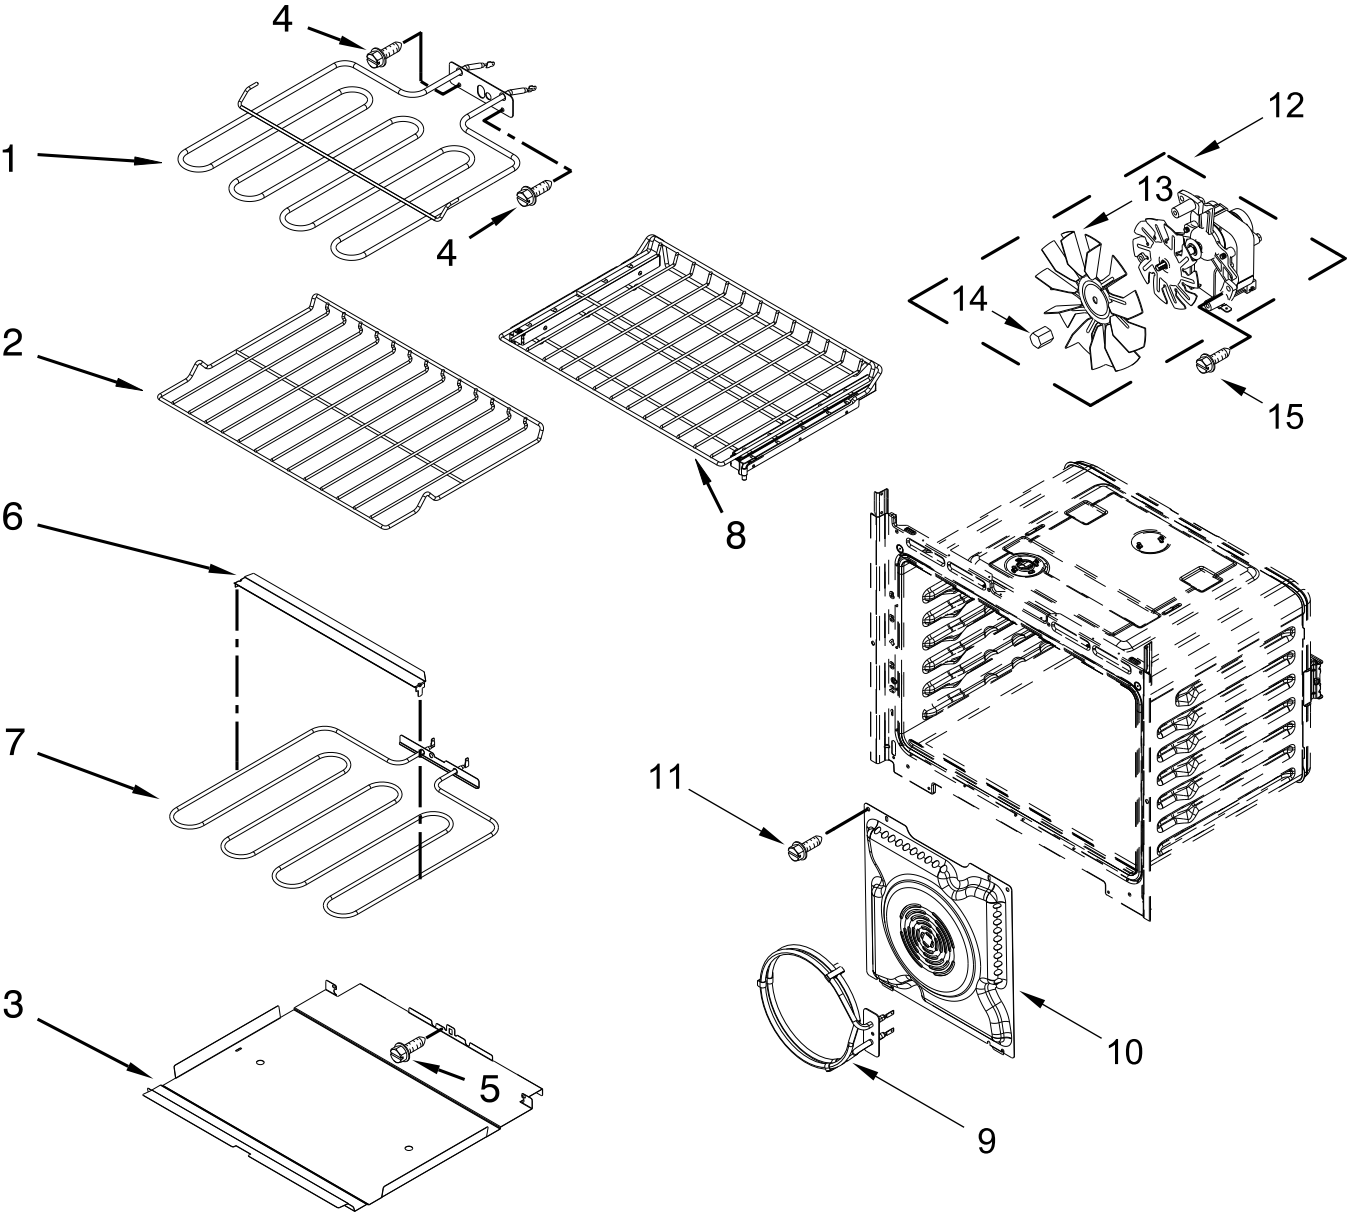



INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil
2	W10282967	Rack, Oven
3	W10318198	Tray, Hidden Bake
4	7101P434-60	Screw
5	7101P426-60	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	W10282957	Crossbar, Hidden Bake Tray
7	W10546517	Element, Bake
8	W10282973	Rack, Sliding
9	W10260248	Ring, Element
10	W10359278	Baffle, Convection

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	7101P500-60	Screw
12	W10722667	Fan, Convection
13	W10631503	Blade, Fan
14	W10631504	Nut, Acorn
15	W10720084	Screw

CABINET AND STIRRER PARTS

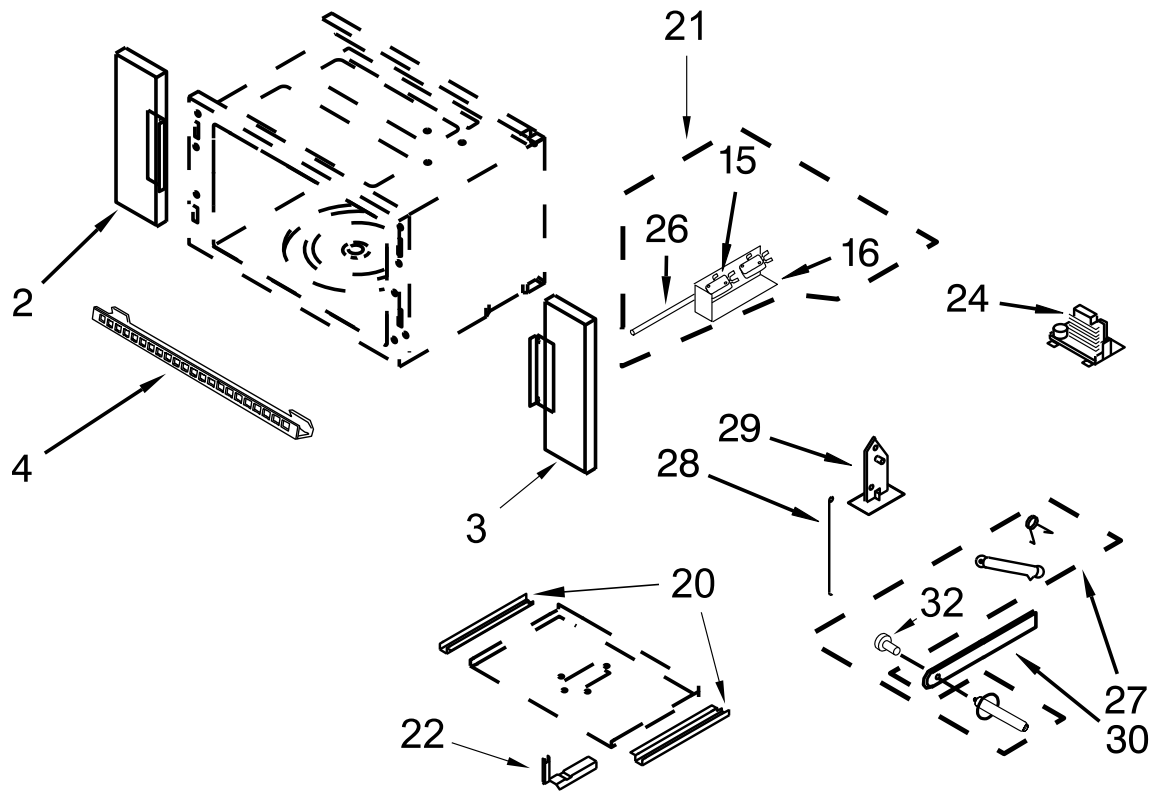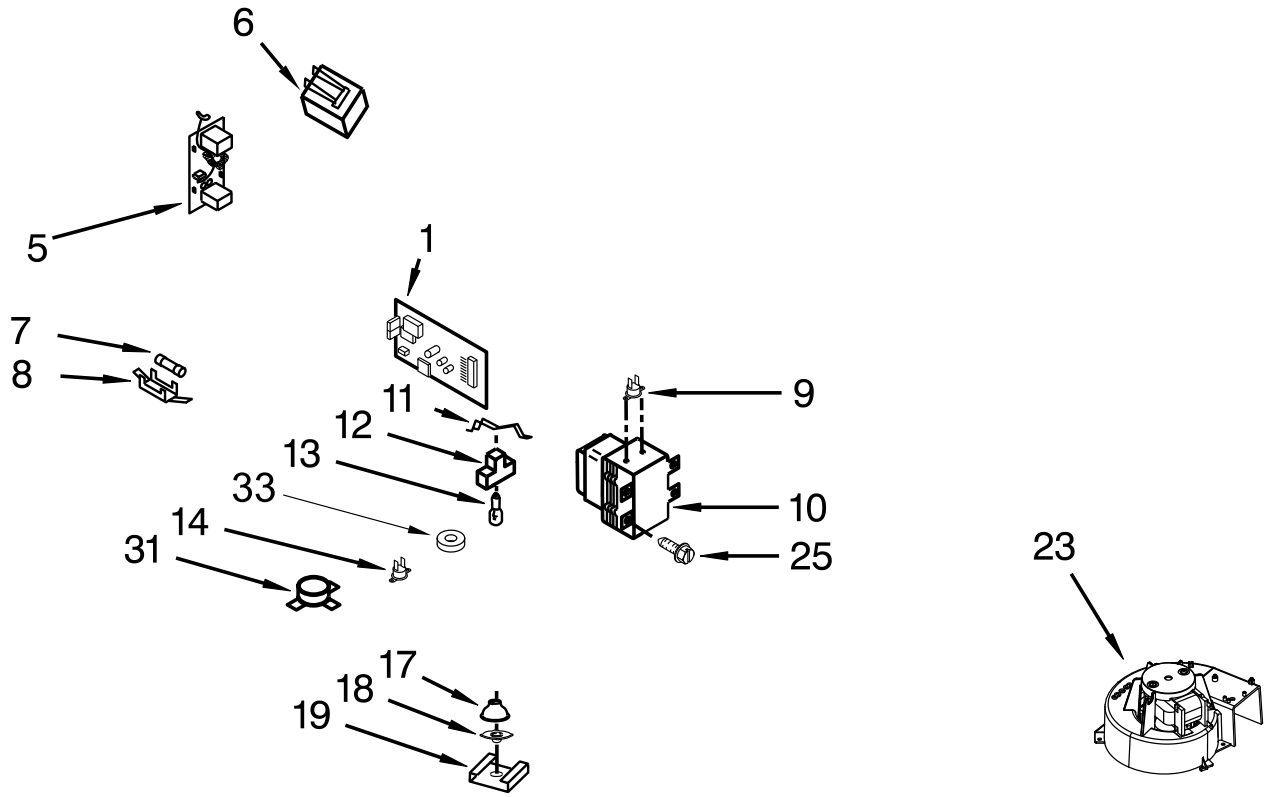


CABINET AND STIRRER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10586836	Control, Electric
2	461967017491	Trim, Side (Left)
3	W10367739	Trim, Side (Right)
4	461968973241	Vent, Top Microwave
5	W10692851	Filter, Noise
6	461967848621	Transformer, Light (20V)
7	241908600053	Fuse
8	4375231	Block, Fuse
9	461967846741	Thermostat, Magnetron
10	461967847321	Magnetron
11	W10465869	Spring, Lamp
12	W10490593	Holder, Lamp

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10795595	Lamp, Halogen
14	W10389447	Thermostat
15	W10330566	Switch
16	8205683	Holder, Switch
17	423107022541	Reflector
18	423107720491	Lens, Lamp
19	461967010591	Clip, Spring
20	461967008461	Support, Bottom
21	W10371814	Harness, Interlock
22	461968979601	Hinge, Door
23	461968969271	Assembly, Cooling Fan
24	W10468206	Inverter
25	461967825971	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
26	W10120235	Rod, Release
27	W10128850	Assembly, Sliding Arm
28	461967570351	Spring, Torsion
29	461967750494	Support
30	461967750483	Arm, Sliding
31	W10460457	Sensor, Humidity
32	461967510191	Bushing
33	W10769147	Sealing, Lamp
		Miscellaneous Parts
	W10389372	Harness, Fan & Turntable
	W10406103	Harness, Inverter


INTERNAL MICROWAVE PARTS

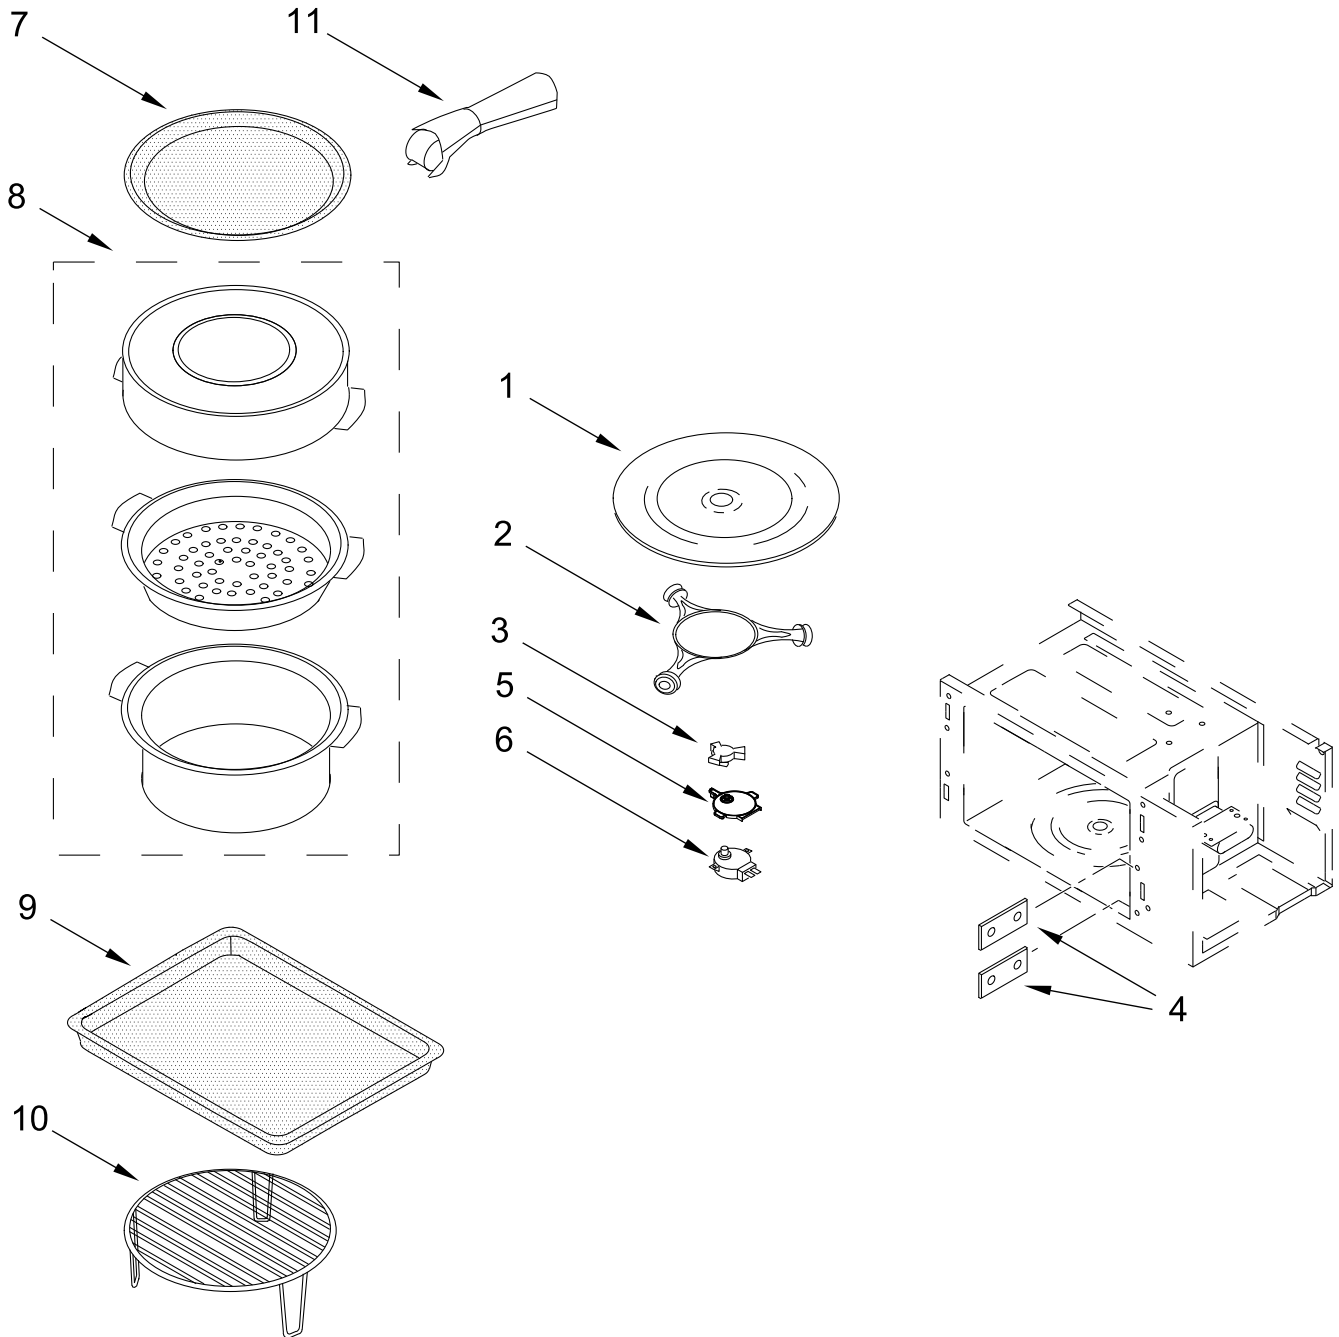

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461967720541	Turntable	6	461967848971	Motor, Turntable	9	W10120486	Plate, Baking
2	W10367316	Ring, Turntable			Following Accessories Not Included	10	W10120483	Rack
3	W10545578	Drive, Turntable	7	W10120480	Plate, Crisp	11	W10120481	Handle, Pan
4	461967451001	Plate, Cover	8	W10120484	Steamer			
5	461967753742	Adapter, Turntable Motor						

TOP VENTING PARTS

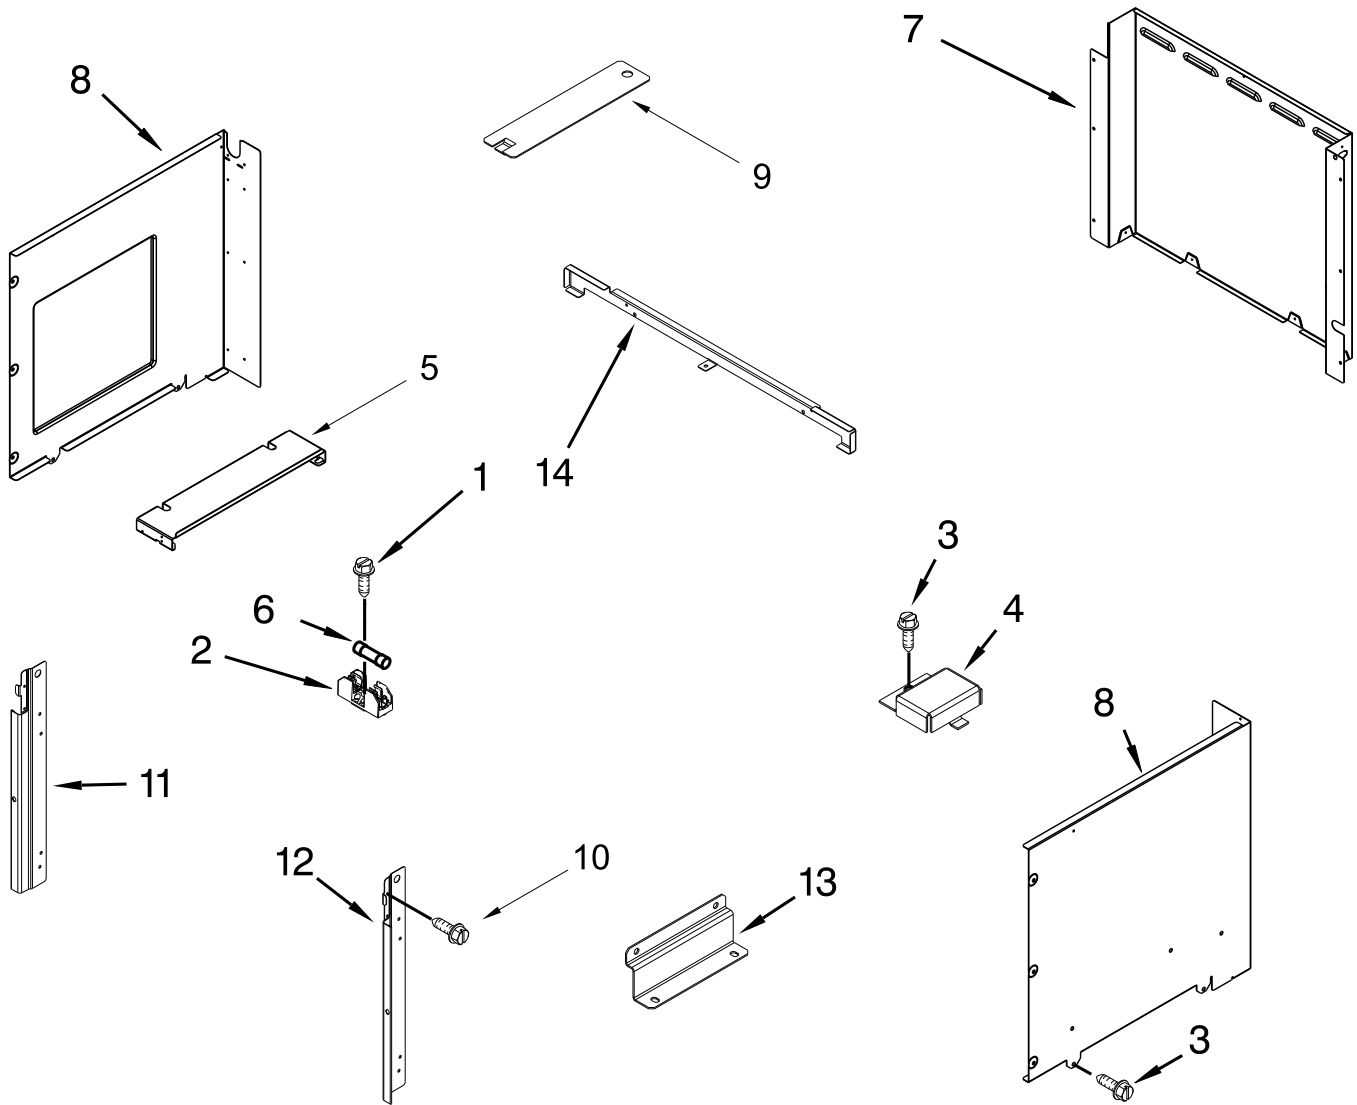


TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P060-60	Screw
2	4454949	Holder, Fuse
3	7101P426-60	Screw
4	8285593	Cover, Connector
5	W10356644	Support, Microwave Module
6	W10017410	Fuse, Time Delay
7	W10519707	Cover, Back Duct

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10655466	Chassis, Combo Side (Left)
	W10283029	Chassis, Combo Side (Right)
9	W10356437	Cover, Slot Module
10	3400832	Screw (Black)
11	W10360516	Rail, Side (Left)
12	W10360518	Rail, Side (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10283024	Side, Bracket
14	W10283022	Support, Crossbar

MICROWAVE DOOR PARTS

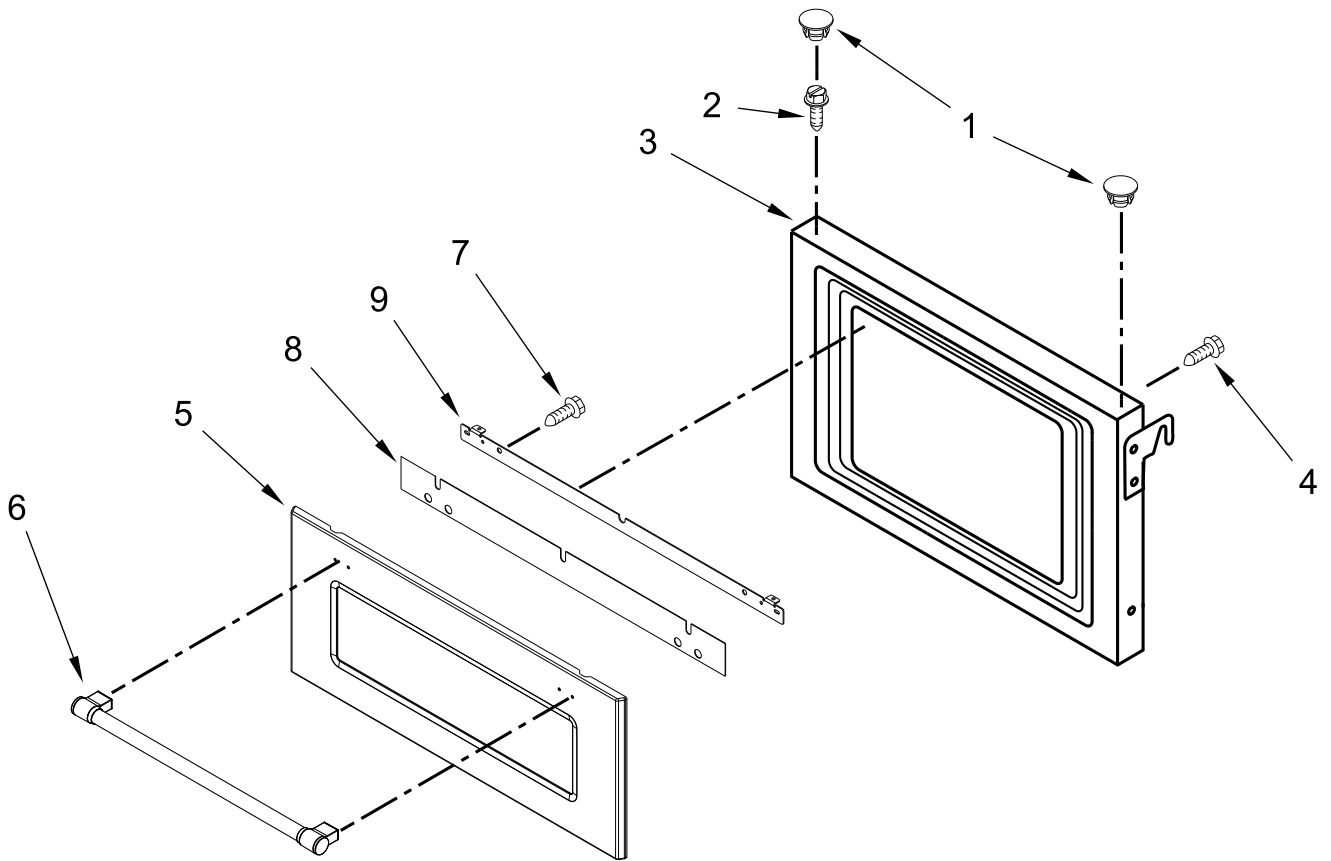

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5		Assembly, Outer Door	7	7101P338-60	Screw
2	4449040	Screw		W10879763	Stainless	8	W10359769	Foam, Door Handle
3	W10687342	Assembly, Inner Door	6		Assembly, Door Handle	9	W10407600	Bracket, Balancing Door
4	4449154	Screw		W10834521	Stainless			

OPTIONAL PARTS

PAINTE, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINTE, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque
	350956	Almond
	350938	Gray Primer
	350942	White Primer

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite