

## OPERATING INSTRUCTIONS

FV-GKF32S1

### GENERAL INFORMATION


Observe the following

1. Secure parts firmly.  
There is a danger of getting injured due to falling.
2. Do not use heat for drying after cleaning.
3. Never use petrol, benzene, thinner or any other such chemicals for cleaning plastic parts.
4. Since cleaning of the unit accompanies a work at an elevated place, provide a sufficient protection against falling dust and for footing.
5. In particularly hot season or when humidity in a room is extremely high, dew may condensate on inside surface of the unit. It must be wipe with a cloth.



### NAME OF EACH PART

### HOW TO USE

- Check the model No.

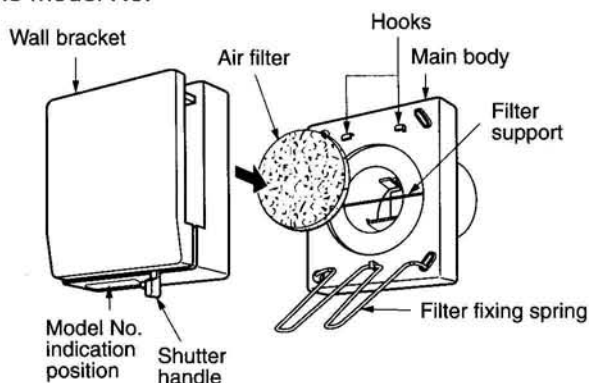

Rear side of the wall bracket

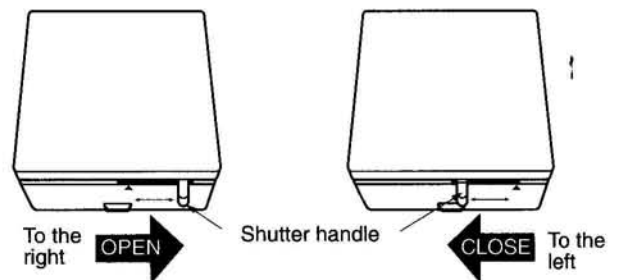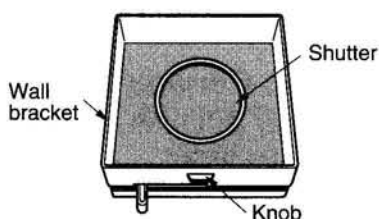

- Move the shutter handle to the right all the way to keep the shutter open.
- If outside noise is bothersome, move the shutter handle to the left all the way to close the shutter.
- In heavy snowstorm, rainfall or typhoon, close the shutter temporarily.


# HOW TO MAINTAIN (EVERY 6 MONTHS)

■ Cleaning frequency of the filter differs depending on whether it is used as an air intake or outlet. Clean more often if the filter seems to contaminate quickly.

## Wall bracket


### ■ How to remove

- ① Close the shutter.
- ② Pinch the knob with fingers and hold the wall bracket.
- ③ Pull the wall bracket to the front.

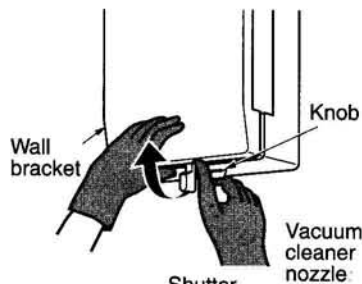


### ■ Cleaning

- ① Remove dust and dirt from the shutter and around the wall bracket using a vacuum cleaner.
- ② Using a cloth dampened with a non-abrasive kitchen detergent, remove any dirt from the body. Wipe it dry with a clean cloth.

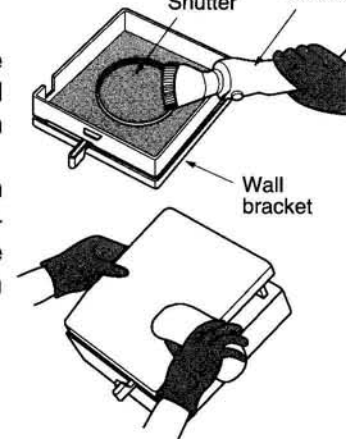

## Main body

Remove the air filter according to the procedures explained in Air Filter, and remove dust on the main body with a vacuum cleaner.

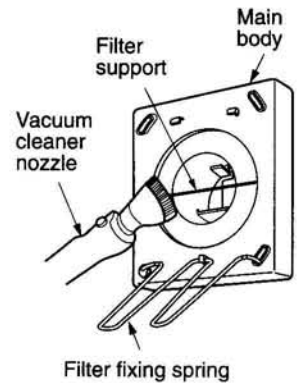

### ■ Cleaning

Using a cloth dampened with a non-abrasive kitchen detergent, remove any dirt from the body. Wipe it dry with a clean cloth.




- Be careful not to deform the filter fixing spring.

## Air Filter

### ■ How to remove


- ① Hold and squeeze the filter fixing spring by hand to remove it from the hooks (2 places), and let the spring hang.
- ② Pinch the filter from the top to remove.

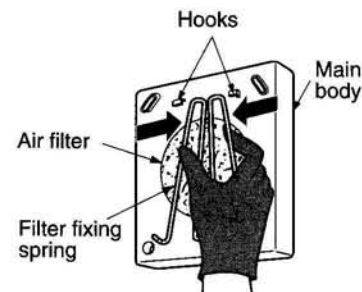

### ■ Cleaning


Remove dust and dirt with a vacuum cleaner.

\* If the filter is severely contaminated, immerse and wash it in lukewarm water containing a non-abrasive kitchen detergent, and then let it dry naturally. (Do not rub when washing. The filter may shrink.)

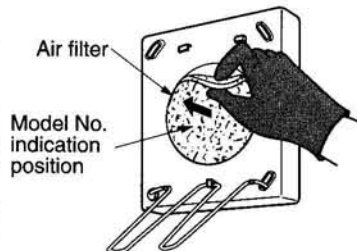

## Assembling after maintenance

- ① Attach the filter in the reverse order of removal. (The filter fixing spring should be latched to the hooks firmly.)
- ② The louver knob should be pushed in all the way toward the BOTTOM mark on the main body in order to mount the wall bracket.
- ③ Move the shutter handle to open the shutter.

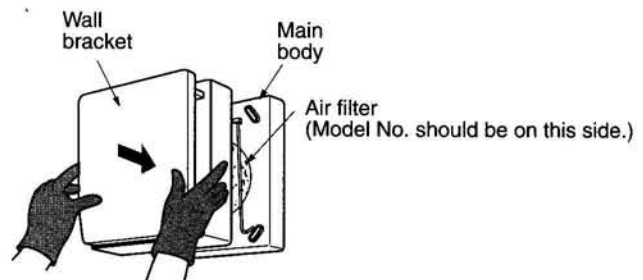

- The filter should be washed every six months.
- The air filter should be replaced with a new one after washing it five to six times at intervals stated above. (Air filter part No. FY-FB12 (sold separately))
- Air filters are made of polyester. Follow local regulations when discarding it.

**Panasonic Consumer Electronics Company,  
Division of Panasonic Corporation of North America**

One Panasonic Way, Secaucus, NJ07094

www.panasonic.com

**Panasonic Canada Inc.**

5770 Ambler Drive Mississauga,  
Ontario, L4W 2T3