

Please go to www.quoise.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: LED 56W

Fixture Hanging Height: Minimum Hanging Height is 22.25", Maximum Hanging Height is 114.25".

Estimated Assembly Time: 30-45 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Package Contents

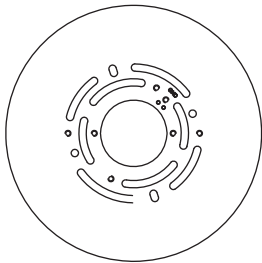


A Inner Backplate x 1

 

B Mounting Screw x 2



C Allen Wrench x 1

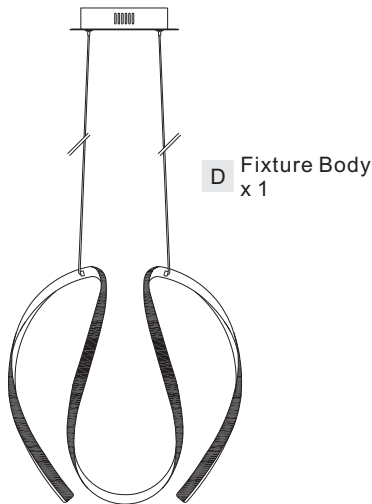

D Fixture Body x 1

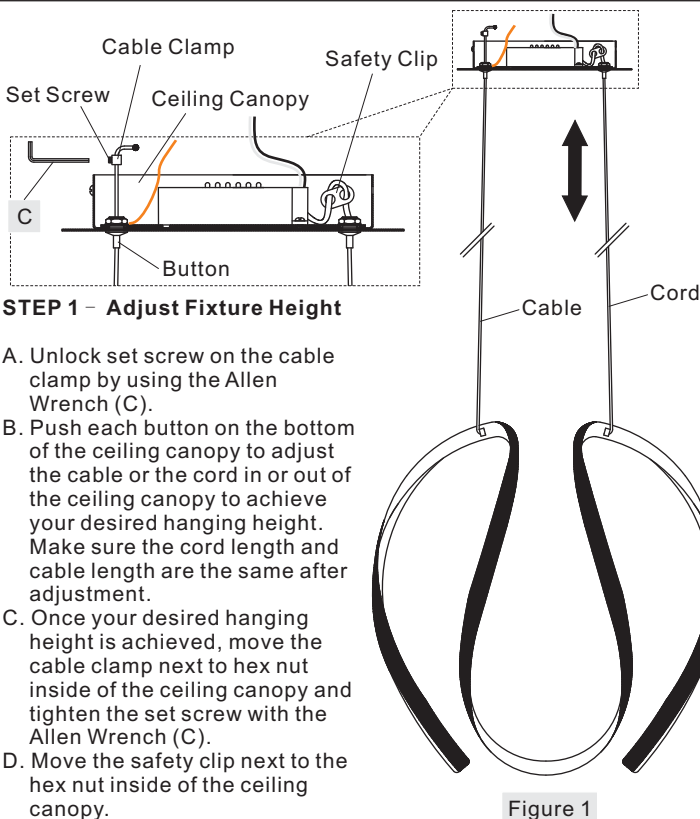


Figure 1

STEP 1 – Adjust Fixture Height

- Unlock set screw on the cable clamp by using the Allen Wrench (C).
- Push each button on the bottom of the ceiling canopy to adjust the cable or the cord in or out of the ceiling canopy to achieve your desired hanging height. Make sure the cord length and cable length are the same after adjustment.
- Once your desired hanging height is achieved, move the cable clamp next to hex nut inside of the ceiling canopy and tighten the set screw with the Allen Wrench (C).
- Move the safety clip next to the hex nut inside of the ceiling canopy.

STEP 2 – Attach Inner Backplate to Outlet Box

A. Attach the Inner Backplate (A) onto the outlet box and secure with outlet box screws (not included). Hand tighten until snug with screwdrivers.

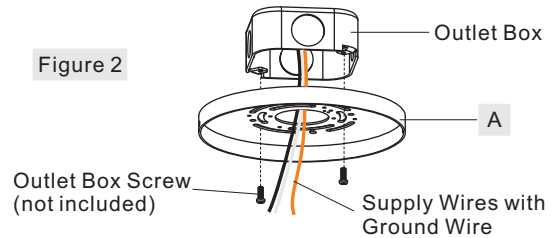


Figure 2

STEP 3 - Wire Connections

- Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

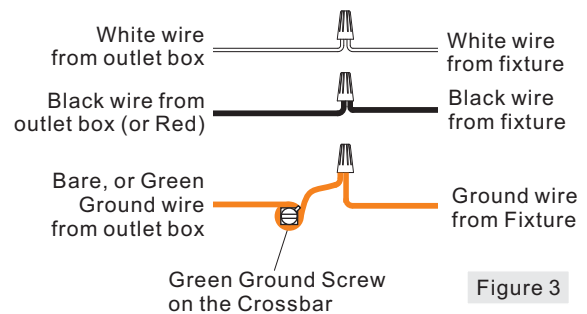


Figure 3

STEP 4 – Attach Ceiling Canopy to Inner Backplate

- Fit excess cord and electrical wires in the ceiling canopy properly. Line up the holes on the side of the ceiling canopy to the mounting holes on the Inner Backplate (A). Secure them with Mounting Screws (B). Tighten until snug. Your fixture is now assembled and ready to use. Enjoy!




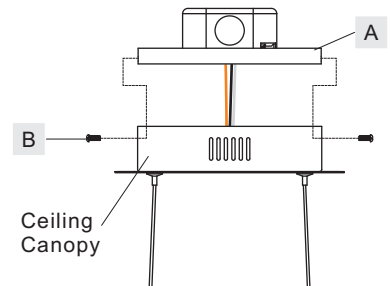


Figure 4

PCWN2818EK

FINISH: EARTH BLACK

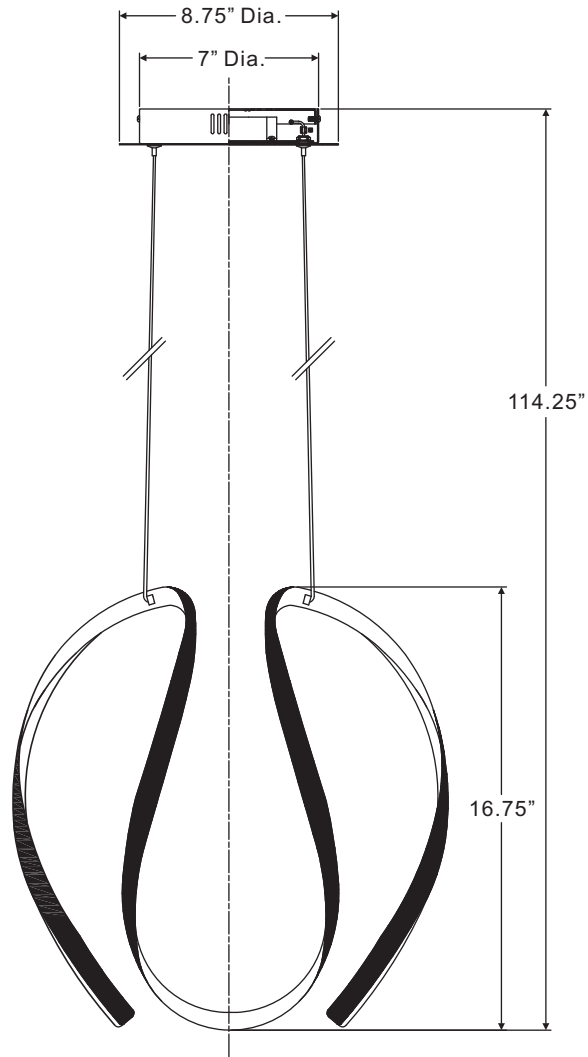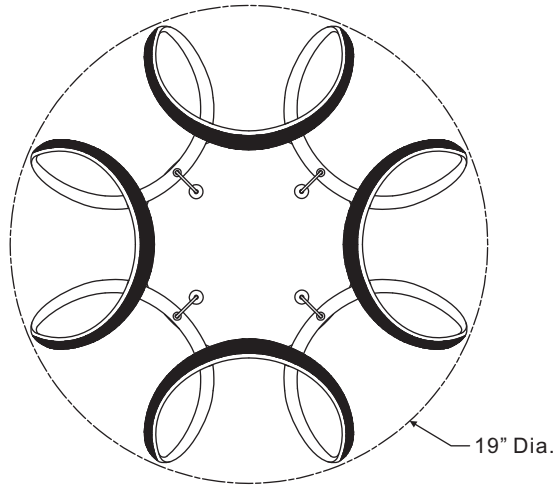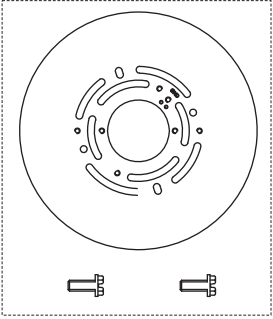

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"