

## Installation Guide For Style PCSC1813C

# **Tools Required**

## **Light Source**





Medium (E26) **TYPE A** 

1BULB REQUIRED BULBNOTINCLUDED

# Fixture Height Adjustable 15" to 100"

## ⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

### **Package Contents**

**Preparation**: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.









**Outlet Box Screw** 



D Wire Connector



E Fixture Body

#### Table of **Contents**



Crossbar

STEP 2















