

# Installation Guide For Style PCSH2818BCH

# Tools Required

### **Light Source**

LED

# Fixture Height Adjustable 10" to 100"


## **⚠** Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

### **Package Contents**


**Preparation**: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

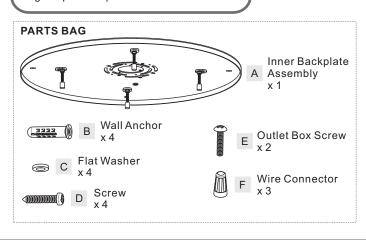

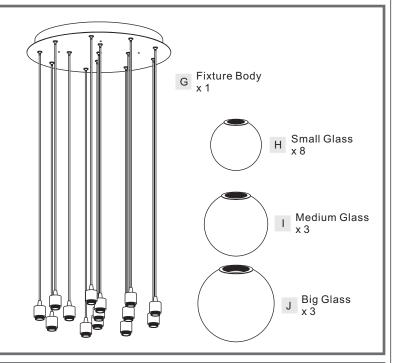

# Table of Contents

 

Inner Backplate Assembly



Lanyard

STEP 3

