

© 2018 Quoizel Inc.

Assembly Instruction Sheet #IS-ER353DI For Style ER353DI

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (3) Medium Base bulbs 100W Maximum

Estimated Assembly Time: 30-45 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

△ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

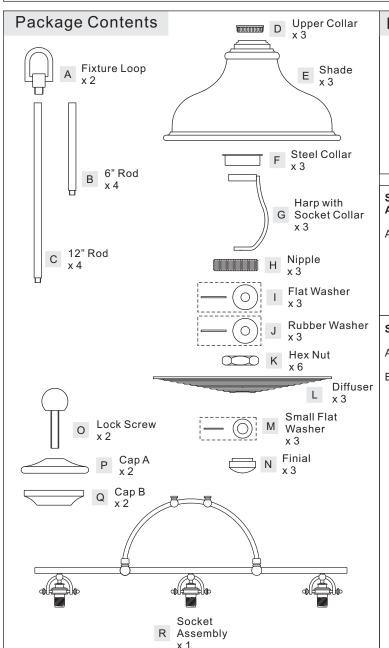


 Hardware Contents BB Ceiling Canopy x 1 Crossbar AA Assembly x 1 Crossbar AT Assembly x 1



STEP 2 - Assemble the Rods and the Fixture Loop

- A. Determine the Rods (B/C) to be assembled to the Socket Assembly (R) according to your hanging height.
- B. Pass the supply wires and ground wire through the chosen rods (B/C) and the Fixture Loop (A). Thread the Socket Assembly (R), the chosen Rods (B/C) and the Fixture Loop (A) together. Hand tighten until snug.

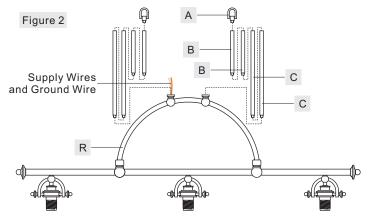


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184

or visit us on-line at www.quoizel.com

STEP 3 - Install Fixture Chains

 - A. Adjust the Fixture Chain (CC) to your desired length by removing the links if needed.
- * Pliers is required for this step.
- B. With the Fixture Chain (CC) not attached to the Fixture Loop (A) and the Canopy Chain Loop, pull the supply wires through the Fixture Chain (CC) alternating links. After the wires are through the Fixture Chain (CC), pull the Supply Wires and the Ground Wire through the Ceiling Canopy (BB).



C. Attach one ends of the Fixture Chains (CC) to the Fixture Loop (A) with two

Quick Links (DD) as shown. Lift the fixture and Fixture Chains (CC) up and attach the other ends of the Fixture Chains (CC) onto the Canopy Chain Loop underside of the Ceiling Canopy (BB) with the rest two Quick Links (DD).


Suggested rods and chain length for Ceiling height:

8' ceiling: use (1)6" rod and 2 quick links

9' ceiling: use (1)12" rod, 5 links of chain and 2 quick links 10' ceiling: use (2)12" rods, 5 links of chain and 2 quick links


STEP 4 - Separate parts from Crossbar Assembly

A. Remove the Finial, the Covers, and the Lock Washer from the Crossbar Assembly (AA).

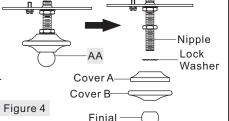

STEP 5 - Install Crossbar


A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

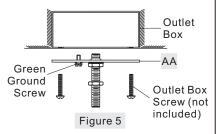

STEP 6 - Making the Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.

Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire

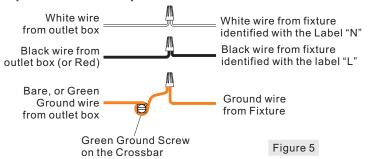

(Step 6 Continued)

ВВ

Loop

DD

СС


DD

Ceiling

before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed.


STEP 7 - Install Ceiling Canopy

A. Attach the Lock Washer, the Ceiling Canopy (BB) and the Covers over the end of the Nipple as shown. Secure by threading the Finial onto the Nipple. Hand tighten until snug.

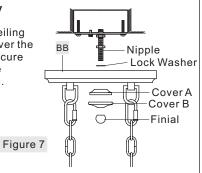


STEP 8 - Install Shade

A. Place the Upper Collar (D), the Shade (E) and the Steel Collar (F) in turn and secure with the Harp with Socket Collar (G). Hand tighten until snug.

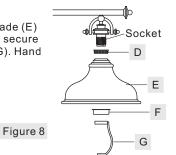

STEP 9 - Install Bulbs

A. Insert bulbs onto sockets and screw snugly into place.

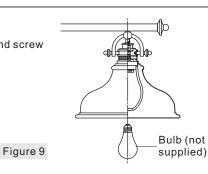

STEP 10 - Install Diffuser

A. Thread one Hex Nut (K) to the Nipple (H) approx half way. Screw the Nipple (H) into the bottom end of the Harp (G) and tighten until snug. By using pliers, thread the Hex Nut (K) against the Harp (G) and hand tighten until snug.

B. Thread another Hex Nut (K) onto the end of the Nipple (H) and adjust it to proper location for rest components. Attach the Flat Washer (I), the Rubber Washer (J), the Diffuser (L) and the Small Flat Washer (M) over the Nipple (H) in turn. Secure them with the Finial (N) and hand tighten until snug.

Your fixture is now assembled and ready to use. Enjoy!

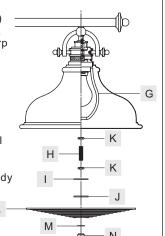


Figure 10

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com

© 2018 Quoizel Inc.

Released Date: 2018-01-29

