


Spare Parts
Pièces Détachées
Repuestos

CY652L

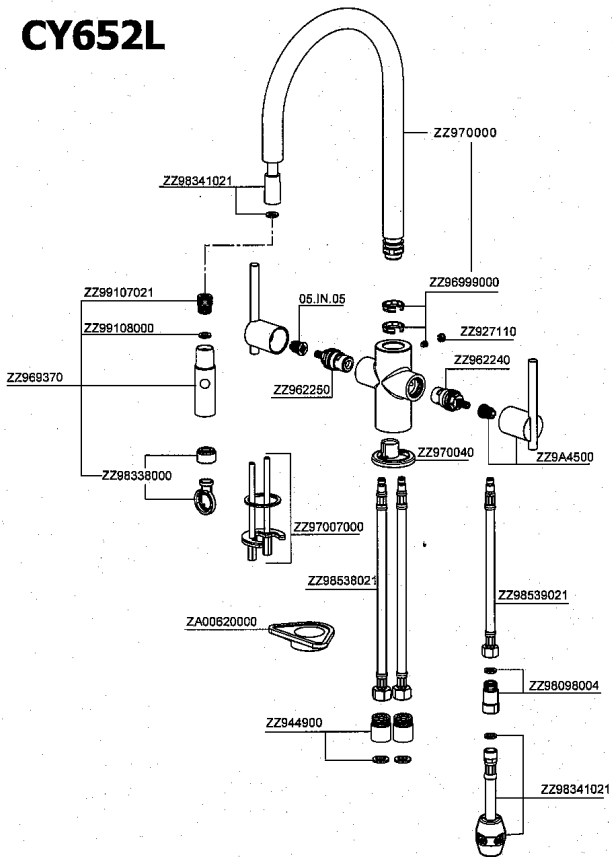

Finish Care

Maintaining Your Faucet Finish

No matter which finish you select, here are a few simple steps to keep your ROHL kitchen and bath fixtures looking beautiful for years:

- Daily, pat the fixture dry with a soft cloth after each use - this is the single most important care you can give any finish!
- Occasionally, use a mild clear liquid soap with a neutral PH balance and water to gently clean your faucet. Do not use Dove or anti-bacterial soap. These products will leave a residue that could harm your finish.
- When necessary, a 50/50 solution of vinegar and water can be applied to remove hard water deposits. Do not soak the product in the solution. Vinegar is a mild acid which will harm the finish with prolonged contact.
- Avoid all cleaning products that contain ammonia, bleach, and alcohol. They may damage the finish. Use clear liquid soap with a neutral PH balance.
- Care and use products mentioned in this brochure may be ordered through your local ROHL retailer.

1. WIPE DOWN AFTER USE TO AVOID SPOTTING
2. USE A SOFT CLOTH FOR DETAIL CLEANING
3. DO NOT USE SPRAY CLEANERS WITH AMMONIA, ALCOHOL OR BLEACH
4. DO NOT USE ABRASIVES LIKE COMET, AJAX OR BONAMI

FINISH	CLEANING	CARE
POLISHED CHROME	50/50 VINEGAR AND WATER	FLITZ WAX OR ROHL DECORATIVE CLEANER
SATIN NICKEL	50/50 VINEGAR AND WATER	FLITZ WAX OR ROHL DECORATIVE CLEANER
POLISHED NICKEL	50/50 VINEGAR AND WATER	FLITZ WAX OR ROHL DECORATIVE CLEANER

FOR WATER SPOTTING ON POLISHED CHROME, USE SIMICHROME PASTE.