


Spare Parts List & Diagram

DHC Series

No.	Spare part	DHC 3-1	DHC 3-2	DHC 4-2	DHC 4-3	DHC 5-2	DHC 6-2	DHC 8-2	DHC 9-3	DHC 10-2
1	Heating system	165889	167769	167770	165890	167771	171117	167772	296874	167773
2	Flow switch	165273	165273	162162	162162	162162	171105	162164	162465	162165
3	Thermostat	162472	162472	162472	162472	162472	162472	162472	162472	162472
4	Switch	168026	168026	168026	168026	168026	168026	168026	168026	168026
5	Housing (back)	165891	165891	165891	165891	165891	165891	165891	165891	165891
6	Plumbing connection	170789	170789	170789	170789	170789	170789	170789	170789	170789
7	Housing (front)	165892	165892	165892	165892	165892	165892	165892	165892	165892
8	Safety thermal cut out	162474	162474	162474	162474	162474	162474	162474	162474	162474
9	Wiring block	026010	026010	026010	026010	026010	026010	026010	026010	026010
10	Copper tube	162314	162314	162314	162314	162314	162314	162314	162314	162314
11	Module chassis	162462	162462	162462	162462	162462	162462	162462	162462	162462
12	Wire strain relief clamp	055754	055754	055754	055754	055754	055754	055754	055754	055754
13	Filter screen	275981	275981	275981	275981	275981	275981	275981	275981	275981

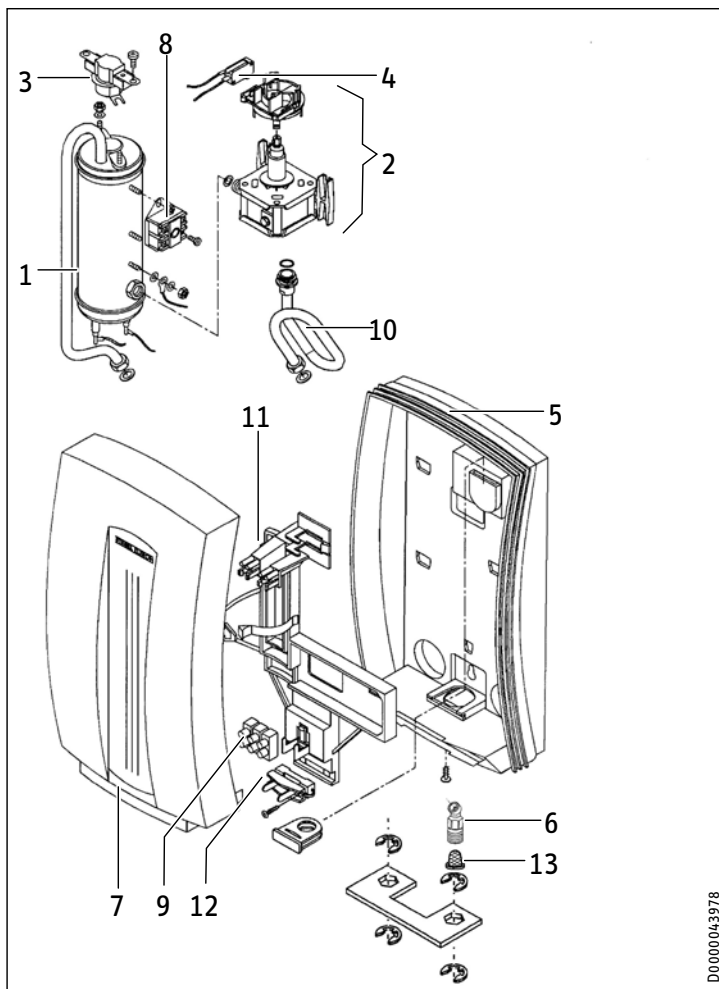

D000004-3978