

# INSTALLATION INSTRUCTIONS

For Outdoor Lantern (Rev. 31/08/2011)

READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**

**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

## PREPARATION (Fig.1)

1. Shut off power at the circuit breaker and remove the old fixture including mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to misplace any small part necessary for installation.

## CONNECTING THE WIRES (Fig.2)




3. Pull the black, white and ground wires out of post (F).
4. Next, connect electrical wires while supporting the lantern. If your outlet has a ground wire (green or bare copper), connect the fixture ground wire to it. If not, consult your electrician for proper grounding. After wires are connected, tuck them carefully inside the post. Align the lantern with post and secure with screws (E). (Fig.1&2)

## COMPLETING THE INSTALLATION

5. Install the PL bulb (B) (included) into socket (D) in accordance with the fixture's specification. **(DO NOT EXCEED THE SPECIFIED WATTAGE!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**
6. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig 3.
7. This fixture is rated for a minimum start temperature of 0 degrees Fahrenheit (-17 degree Celsius).
8. This fixture is ETL Listed for Wet Location applications.
9. Place the glass shade (A) into fixture body (C).

Your installation is now complete. Return power to the junction box and test the fixture.

**Note:** Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

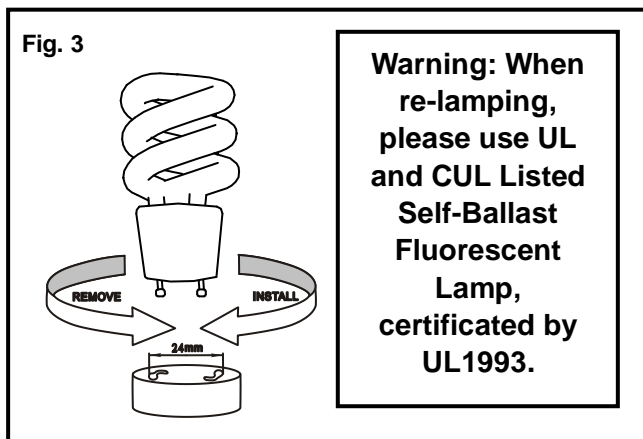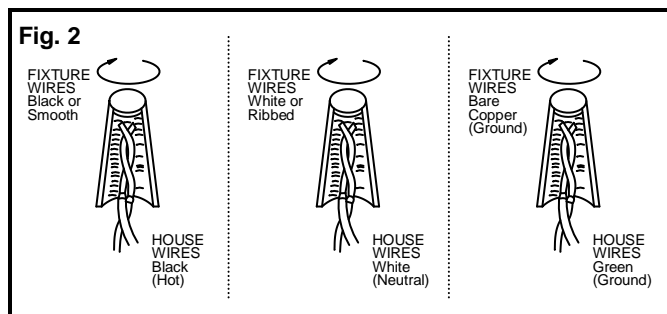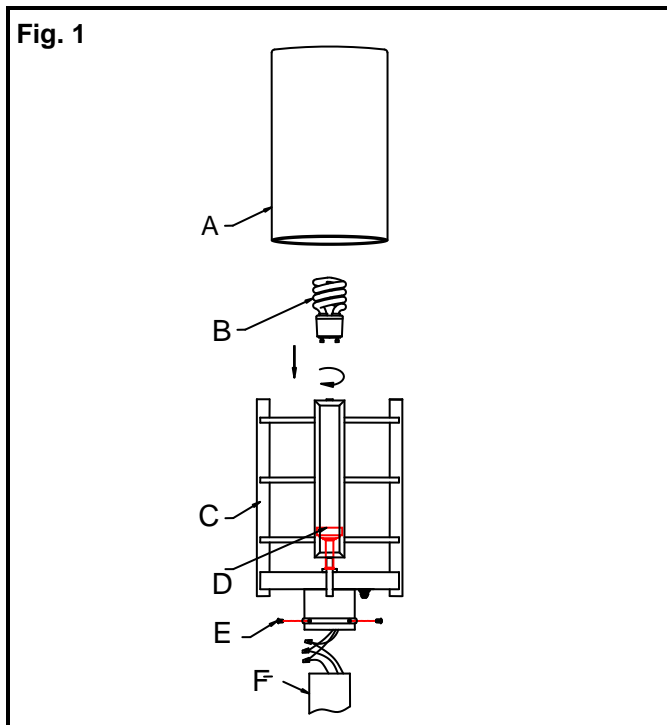

**Warning: When re-lamping, please use UL and CUL Listed Self-Ballast Fluorescent Lamp, certified by UL1993.**

LA-1157E-A



american  
lighting  
association