

INSTALLATION INSTRUCTIONS FOR 72122

For Wall Sconce Fixture

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER
AVERTISSEMENT! COUPER LE COURANT AUNIVEAU DES FUSIBLES OU DU DISJONCTEUR

MOUNTING THE FIXTURE (Fig.1)

1. Shut off power at the fuse box or circuit breaker box. (avertissement! couper le courant au niveau des fusibles ou du disjoncteur) If necessary, remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Remove screws (L) to separate the frame (K) from back plate (E).
4. Attach circular strap (M) to the junction box with mounting screws (C) (Size:8-32*1/2"L) . The side of the circular strap marked "GND" must face out.
5. Thread the two studs (A) (Size:8-32*1 3/8"L) into the pre-drilled holes in the circular strap (M) (Part#A-022) spaced the same distance apart as the holes in the back plate (E).

CONNECTING THE WIRES (Fig.2)

6. Connect the electrical wires as shown in Fig. 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the circular strap using the green screw (B) provided. Tuck the wire connections neatly into the junction box.

COMPLETING THE INSTALLATION (Fig.1)

7. Align back plate (E) onto studs (A), and secure with cap nuts (G).
8. To prevent moisture from entering the junction and causing a short, use clear silicone Sealant to outline the outside of fixture back plate where it meets the wall leaving a space at bottom to allow moisture a means to escape (Fig. 4)
9. Install the PL lamp in accordance with the fixture's specification (2xMax13W included). **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE)**
10. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig.3.
11. Align frame (K) to back plate (E) and secure with screws (L).
12. This fixture is rated for a minimum start temperature of -17° Celsius.
13. This fixture is ETL Listed for Wet Location applications.

Your installation is now complete. Return power to the junction box and test the fixture.

