



UTTERMOST

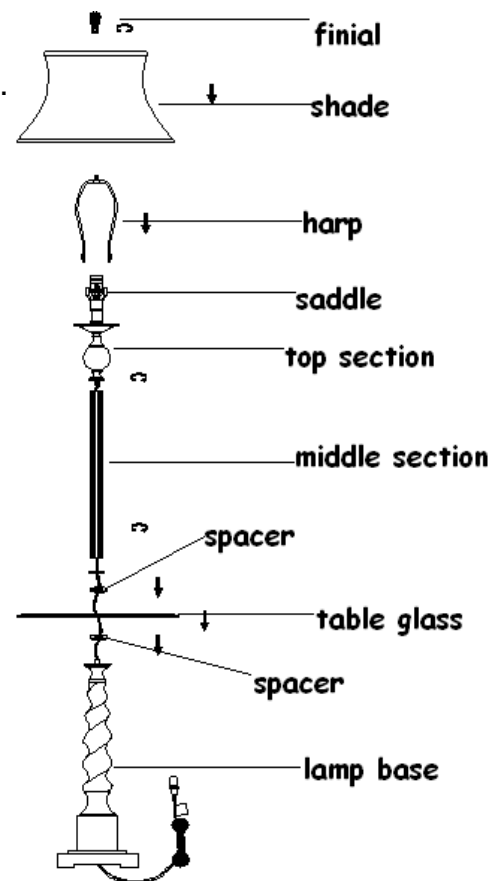
ASSEMBLY INSTRUCTIONS

STYLE#: 28568

Please make sure you have all the parts indicated above before you begin assembly of this item.

Carefully unpack all lamp parts from the carton.

1. Place the **LAMP BASE** on the level surface. Place **SPACER** and **TABLE GLASS** onto the top of the Lamp base .
2. Place the remaining **SPACER** onto top of **Table GLASS**. Thread the bottom end of the **MIDDLE SECTION** on the top of the **LAMP BASE**. Hand tighten snug.
3. Thread the bottom end of the **TOP SECTION** onto the top of the **MIDDLE SECTION**. Hand tighten until snug.
4. Thread the harp base onto the Column A
5. Place the **HARP** into the **SADDLE**.
6. Place the **SHADE** on the **HARP**, and then put **finial disk** . onto the **SHADE** . Secure finial on top of finial disk
7. Use 3-Way 150W bulb (not included).

**IMPORTANT SAFETY****INSTRUCTIONS**

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted. Do not

attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com