

ASSEMBLY AND INSTALLATION INSTRUCTIONS

CH38803/CH38805

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

Installation Steps

1. Attach the nipple to the mounting strap, and then secure with a washer and a hex nut.
2. Attach the mounting strap to the ceiling box by using two mounting screws.
3. Adjust the arms of the fixture according to the drawing of the package.

Important to know:

- a. The distance between the arms should be equally distanced.
 - b. The arms should be fixed securely.
4. Choose the certain length of the chain you need, and then weave the fixture wire and the grounding wire through the chain. Then connect one end of the chain with the fixture by using the loop lock.
 5. Secure the top loop to the nipple tightly.
 6. Thread the fixture wire and grounding wire through the collar, canopy, top loop, nipple and mounting strap in order.
 7. Connect the other end of the chain with the top loop by using the loop lock.
 8. Make wire connections with wire nuts:
 - The smooth wire (marked) from fixture to the black wire from power source.
 - The ridged wire (unmarked) from fixture to the white wire from power source.
 - Attach the grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.Carefully tuck wires back into the ceiling box.
 9. Attach the canopy to the mounting strap by inserting the top loop, and then secure with the collar.
 10. Place the glass shades into the decoration rings carefully, attach them upwards to the glass holders, and then secure with socket rings.

Note: The glass shades should be all in horizontal line.

11. Install bulbs. (Please do not exceed the maximum capacity that is recommended on the package.)
12. Turn on the power at fuse or circuit box.

