



MAINTENANCE AND CARE

5. Valve Function

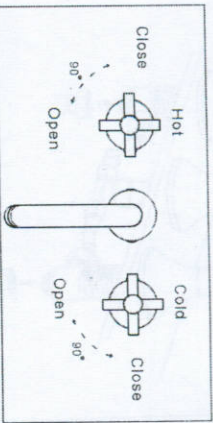

By rotating the handle closed to the spout, the Valve will be activated allowing water to flow. The water flow will increase by continuing to rotate handle. By rotating the right handle to the left, the water temperature will decrease to cold flow only. By rotating handle left to the right, the water temperature will increase to hot only.

7. Handle Removal

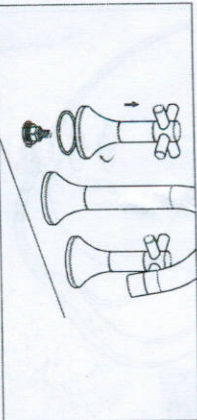

Turn off water and relieve pressure before working on your faucet! Unscrew Handle Mounting Cap, then pull out handle assembly from valve stem with force.

CAUTION: Maintenance

1. Replacement parts may be available at the store where you purchased your faucet.
2. Always turn off water and relieve pressure before working on your faucet.

NOTES: Cleaning Instructions


1. To keep the faucet clean, you should clean the faucet frequently and regularly.
2. Clean the faucet with clear water or mild liquid, rinse the faucet with clear water and then dry the faucet with soft cotton cloths.
3. Do not use any abrasive cleansers, cloths, or paper towel.
4. Do not use any acid or abrasive detergent.

TROUBLE-SHOOTING

If you've followed the instruction carefully and your faucet still does not work properly, take these corrective steps.


Problem	Cause	Action
Leaks underneath handle.	Cartridge has come loose.	Tighten the cartridge.
Aerator leaks or has an inconsistent water flow pattern.	Aerator is dirty or worn out or misfitted.	Unscrew the aerator to clean or replace washer, or replace the aerator.
Water will not shut off completely.	Dirty or worn out washer in cartridge.	Remove handle and cartridge to check if the washer is damaged permanently or dirty. Re-install cartridge.

6. Faucet Start Up

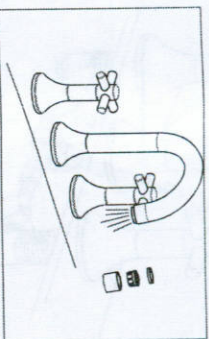

After installation is complete, remove aerator and rotate handle to the close position. Turn on the Water Supply Valves, and check all connections for leak. Turn on your faucet and allow both hot and cold water to run at least one minute each. Replace Aerator.

8. Valve Removal

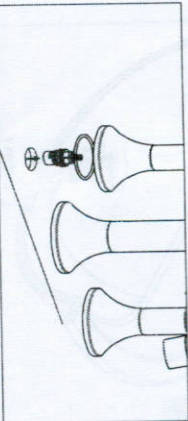



Remove handles, unscrew valve assembly and Sleeve Nut and inspect. Replace parts as necessary. Reassemble parts by reversing steps.

Basin Faucet
11503

PACKING LIST

After you open this package, please check to ensure that all of the following items are included.


- A- Spout Assembly B- Handle Assembly (2) C- Pop-up assembly E- Flexible hoses (2)
F- Rubber Washer (3) G- Metal Washer (3) H- Mounting Nut (3)

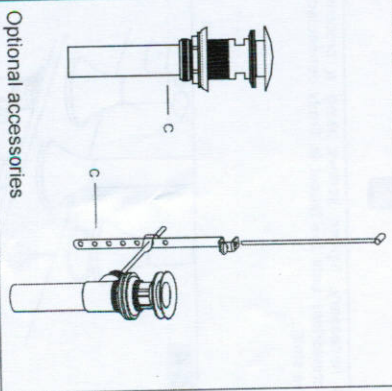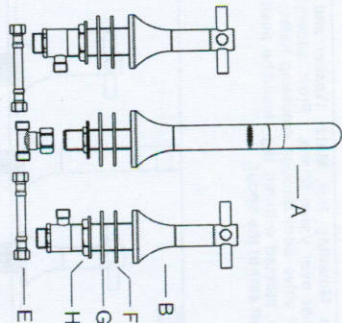

Optional accessories


IMPORTANT NOTICES: For easy installation, please read all the instruction completely before beginning. Before installing this product, make sure that water line trash is cleared to avoid blockage.

YOU MAY NEED

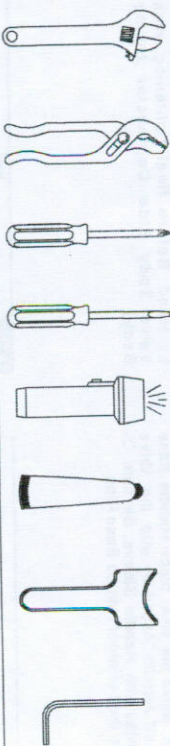


INSTALLATION PROCEDURES

1. Turn Off Water Supply

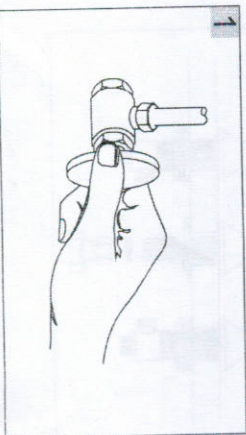


You should clean all the dirt from valve outlets. Turning off the water supply valves. This is usually found near the water meter. If you are replacing an existing faucet, remove the faucet from the sink and clean the sink surface thoroughly.

2. Install Faucet

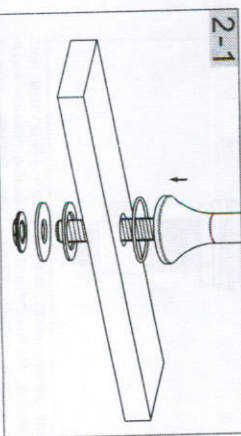


Be sure that O-Ring is placed to the bottom of the spout body. Insert Spout Shank through the center hole of sink. From underneath sink, place Plastic Washer and Metal Washer onto spout shank and tighten with Mounting Nut by hand. Before final tightening, be sure Pop-up Hole facing back.

2-2

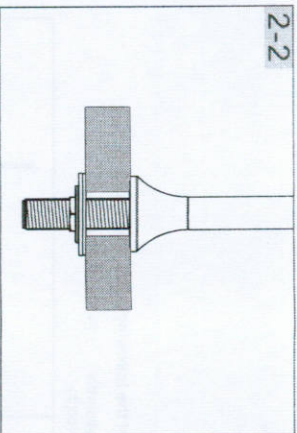


If necessary, tighten screws using a crosshead screwdriver until the faucet is firmly connected to the sink.

2-3

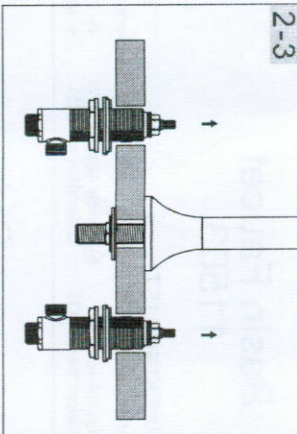


Place Mounting Nut, Metal Washer and Rubber Washer over Valve Shank. From underside sink, insert valve body through mounting holes. The hot valve, labeled with red tag should be positioned to the left side of the spout.

2-4

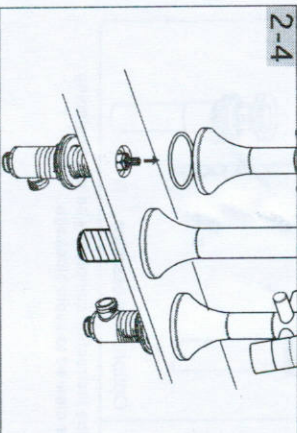


Make sure valves and handle lever are on the off position. From above the sink, place Handle Base Ring and Insert Handle Assembly into the Valve Stem and tighten with Handle Sleeve. Be sure O-Ring is place to the bottom of Handle Base Ring.

2-5

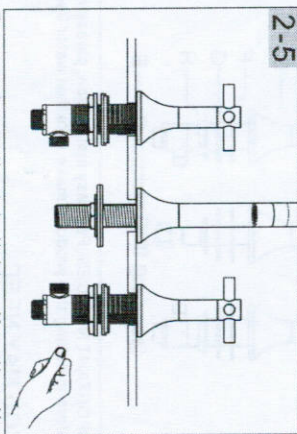


From underneath sink, tighten Mounting Nut by Hand. Before final tightening, make sure Valve Body Side Connector facing Spout Body.

2-6

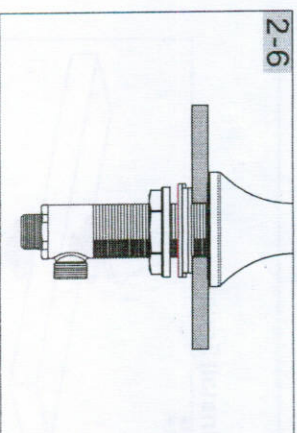


From underneath sink, tighten Mounting Nut by Hand. Before final tightening, make sure Valve Body Side Connector facing Spout Body.

2-7

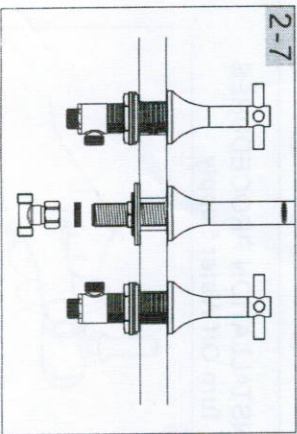


2-8

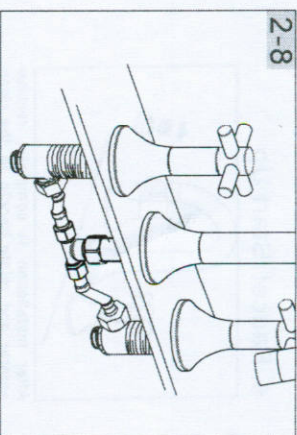

Connect Spout hot water flexible hoses to the Left Valve Side Connector. Tighten flexible hoses Nut. Connect Spout cold water supply line to the right Valve Side Connector.

3

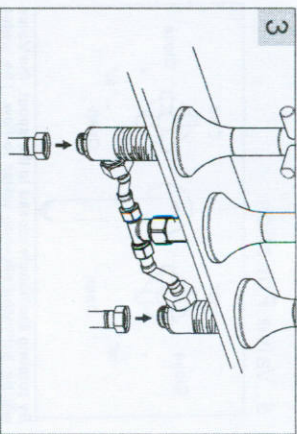


Connect hot and cold water flexible hoses to faucets inlets.

3. Water Supply Line Connections


4. POP-UP Assembly Installation (Push type Pop-up See "4A", Pull type Pop-up See "4B")

4A

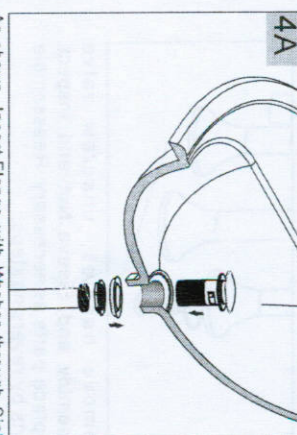


As shown, Insert Flange with Washer through Sink drain Hole. From underside, thread Drain Body into Flange. Holding the drain body in position with Ball Rod Opening facing back, tighten Metal Locknut securely. Thread Drain Tailpiece into Drain body.

4B-1

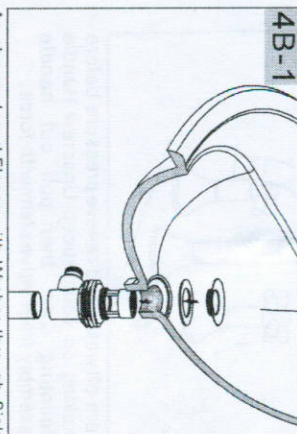


As shown, Insert Flange with Washer through Sink drain Hole. From underside, thread Drain Body into Flange. Holding the drain body in position with Ball Rod Opening facing back, tighten Metal Locknut securely. Thread Drain Tailpiece into Drain body.

4B-2

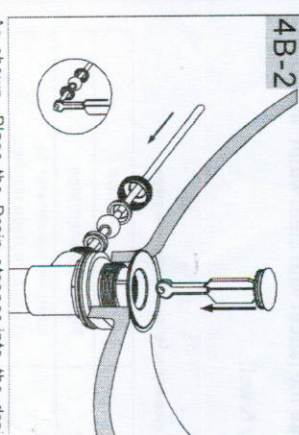

As shown, Place the Drain stopper into the drain body from the top rear. Slide the ballrod into the Ball Rod Opening through Stopper Hole, and threaded it on to the Drain Body.

4B-3

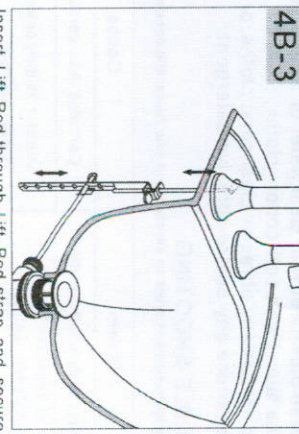

Insert Lift Rod through Lift Rod strap and secure with Set Screw. Place the Ball Rod through one of the holes on the Lift Rod Strap. Secure it with the Spring Clip. Adjust the height of the lift by resetting Set Screw. No interference between faucet and knob.