INSTALLATION INSTRUCTION

4" Low Voltage - Directional Spot

HR-D425

WAC LIGHTING Responsible Lighting®

SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- For installation by a qualified electrician.
- System is intended for installation in accordance with National Electric Code, and local regulations. Consult with local inspector to assure compliance.
- To reduce the risk of fire, electrical shock and injuries to persons, turn off power at main switch before installing or modifying the system.
- · Warning: (Risk of fire) do not install insulation within 3 inches of fixture sides, or junction box, or in a manner to entrap heat.
- Retain instructions for future maintenance reference.

OVERVIEW:


Trims fit housings from the HR-8400 series. Housing type and trim selection will determine maximum wattage; consult catalog or spec sheet for compatibility.


SOCKET REPLACEMENT:


Replace the socket supplied with the housing with the socket supplied with the trim.

INSTALLING LAMP AND TRIM:

- Allow the porcelain socket to pass through the opening of the trim and hang temporarily.
- 2. Push the trim assembly into the housing until the trim ring is flush against the ceiling.
- 3. Bring socket outside the lamp opening.
- 4. Install glass lens (supplied) into the retainer ring, followed by an MR-16 lamp placed on top of the glass. The retainer ring will hold lamp and glass together.
- 5. Attach the socket from the housing to the MR-16 lamp by pushing the pins of the lamp gently on to the porcelain socket.
- 6. Tighten the two socket screws securing the socket to the lamp pins.
- 7. Place the tab in the notch on the flat edge trim, then pivot the spring latch into the large notch in the curved edge, until it seats with a click.
- 8. Attach the socket from the housing by pushing gently on to the pins of the MR16 lamp.
- 9. Push the trim springs into the housing until the trim ring is flush against the ceiling.

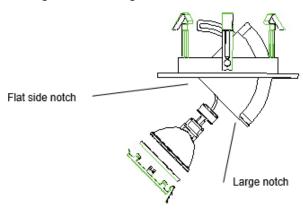

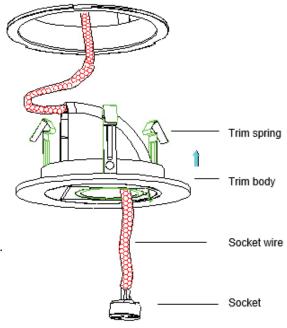

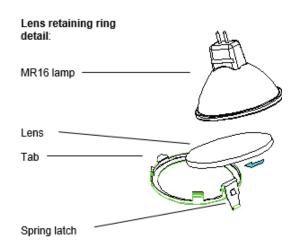

WAC Lighting www.waclighting.com Phone (800) 526.2588 • Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive • Port Washington, NY 11050 Phone (516) 515.5000 • Fax (516) 515.5050 Western Distribution Center 1750 Archibald Ave • Ontario, CA 91761 Phone (800) 526.2588 • Fax (800) 526.2585