

INSTALLATION INSTRUCTIONS

For Wall Outdoor Lantern

SPEC.NO: WL - 03

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT

READ THESE INSTRUCTIONS CAREFULLY, AND KEEP THEM IN A SAFE PLACE FOR FUTURE REFERENCE.

TOOLS & MATERIAL REQUIRED

- Flat screwdriver
- Adjustable wrench
- Stepladder
- Wire cutters
- Wiring supplies, as required by the electrical code

1. Shut off power at the circuit breaker and remove old fixture including mounting hardware.
2. Carefully unpack your new fixture and layout all the parts on a clear area. Take care not to misplace any small parts necessary for installation.
3. Thread long support screws (B) into holes of the mounting strap(C). Secure with hex nuts (D). The support screws should be adjusted so they are long enough to protrude through the back plate(G) when mounted.
4. Fasten mounting strap(C) onto wall outlet box (A) using two shorter screws (E).
5. Connect the electrical wires as shown in Fig. 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's Ground wire directly to the mounting strap(C) using the green ground screw (F). After the wires are connected tuck them carefully in the wall outlet box.
6. To prevent moisture from entering the outlet box (A) and causing a short, use clear caulking (i.e. Indoor/Outdoor silicone Sealant) to outline the outside of fixture back plate(G) where it meets the wall leaving a space at the bottom to allow any moisture to escape. (Fig.3)
7. Place the back plate (G) on to the support screws (B) That you adjusted on the mounting strap(C). Tighten cap nuts (I) onto the protruding support screws (B) until the fixture body is held firmly to the wall.
8. Install the 13-watt bulb with integrated ballast (K) into socket (J). **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
9. Install the nipple (N) into harp (L) and screw with hex nut(M).
10. Install Glass Shade (O) into top cover (H), and let the nipple (N) protruded through the glass. Secure with washer (P), nut(Q).
11. Then slip bottom cap(R) onto the nipple (N), and tighten with finial (S).
12. Restore electric power and test your new fixture.

Fig. 1

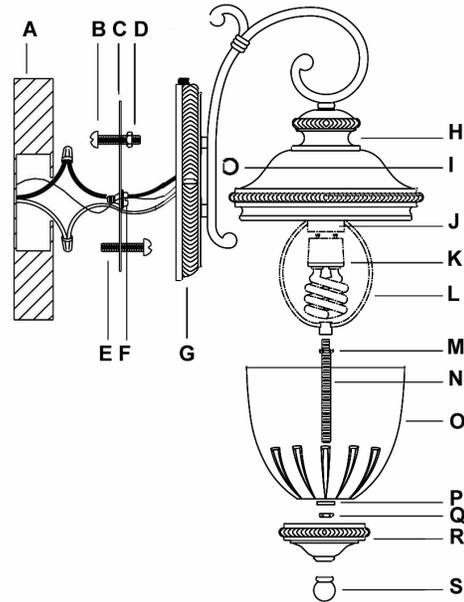


Fig. 2


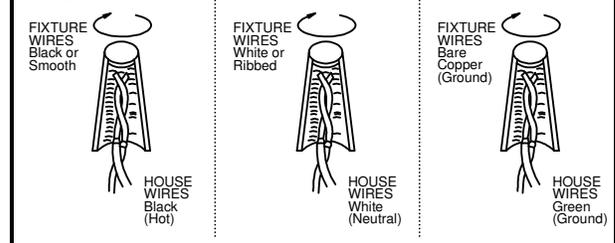


Fig 3

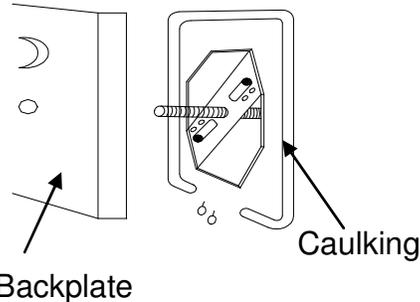

When relamping, repeat step 8 with new integrated bulb/ballast combination. Please use UL and CUL listed self-ballast fluorescent lamp, certified by UL1993.

The fixture contains an integrated photocell sensor that automatically prevents operation during daylight hours.

This fixture is rated for a minimum start temperature of -18 Celsius.

This fixture is UL Listed for Wet Location applications.

Note: Compact Fluorescent bulb contains Mercury. Dispose of according to local, State & Federal Law 1-800-555-5629 www.lamprecycle.org

2 YEAR LIMITED WARRANTY

Golden Lighting offers a two-year limited warranty beginning on the date of the sales transaction. This warranty includes the repair or replacement of the fixture housing & casing and electrical components but is limited in that it does not cover the decorative finish or light bulb. For more information, or to report a claim, please contact Customer Service: CustService@goldenlighting.com or toll free 1-800-277-0979.