Portable Lamp Assembly Instruction

CAUTION:

This lamp is partially assembled in the factory by qualified craftsmen. Some assembly is required before use. Please follow the assembly instructions carefully.

WARNING! – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY:

- --Turn off/unplug lamp and allow to cool before replacing bulb.
- -- Do not touch bulb when fixture is turned on.
- -- Do not look directly at lighted bulb.
- --Keep materials that burn easily away from lighted bulb.

Assembly: (refer to Fig.1)

- 1) Place Base on floor.
- Screw Bottom Tree into Base while pulling cord through bottom.
- 3) Screw Middle Tree into Bottom Tree while pulling cord through bottom.
- 4) Screw Top Tree into Middle Tree while pulling cord through bottom.
- 5) Place Harp into Saddle.
- 6) Place Shade into Harp and secure it with Finial. Use only the bulb type and wattage indicated on wattage label located on or near socket.

WARNING:


Never exceed maximum wattage indicated as it may cause fire.

Important Safety Instructions:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature. This plug can be used in polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

CLEANING:

Use only soft cloth to dust and clean fixture. Never use chemicals or abrasive cleaners as it may damage finish.

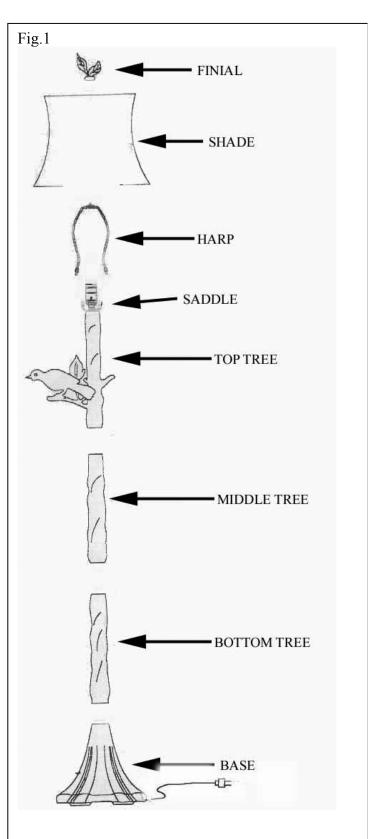

Item No.:74138-CP104943