

A2254 PARTS


INSTALLATION AND CARE & MAINTENANCE GUIDE

Installation guide

Bath mixer on edge type with 3 holes

Art. A2254XM--

Art. A2254LM--

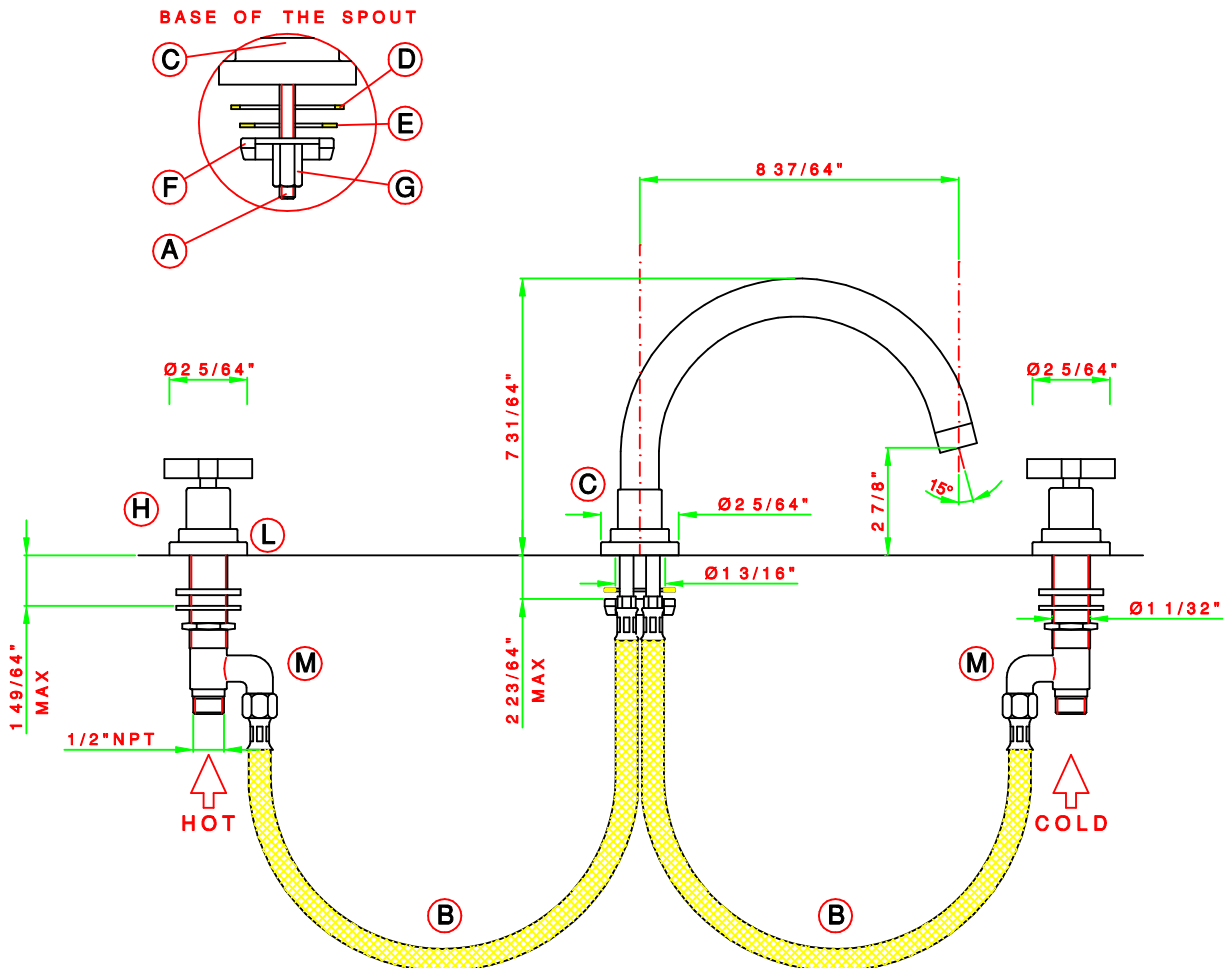

A2254 PARTS

a – Preparation

Flush out the pipework to remove any foreign matter.

The hot supply should be on the left when viewed from the front of the fitting.

b – Assembly

- Assemble the threaded pivot (A) and the flexible hoses (B) at the spout (C).
- Introduce the spout (C) in the central hole of the bathtub, placing before the rubber washer (D) between the spout (C) and the bathtub.
- Fix the spout (C) placing, before the shaped rubber washer (E) and then the half-moon plate (F) and the lengthen nut (G).
- Unscrew the handle set (H) and extract. Unscrew the cap (L).
- Assemble the valve body (M), placing before the nut and then the rubber washer.
- Introduce the valve body (M) in the hole of the bathtub and fix it, placing before the cap (L).
- Screwing the handle set (H). ATTENTION: Be sure that the handle has no play.
- Unscrew the cap (L) just to get in touch with the cover valve (H).
- Lock the valve body (M) underside with the brass fixing nut.

A T T E N T I O N

Maximum fixing nut torque value = 10 lbf.ft.

- Repeat this procedure for the cold valve.
- Connect the side valves (M) to the nozzle using the flexible hoses (B).
- Connect hot and cold water supplies to side valve inlet.
- Ensure all connections are firmly tightened.

c – Before use

Turn on the Hot and Cold supplies to the faucet.

Maximum temperature for Hot water supply to the faucet is 145° F.

Minimum recommended pressure is 15 psi – Maximum recommended pressure is 75 psi.

Check the installation carefully for leaks.

If further building work is to be carried out in the vici of the faucet, it should be covered to prevent paint, adhesive, etc. from damaging the surface.

Cleaning

Clean the chromium plated surfaces with soap and water or with mild liquid detergent. Do not use any abrasive cleaners or chloride bleach.

The gold plated or nickel plated surfaces; even if make on thickness way; must be cleaned only with a damp cloth or with a non abrasive and acid fluid very diluted.

Use the same cleaning procedure for all other finishings including satin nickel, inca brass.

WARNING: the use of cleaning products not recommended might irreparably harm the surfaces of the faucets which in such case are not covered by our warranty.

Limescale

The faucet is fitted with an aeration device in the Hot/Cold water outlet.

This may need occasional cleaning especially in hard water areas.

This is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and leaving the inner screen mesh immersed over night in vinegar or lemon juice.

Do not use chemical descaling liquids for this purpose.

A2254 PARTS

CARE & MAINTENANCE

Spare Parts

