INSTALLATION AND SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS


- Be sure the electricity to the system you are working on is turned off; either the fuse removed or the circuit breaker set at off.
- Use of other manufacturers components will void warranty, listing and create a potential safety hazard.
- For use with 120v Transition rail series by Sea Gull Lighting.
- If you are unclear as to how to proceed, contact a qualified electrician.
- Minimum distance from the front of the lamp to combustible surfaces is 8".
- Be sure to install the rail system where it can not be shorted out by conductive materials.
- · Make sure all connections are tight.
- This is a non-electrified support.
- Space supports no greater than 3 feet apart for straight sections.
- · Risk of fire. Keep away from combustible materials.
- Save these instructions.


ADDING OPTIONAL STEM EXTENSIONS

- 1. Unthread rail adapter (D) from support stem (C).
- 2. Thread rail support extension (not supplied) into rail adapter (D).
- 3. Thread support stem (C) into rail support extension.

INSTALLATION

- 1. Measure distance from power feed to support (36" max).
- 2. Drill %" hole at desired location for support.
- Insert toggle bolt screw (A) into mounting disc (B). Thread toggle bolt wing onto toggle bolt screw (A). Insert toggle bolt screw (A) and wing (H) into drilled hole and tighten toggle bolt screw (A) so mounting disc (B) is secured flush with the ceiling.
 - **Note:** When applicable, use other securing method such as a wood screw (not supplied).
- Thread support base (F) to mounting disc (B) tightly. Thread support stem (C) into swivel joint (G).
- Loosen swivel joint (G). Adjust support stem (C) so it hangs perpendicular to the floor. We recommend using a level to set support stem (C). Tighten swivel joint (G) to secure.
- Close rail adapter (D) over rail (refer to figure 2) and thread cap (E) back onto rail adapter (G).

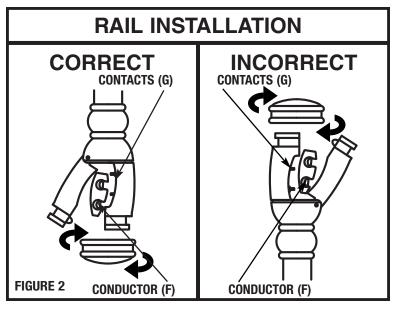

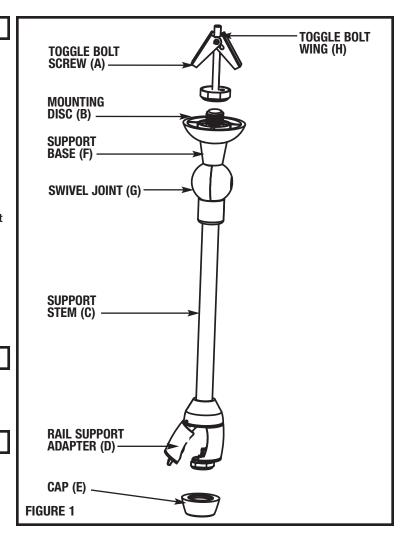



LR-129

www.SeaGullLighting.com