SPEAKMAN COMPANY SC-4389 Installation, Maintenance & Operation Instructions

SINGLE LAVATORY BASIN FAUCET

DESCRIPTION

Speakman polished chrome plated single basin faucet. Brass body with integral spout. Lever handle with hot and cold indexes. Flow control device reduces flow to 2.2 GPM/8.4 LPM maximum to meet existing ANSI A112.18.1M Standard. ¹/₂" NPSM inlet connection.

SPECIFICATIONS

SUPPLY: COUPLING OR SWEAT CONNECTIONS. FLOW RATE: 2.2 GPM/8.4 LPM MAX (FIXED). SHIPPING WEIGHT: XXX LBS.

OPTIONS

BOCA – Vandal-Resistant 0.5 gpm Flow Regulator	

INSTALLATION

Apply sealant around base underside of fitting. Place fitting in position on the sink or countertop and push down firmly to seal. Working from under the bowl, slip cup washer onto shank and screw locknut up hand tight. Using a basin wrench tighten locknut. Wipe off excess sealant from around fitting base

Connect water supply line to inlet of shank and tighten coupling nut with wrench.

Remove aerator from nozzle outlet. Turn water supply on and flush fitting. Replace aerator and check supply line connection for leaks.


OPERATION

Simply rotate the handle to operate the lavatory faucet.

MAINTENANCE (CARE and CLEANING)

The faucet has a rubber seat washer and a rubber spindle seal. Periodic maintenance is required. The gleaming finish of your SPEAKMAN lavatory faucet can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results.

ROUGH-IN MEASUREMENTS

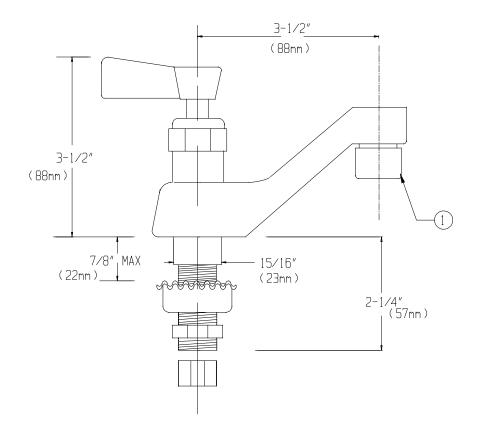

NOTES:

- 1. INLET IS SIZED FOR EITHER COUPLING OR SWEAT CONNECTIONS.
- 2. ALL DIMENSIONS ARE IN INCHES (MILLIMETERS) UNLESS OTHERWISE SPECIFIED AND ARE SUBJECT TO CHANGE WITHOUT NOTICE.

REPAIR / REPLACEMENT PARTS

ITEM NUMBERPART OR GROUP NUMBERDESCRIPTION1RPG05-0732VR AERATOR

SPEAKMAN[®]

PO Box 191 Wilmington, DE 19899 Phone: 800-537-2107 Fax: 800-977-2747 Visit us on the web at www.speakmancompany.com