## **SPEAKMAN COMPANY**

# VS-3032 Installation, Operation & Maintenance Instructions ANYSTREAM ® HAND-HELD SHOWER

#### **DESCRIPTION**

Polished chrome plated ANYSTREAM<sup>®</sup> S-3032 hand shower. Includes a five foot long hose and swivel ball bracket for shower arm mounting. Spray adjusting, 4" face. Full spray, massage, and aerated spray settings. Air injection face. Water conserving pressure compensating AUTOFLO® device reduces flow to 2.5 GPM/9.46LPM maximum, to meet existing ASME A112.18.1 Standard. ½" NPT inlet.

### **SPECIFICATIONS**

#### **OPTIONS**

SUPPLY INLET: ½" NPT

FLOW RATE: 2.5 GPM/9.46LPM MAXIMUM

FLOW CONTROL: VARIABLE SHIPPING WEIGHT: 1.6 LBS.

BN - Brushed Nickel Finish

#### **INSTALLATION**

Screw the swivel arm bracket onto the outlet shower arm. Install rubber washers in the ends of the hose. Turning in a clockwise direction, thread the hose swivel onto the threaded end of the swivel arm bracket and the other hose end onto the hand held shower. Hand tighten firmly all connections. Turn the water supply on and check for leaks.

#### **OPERATION**


To adjust the spray pattern of the shower head, simply rotate the outer ring to the desired spray (Full-Body, Dual action or Massage). The outer ring can rotate 360°.

#### **MAINTENANCE**

The gleaming finish of your SPEAKMAN® hand shower can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results. The flow control device limits water flow to 2.5 gallons per minute. The small orifices may become clogged with scale and other minerals found in potable water. To clean the flow regulator, simply remove the shower arm mount from the bent arm, pull out the rubber washer from the ball, dislodge the flow regulator and clean as necessary.

# Product improvements may cause specification and dimensional changes without notice.

### **ROUGH-IN MEASUREMENTS**

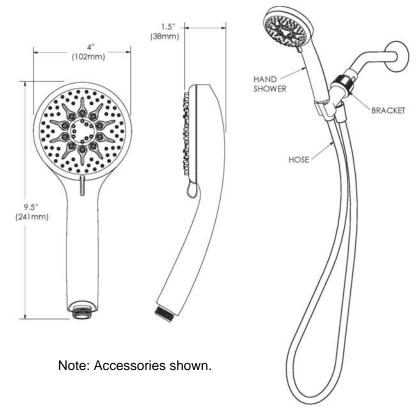

## **SPEAKMAN®**