



# VON DUPRIN®

## INSTALLATION INSTRUCTIONS


1. Change handing if required (see instructions at far right).
2. Install cylinder (L lever control only).

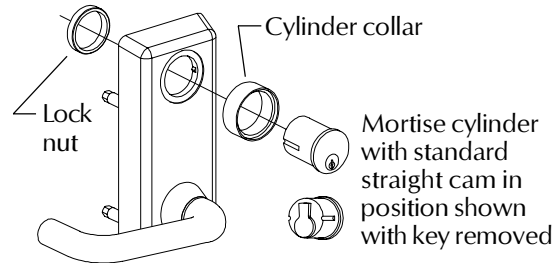

3. Install tailpiece. Consult factory for doors other than 1-3/4" or 2-1/4" thick.

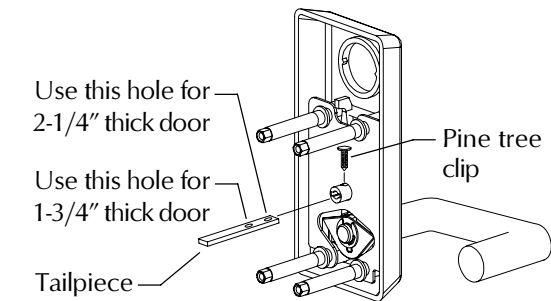


4. Install tailpiece guide in exit device cam.

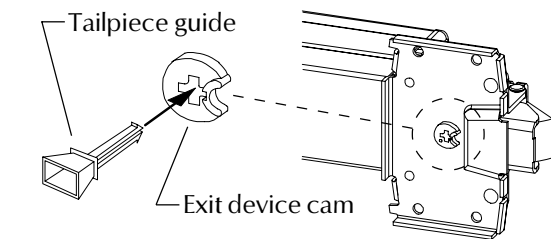


5. Prepare door for lever control installation.

**NOTES**

1. Center lines correspond to center lines on exit device instructions.
2. See exit device instructions for cutouts on inside of door.

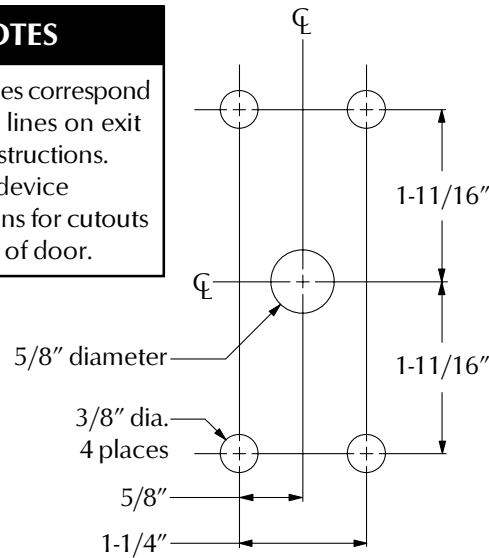

6. Install lever control.

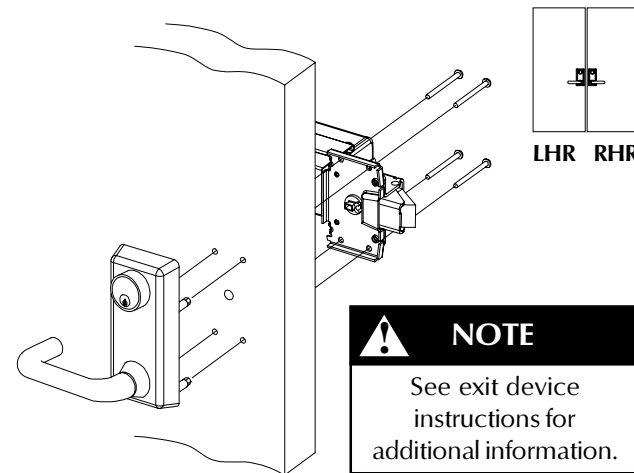


**NOTE**

See exit device instructions for additional information.

## TO CHANGE HANDING OR REPLACE BROKEN SHEAR PIN

**NOTE**

The replaceable shear pin breaks to protect the assembly from damage when excessive torque is applied.

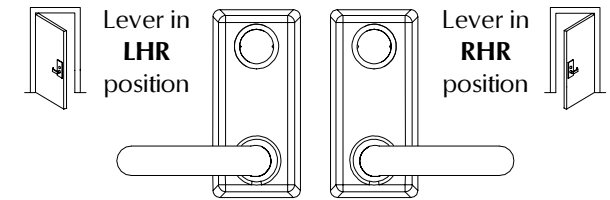


**Figure 1**


**CAUTION**

Do not remove the back plate.


1. Check lever position (Figure 1). To change handing or replace broken shear pin, complete Steps 2 through 8.
2. Remove retaining ring (Figure 2).
3. Use screwdriver to push up on slider leg to remove preload from lever cam and remove lever cam (Figure 2).
4. Remove shear pin (Figure 3). If shear pin is broken, make sure to remove all pieces of broken shear pin.
5. Rotate lever to LHR or RHR position (Figure 1).
6. Install shear pin (Figure 4).
7. Install lever cam with "L" visible for LHR or "R" visible for RHR (Figure 5).
8. Install retaining ring.

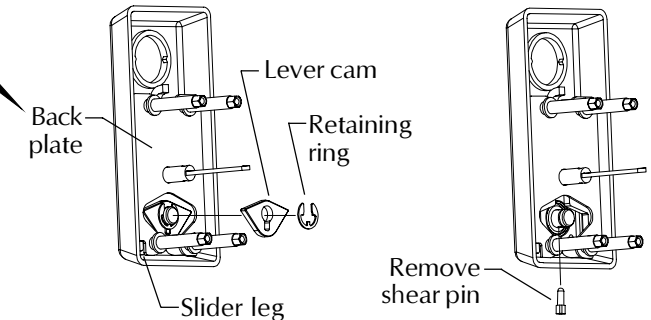


**Figure 2**

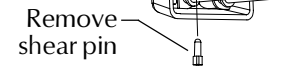

**Figure 3**

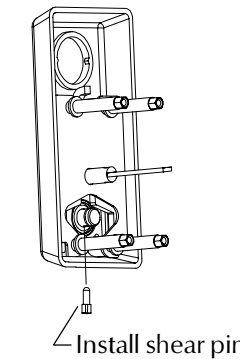

**Figure 4**

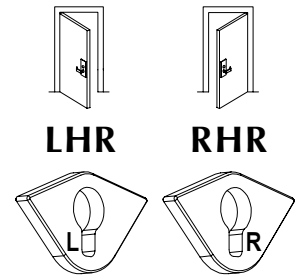

**LHR RHR**

"L" visible for LHR  
"R" visible for RHR

**Figure 5**

 


### 230L/L-BE LEVER CONTROL

Copyright © 2004 Ingersoll-Rand.  
All rights reserved.

PAGE NO.  
**1 of 1**

REVISION  
**4**



**921007-00**