



Family: Buckley | Item No. 1376 BK/OB

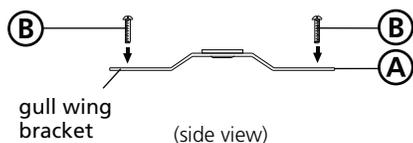


Drawing 1 - Strap Detail



Drawing 2 - Fixture Mounting

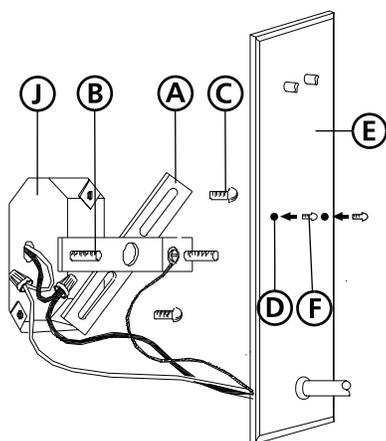

Drawing 3 - Glass Replacement

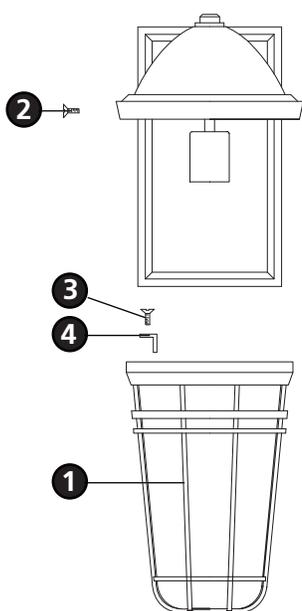

▼ start here

1

1. Find a clear area in which you can work.
2. Unpack fixture and glass from carton.
3. Carefully review instructions prior to assembly.

***** The construction of this fixture will be accomplished by first mounting the mounting strap to the junction box, making all necessary electrical connections, unpacking the fixture glass and then mounting the fixture to the wall.**

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.

2

1. Prepare mounting strap **(A)** by threading the two 1 1/4" long mounting screws **(B)** into the back of the gull wing bracket - see **Drawing 1**.
 - Be sure the holes into which the screws are threaded match the spacing of holes **(D)** in the backplate **(E)** - see **Drawings 1 and 2**.
2. Attach mounting strap **(A)** to junction box **(J)** using two 1" screws **(C)** provided.

3

Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet **(I.S. 18)** and follow all instructions to make all necessary wiring connections. Then refer back to this sheet to continue installation of this fixture.

4

1. Mount the fixture by slipping the holes **(D)** in the back plate **(E)** over the screws **(B)** in the mounting strap **(A)** - see **Drawing 2**.
2. Hold fixture against wall and thread ball knobs **(F)** onto end of screw **(B)** showing through the backplate **(E)**.
3. Fixture can now be lamped accordingly.

5

- **Unpacking fixture:** In order to make sure the glass does not break during shipping, additional packing material has been supplied between the glass and the cage. It will be necessary to remove the glass clips **(4)** and glass, in order to remove this packing material.
 1. To unpack glass and lamp fixture or to replace glass, remove the Phillips head screw **(2)** from the side of the fixture, making sure to hold cage assembly **(1)** - see **Drawing 3**.
 2. Set cage assembly **(1)** aside and remove screw **(3)** and glass clip **(4)** from cage assembly **(1)**.
 3. Remove glass followed by packing material inside of cage and then replace glass into cage assembly **(1)**.
 4. Fixture can now be lamped accordingly.
 5. To reassemble fixture follow steps 1-2 in reverse order.

Note: Maximum wattage for 1376 fixture is 75 watts per bulb.

12.10.08