

INSTALLATION INSTRUCTIONS

For Model 9243-1-66-PL

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

1. Shut off the power at the circuit breaker and remove old fixture, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Place the circular strap (A) over the outlet box, the side of the circular strap (A) marked "GND" must face out. Hold it (A) in place, secure to the outlet box by threading the two screws (B) into the slotted holes. Secure the plastic anchor (L) into the wall, and then secure the crossbar (M) into the plastic anchor (L) by threading two screws (N). (Fig.1)
4. At the point, connect the wires as follows; connect the black wire from the fixture to the black house (hot) wire. Connect the white wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. Wrap the connections with electrical tape. If your outlet has a ground wire (green or bare copper), connect fixture's ground wire to it. Otherwise connect fixture's ground wire directly to the crossbar using the green screw provided. (Fig.2)
5. After the wires are connected, tuck them carefully inside the outlet box as you place the backplate (D) over the two studs (C) through the holes. Secure the backplate (D) against the wall by two cap nuts (E). Do the same manner to backplate (P).
6. To prevent moisture from entering the outlet box and causing a short, use clear caulking to outline the outside of the backplate(D) where it meets the wall leaving a space at bottom to allow moisture escape. (Fig.4)
7. Install the PL bulb in accordance with the fixture's specification (1xMax26W included). (DO NOT EXCEED THE MAXIMUM WATTAGE RATING!!)
8. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig.3.
9. For installing or replacing PL bulb at a later date, unloosen the nuts (J), put down the frame from the cover (F). Install the PL bulb directly. After installation, replace the frame to the cover (F) through stud (G); secure the cover (F) by nuts (J). For replacing glass, unloosen nuts (J), put down the frame, and then unloosen screws (H) to replace the glass and secure it by screws (H) with washers (I), finally, replace the frame and secure it by nuts (J). (Fig. 1)
10. This fixture contains an integrated photo sensor that automatically prevents daylight operation.
11. This fixture is rated for a minimum start temperature of -18° Celsius.
12. This fixture is UL Listed for Wet Location applications.

Your installation is now complete. Return power to the junction box and test the fixture.

LIMITED 2 YEAR WARRANTY

The Minka Group Warranty covers for a period of two years from the day of purchase the replacement or repairs of the fixture housing and electrical components. This warranty is limited in that it does not include the lamp (bulb) or finish.

