

# INSTALLATION INSTRUCTIONS

For Model 71193-A357-PL

READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**

**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

## MOUNTING THE BACKPLATE (Fig.1)

1. Shut off the power at the circuit breaker and remove the old fixture, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all parts on a clear area. Take care not to lose any small parts necessary for installation.
3. The circular strap (A) contains several pairs of threaded holes, find the pair of holes that match the hole spacing in your fixture's backplate (D) and thread the two Studs (C) into the circular strap (A) (You can adjust the length of the screws if necessary).
4. Attach the circular strap (A) to the junction box using the 2 screws (B) (Size: #8-32N\*L0.5"). The side of the circular strap marked "GND" must face out.

## CONNECTING THE WIRES (Fig. 2)

5. Connect the electrical wires as shown in Fig. 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the circular strap using the green screw provided. Tuck the wire connections neatly into the junction box.

## MOUNTING FIXTURE (Fig.1)

6. Place the backplate (D) over the two studs (C). Secure the backplate (D) with cap nuts (E).
7. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of the fixture's backplate where it meets the wall leaving a space at the bottom to allow moisture a means to escape. (Fig. 4)
8. Install 1\*26W PL light bulb (G) (included) into socket (F) in accordance with the lamp's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**
9. The ballast in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. See installation steps for more detail. (Fig.3)
10. This fixture is rated for a minimum start temperature of 0 degrees Fahrenheit (-17 degree Celsius).
11. This fixture is ETL Listed for wet location applications.

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

