

INSTALLATION INSTRUCTIONS

Item#1492-PL (Rev. 06/06/2012)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARATION (Fig. 1)

1. Shut off power at the circuit breaker and remove old fixture including mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to misplace any small part necessary for installation.
3. Attach Cross Bar (A) to Junction box with Screws (B). The side of the Cross Bar marked "GND" must face out.
4. Thread Nipple (C) into the center hole of the Crossbar (A).

CONNECTING THE WIRES (Fig. 2)

5. Connect the electrical wires as shown in Fig. 2, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's Ground Wire to it. Otherwise, connect the fixture's Ground Wire directly to the Back-plate using the Green Screw provided. After the wires are connected carefully tuck them inside the Junction box.

COMPLETING THE INSTALLATION

6. Place Back Plate (D) over Nipple (C) and secure with Cap Nut (E).
7. (OUTDOOR USE ONLY) To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back-plate where it meets the wall leaving a space at bottom to allow moisture a means to escape (Fig.3).
8. Install the CFL bulbs (F) (included) into socket in accordance with the fixture's specification. (DO NOT EXCEED THE SPECIFIED WATTAGE!) NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).
9. Insert Glass Panels (G) into Metal Frame (H) and secure it using Clips on the bottom of metal frame.
10. Place Metal Frame (H) on Fixture Body (D) and secure with Screw (I).
11. The ballast in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig 4.
12. This fixture is rated for a minimum start temperature of 0 degrees Fahrenheit (-17 degree Celsius).
13. This fixture is ETL Listed for Wet Location applications.

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

The color correlated Temperature (CCT) for replacing the enclosed lamp is (2700K).

Caution: CFLs contain Mercury (Hg) Dispose of according to Local, State and Federal Law. (www.epa.gov/bulbrecycling).

