



UTTERMOST

ASSEMBLY INSTRUCTIONS

ITEM #: 29608-1 ASSEMBLY


1. Unpack all parts from cartons carefully.
2. Screw POLE (B) onto BASE (A) until tight.
3. Fix GLASS (D) onto FRAME (E) secure with BALL NUT (G) and WASHER (H) and place it over the SOCKET (C) secure with RING (F).

WARNING:

1. Use 100W maximum type A bulb (bulb not included).
2. Do not use polishes or cleaners on your lamp. JUST WIPE CLEAN WITH SOFT CLOTH.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wide than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

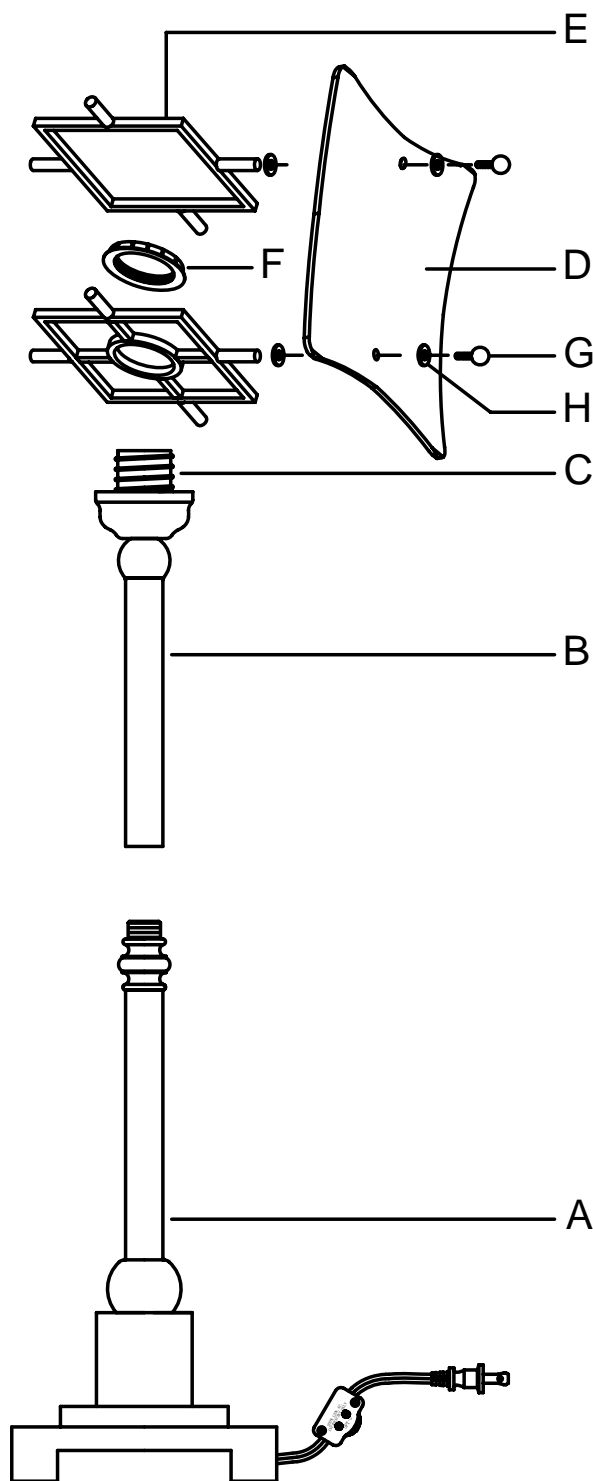

CSA007601TDUT1