

# ASSEMBLY AND INSTALLATION INSTRUCTIONS

OM-PDD070

**WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.**

**NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.**

1. Thread two screws through the mounting strap, then secure them with two lock nuts. Adjust the length of the screws if necessary.
2. Attach the mounting strap to the ceiling box by using two mounting screws.
3. Rod connections:
  - a. Thread the fixture wire from the fixture through the down rod and secure the down rod with the nipple.
  - b. Thread the fixture wire from the down rod through the middle rod and secure the middle rod with the nipple.
  - c. Thread the fixture wire through the upper rod and secure the upper rod with the nipple.

**The height can be adjusted to 15-3/4", 25-1/4", 34-3/4" or 44-3/4" by using the rods.**

4. Thread the fixture wire through the canopy and secure the upper rod to the canopy with the set nipple.
5. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
  - The black wire from the fixture to the black wire from the power source.
  - The white wire from the fixture to the white wire from the power source.
  - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.

Carefully tuck the wires back into the ceiling box.

6. Attach the canopy to the mounting strap by inserting the screws through the holes of the canopy and securing them with two bolt nuts.
7. Attach the glass shade to the glass holder, then secure it with the socket ring.
8. Install a bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.
9. Turn on the main power at fuse or circuit breaker box.

