



**ALARM LOCK**

345 Bayview Avenue  
Amityville, New York 11701  
For Sales and Repairs 1-800-ALA-LOCK  
For Technical Service 1-800-645-9440  
Publicly traded on NASDAQ      Symbol: NSSC

# AL-DTM-III PROCEDURAL CHANGES FOR THE PL3000 / PL3500

The procedure below is required **only** when a PC or DTM communication *Function Card* is not presently enrolled in the lock; i.e. the lock is new ("out-of-box"), or the lock has had all programming erased (restoring factory default).

## PC/DTM Communications

Previous versions of the AL-DTM did not require the "299" code (Function Card #2) to be presented twice; the AL-DTM-III *does* require Function Card #2 to be presented twice, and therefore *the AL-DTM "299" Function Card #2 must be enrolled into the lock prior to using the AL-DTM-III.*

**Note:** When using the new PL3500 with DL-Windows 3.5 (or higher), *the AL-DTM-III must be used.* Direct PC communications is not currently supported, and the PL3500 must be setup as a *PL3000 lock-type* in DL-Windows 3.5 (or higher).

## Procedure:

All lock programming **MUST** be erased to restore the "out of box" factory default, as follows:

### PL3000:

Follow the *Erase All Programming* instructions in the "**Wiring and Power Up**" section in WI1280, in which the shunt connector is plugged into the yellow wire connector.

### PL3500:

Power up the lock, wait and listen for three beeps, then hold down the outside lever.

After erasing all lock programming, both lock models wait for a proximity card to be presented. Therefore, present a proximity card (to place the lock into "learn mode"), then immediately present the first two Function Cards (card #1 for initiating PC communications, card #2 for initiating AL-DTM communications). After cards #1 and 2 have been presented and enrolled, wait for the lock to time-out and lock.

Now the PL3000 can be programmed by the PC or the AL-DTM-III. Currently, the PL3500 can only be programmed by the AL-DTM-III; the PL3500 is not supported by DL-Windows at this time.