


### Step 3 Cleaning and care


Daily cleaning and care are required in order to keep the product shining and properly working.

- 1 Clean it with water and dry it with soft cloth.
- 2 Clean the product with gentle liquid or glass cleaner.
- 3 Don't use acid cleaner.
- 4 Don't clean with abrasive material, abrasive paper or knife.

### Step 4 Parts list

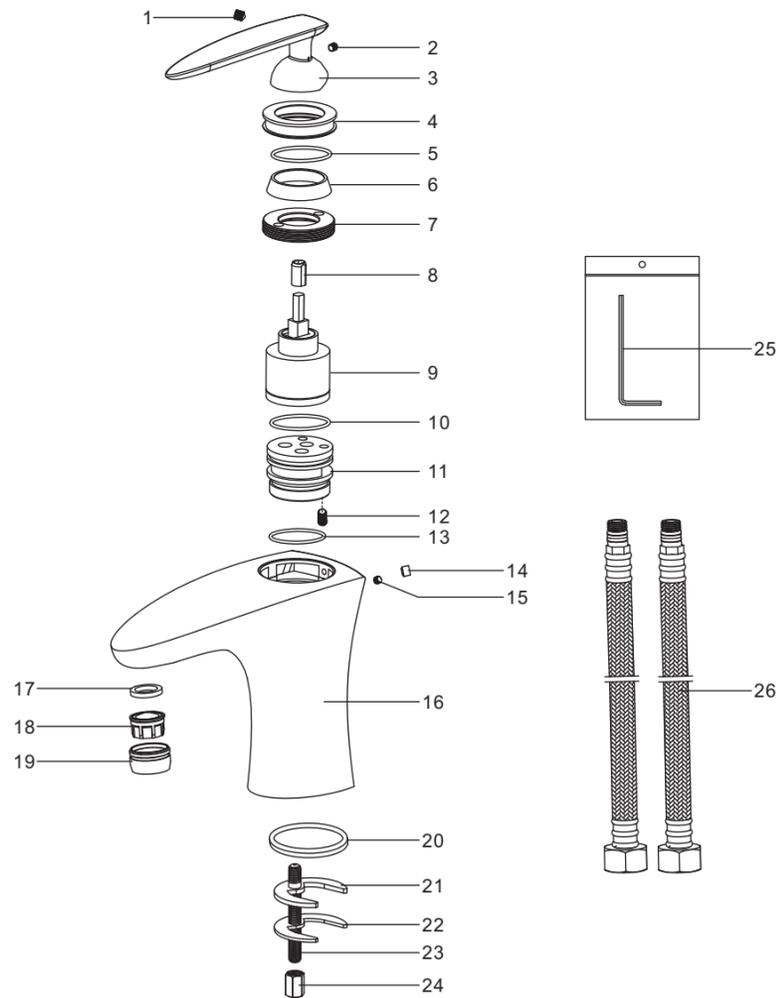

NO.	PART NAME
1	Screw
2	Screw
3	Handle
4	Cover
5	O-ring
6	Trim cap
7	Cartridge lock nut
8	Cartridge adapter
9	Cartridge
10	O-ring
11	Core
12	Screw
13	O-ring
14	Index
15	Screw
16	Body
17	Washer
18	Aerator core
19	Aerator collar
20	O-ring
21	Rubber washer
22	Clamp
23	Screw
24	Lock nut
25	Allen key
26	Flexible hose

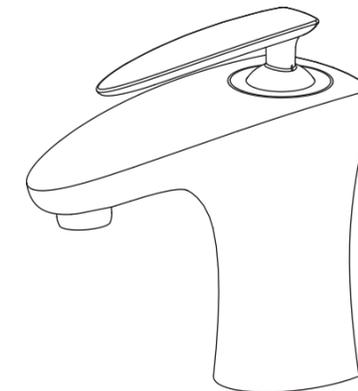


### SINGLE HANDLE LAVATORY FAUCET



ASME A112.18.1/CSA B125.1

#### RECOMMENDED TOOLS

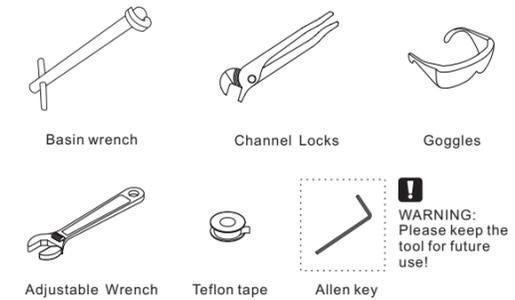


**WARNING:**  
Please keep the tool for future use!

#### Attention:


- for easy installation, you will need:
1. To read all the installation instruction completely before beginning.
  2. To read all the warning, attention and maintenance information.
  3. To purchase the proper supply lines.

#### The tools might be applied to the following places:

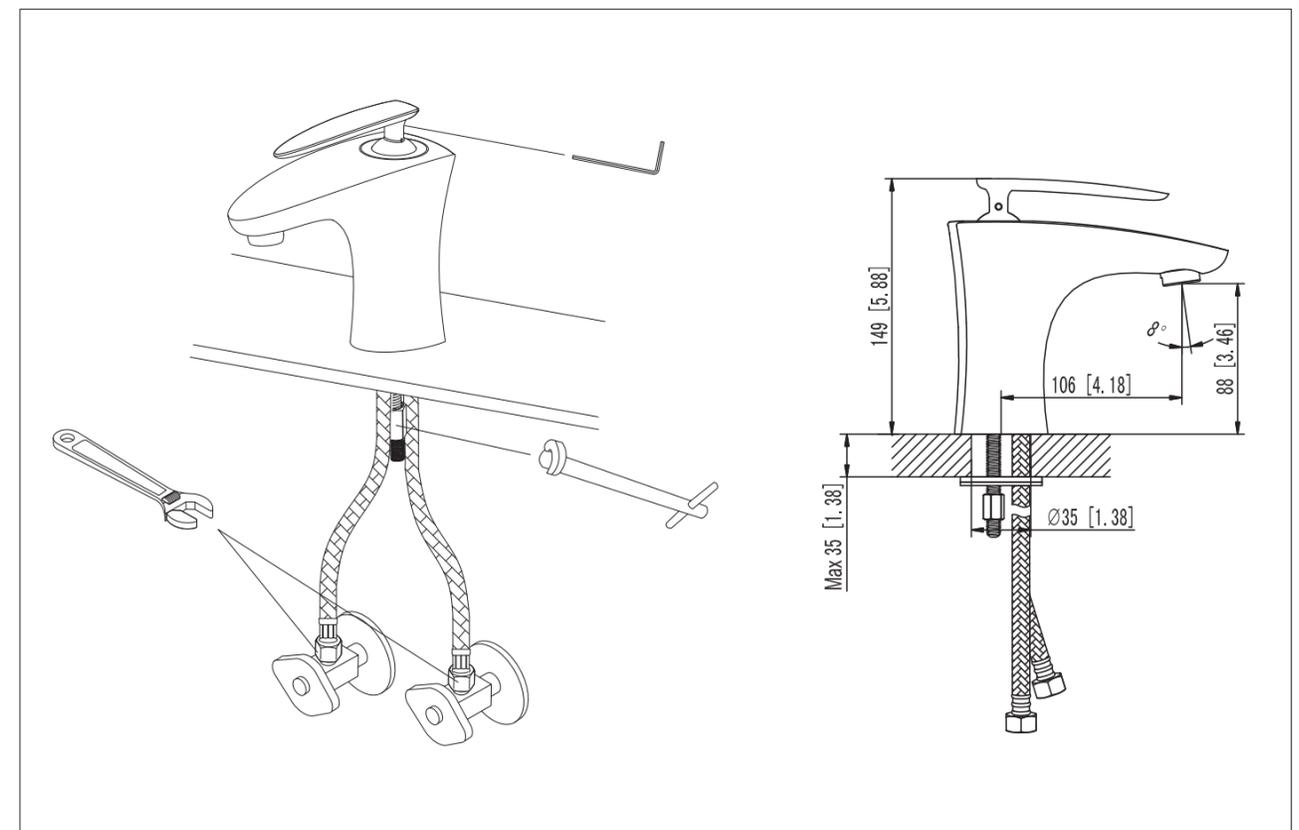


## Step 1 Faucet installation

### Faucet installation

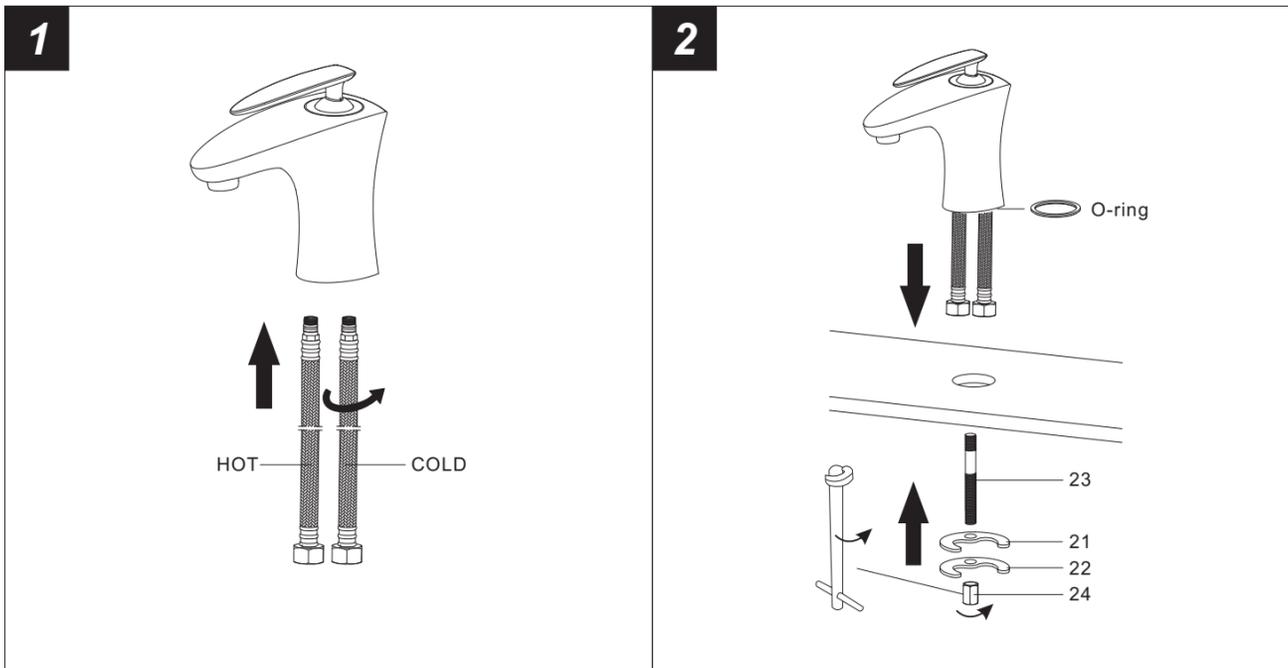

1. Assemble the 2 flexible hose to the faucet by hand.
2. Put the faucet into the installation hole of the basin. Make sure o-ring be on the base of faucet. Assemble screw #23 to the base of faucet, and assemble rubber washer #21 and clamp #22 to screw #23. Then assemble lock nut #24 by basin wrench to screw #23 to fix the faucet.

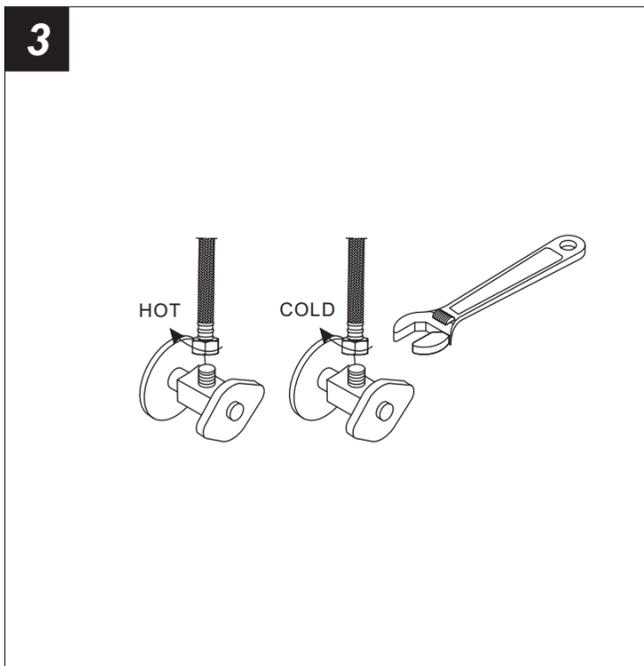

3. Connect the flexible hose to water supply valve (not included), and tighten it with adjustable wrench.


#### **DON'T OVER TIGHTEN!**

Caution: make sure connect the hot and cold flexible hoses to supply valves correctly.

#### **Warning:**


The supply valves are not included, please purchase them in plumb shop.

### Pop-up installation

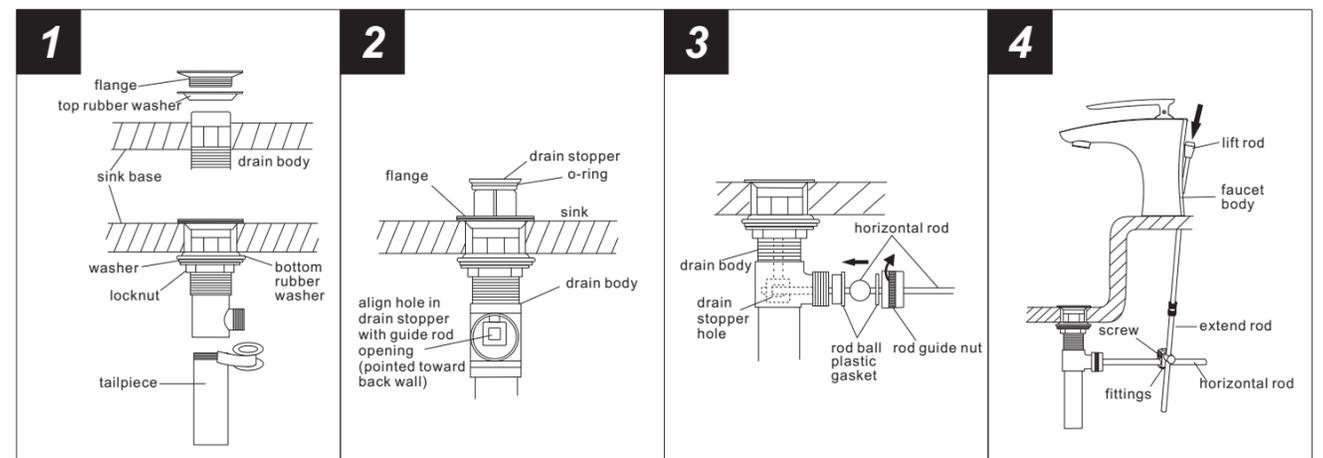

1. Remove pop-up drain stopper, and flange with top rubber washer for pop-up assembly. Insert drain body from underneath of sink drain hole. Replace flange and top rubber washer back to drain body. Tighten flange as far as possible. Remove and put silicone along bottom of. (Optional) Slide bottom rubber washer on drain body up against bottom of sink. Tighten washer and locknut firmly against base for tight seal. Remove tailpiece from drain body, add Teflon tape, replace tailpiece.
2. Replace pop-up drain stopper to drain body with o-ring in place, and align stopper hole with guide rod opening.
3. Remove rod guide nut and rod ball plastic gasket. Insert horizontal rod into drain body and through hole in drain stopper. Replace rod guide nut with rod ball plastic gasket and tighten it.
4. Insert lift rod through hole on faucet body. Connect extend rod to lift rod. Attach horizontal rod to extend rod using fittings, tighten screw.

## Step 2 Checking and testing

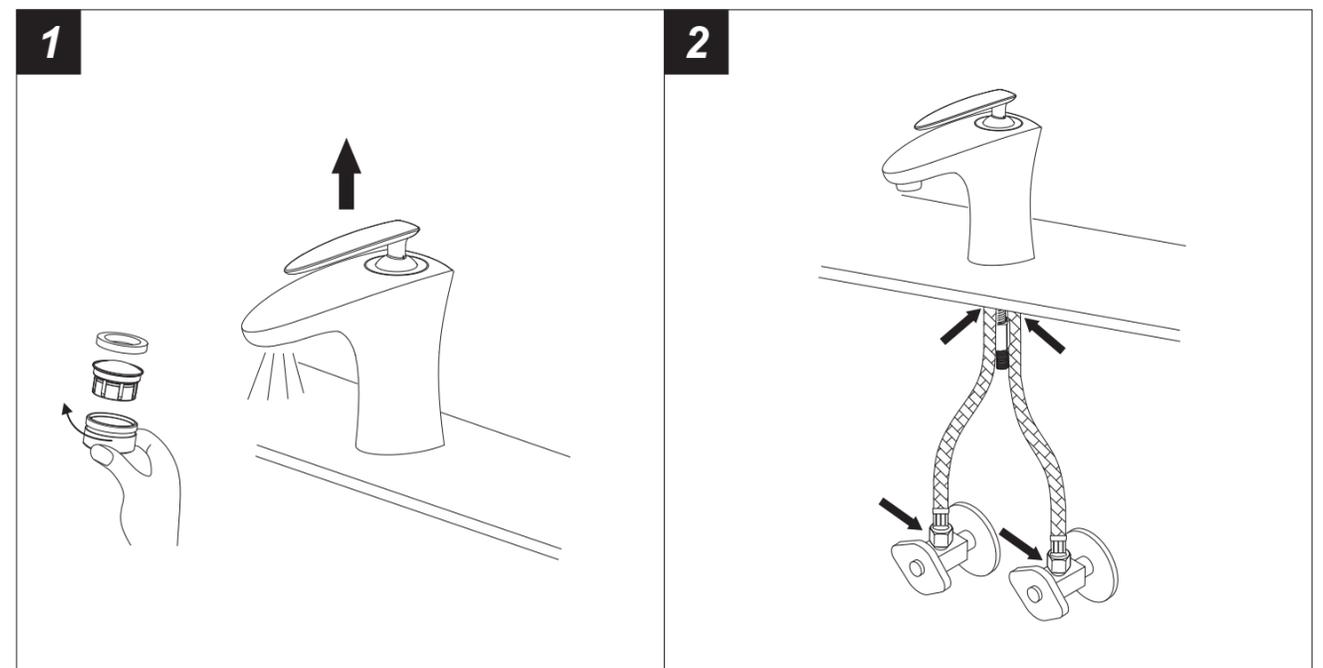

1. Remove the aerator by hand. Turn the faucet handle all the way on, turn on hot and cold water supply and flush water lines for one minute. Reinstall aerator by hand.
2. Check all connections at arrows for leaks, re-tighten it if necessary. **BUT DON'T OVERTIGHTEN!**