


Arnsberg

customerservice@arnsberg.com

www.arnsberg.com

Mounting Instructions

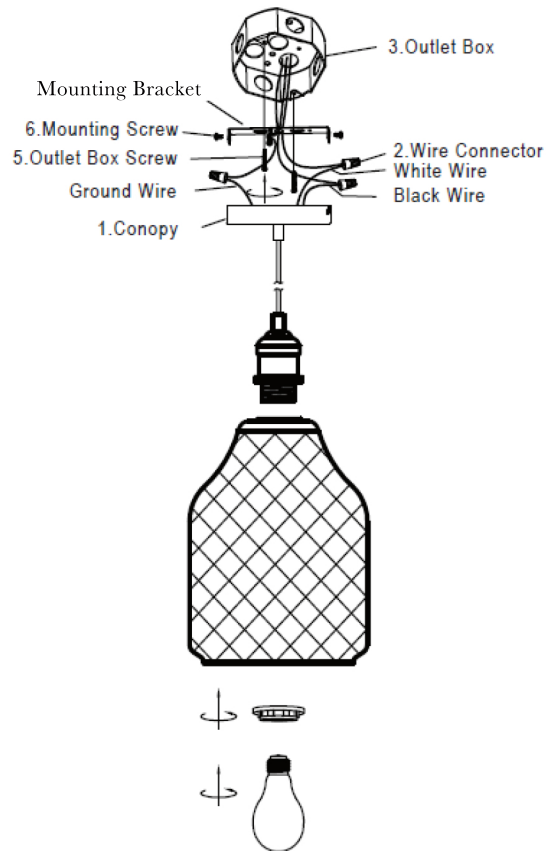

ASSEMBLY INSTRUCTIONS

MARGIT

301500104

Assembly Instructions

1. Turn off the power to the outlet by switching the breaker in the electrical panel to 1. Screw the mounting screw (#6) into the mounting strap (#4). Mount the mounting strap (#4) to the outlet box (#3). Make sure the heads of the mounting screw (#6) are facing outside when the mounting strap (#4) is attached to the outlet box (#3).

2. Connect the ground wire from the fixture to the ground wire from the outlet box (#3). Connect the white wire from the fixture to the white wire (neutral wire) from the outlet box (#3). Connect the black wire from the fixture to the black wire (live wire) of the outlet box (#3). Cover the connections using the wire connectors (#2). Wrap the wire connectors with electrical tape for a more secure connection. Position the wires back inside the outlet box (#3). Note: If you have electrical questions, consult your local licensed electrician.

 
3. Place the canopy (#1) over the outlet box (#3). Allow the Heads of the outlet box screws (#5) to come out through the large end of the keyholes of the canopy (#1). Twist the canopy (#1) until the heads of the outlet box screws (#5) slide into the narrow ends of the keyholes. Screw the outlet box screws (#5) to secure the canopy (#1).

4. Before completing installation, please cover the lampshade on the corresponding rotary buttons positions of the chassis, and lock the lampshade according to the arrow direction.

5. Installation is complete, Turn on the power at the circuit breaker of the fuse box. Turn the light switch on to activate the fixture.

Parts Included:

Mounting Strap



Outlet Box screw



Wire Connector



 
Mounting Screw



CSA / UL Safety Requirements

CSA/UL requires that these IMPORTANT SAFETY INSTRUCTION be listed:

- Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.



- Consult a qualified electrician if you have any electrical questions or need to replace the driver.

Care Instructions

Arnsberg suggests using only a micro fiber cleaning cloth to clean this fixture. If required, a slightly damp cleaning cloth may be used to spot clean. Do not use common household cleaners on this fixture, as the final finish may be damaged as a result. Enjoy your new Arnsberg fixture.