 
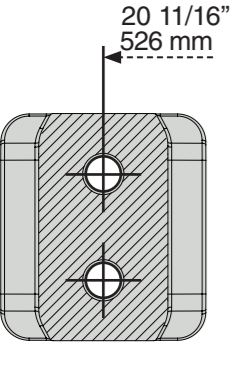 
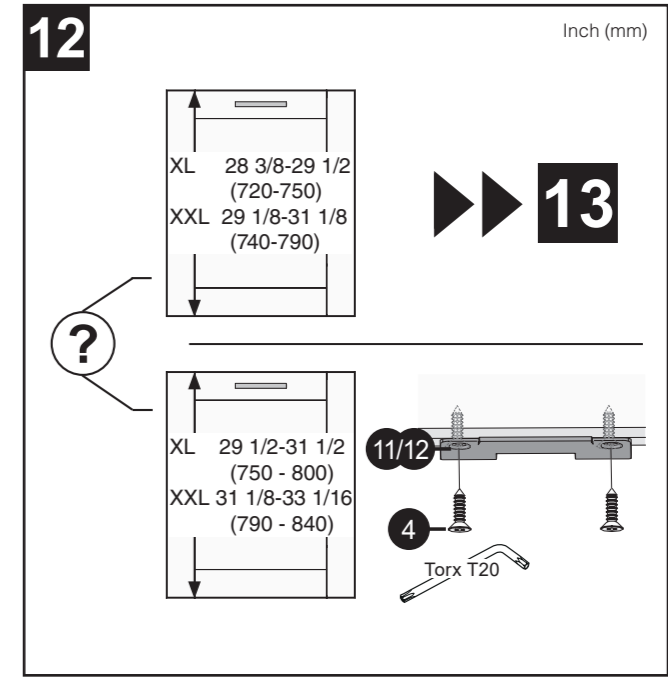 
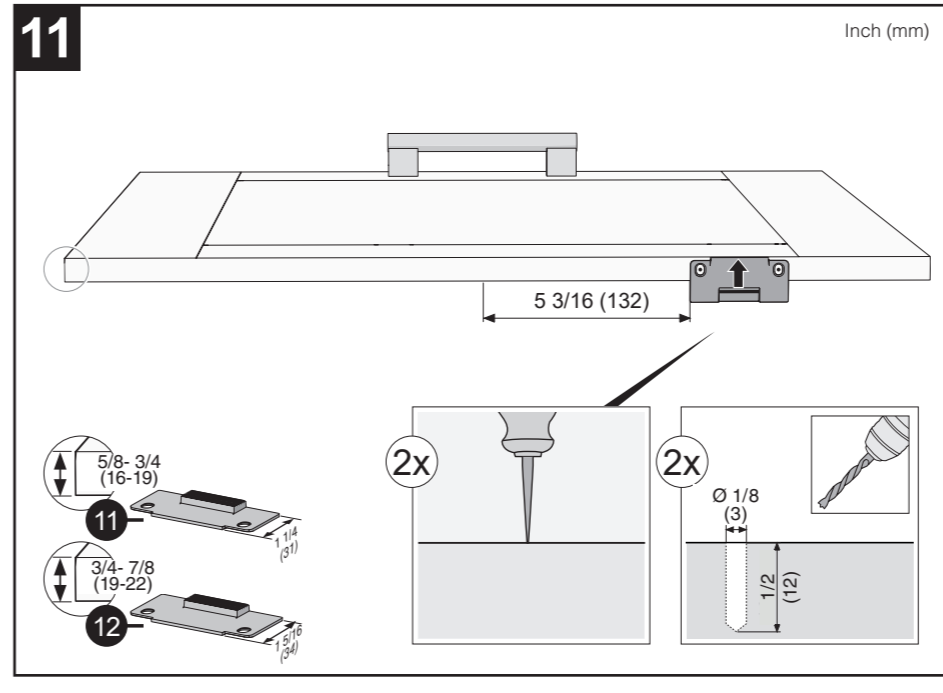 
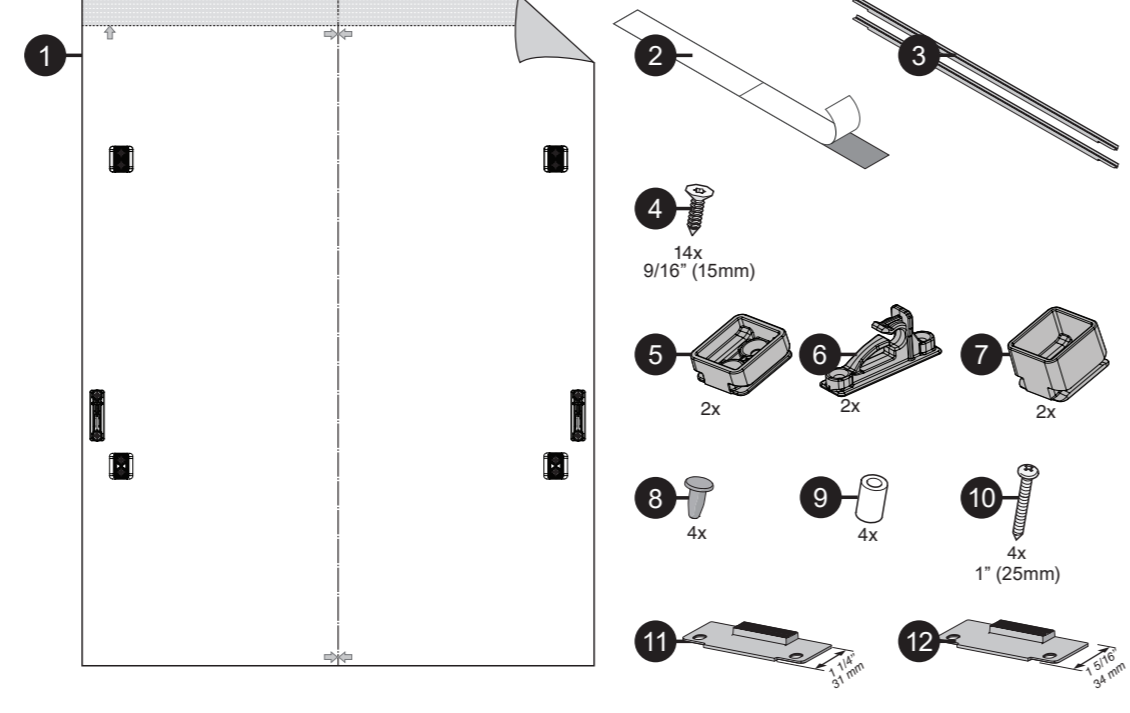 


X
Inch
mm

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
A

EN Cover door with slide function fitted
ES Panel de la puerta con puerta deslizante instalada
FR Porte décorative à glissières avec système de coulissement

X
Inch
mm

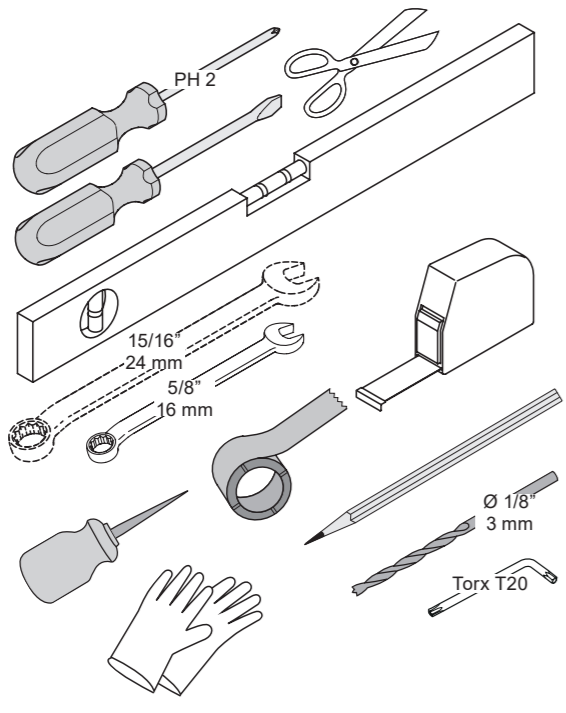

* EN Only certain models. If the following parts are not supplied with your dishwasher, they are not intended for your specific model.
ES Sólo se aplica a determinados modelos.
FR Uniquement pour certains modèles.

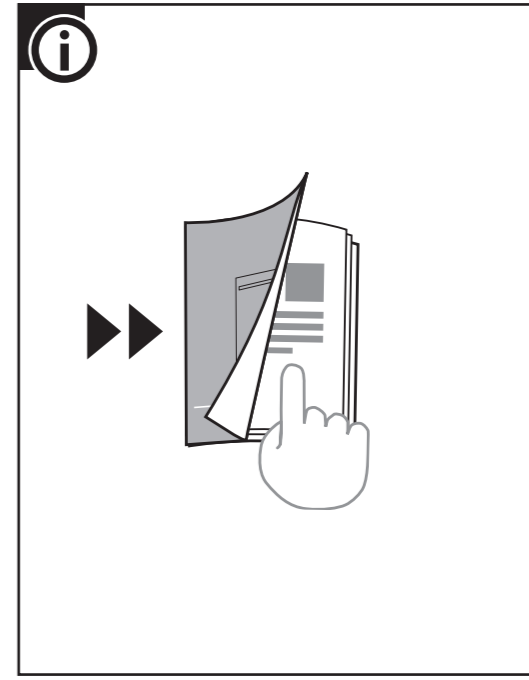
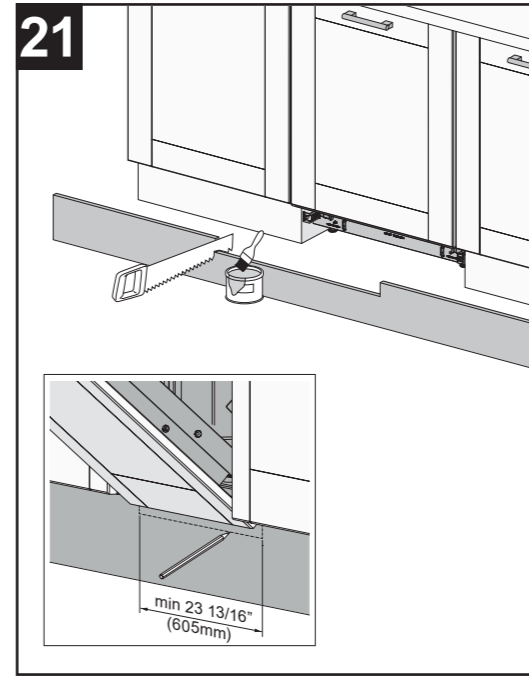
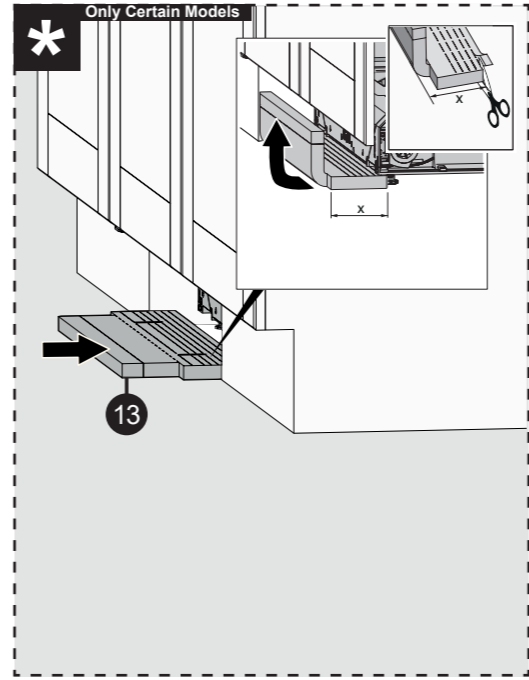
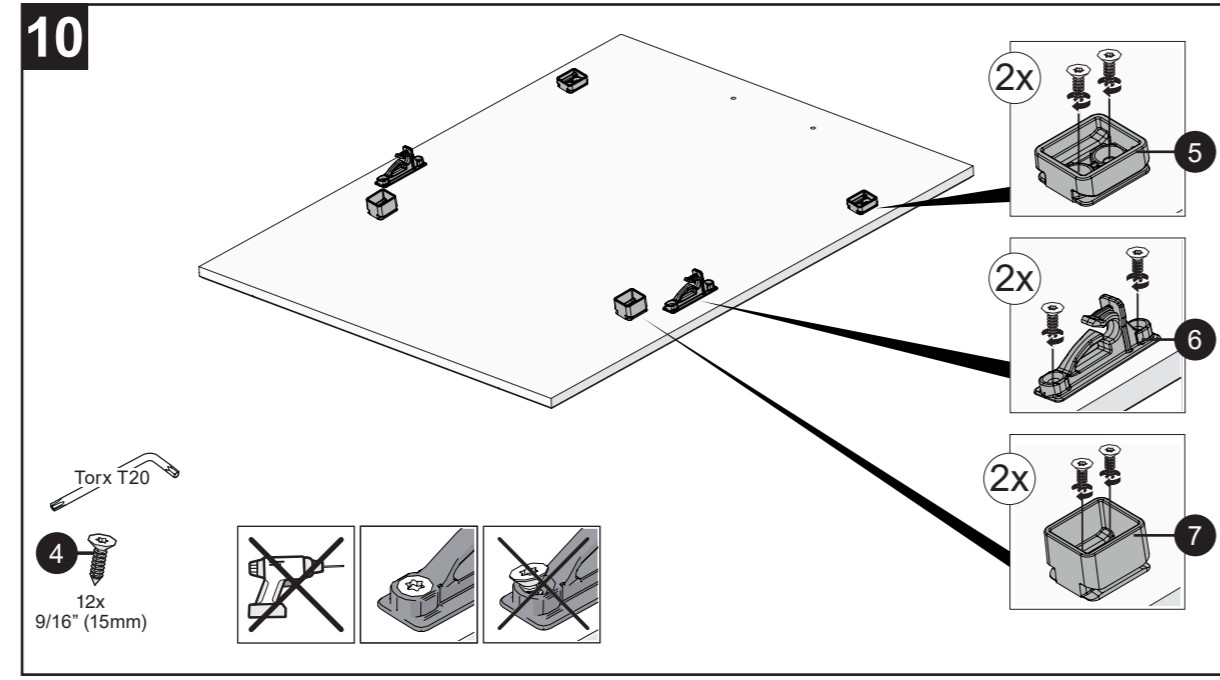
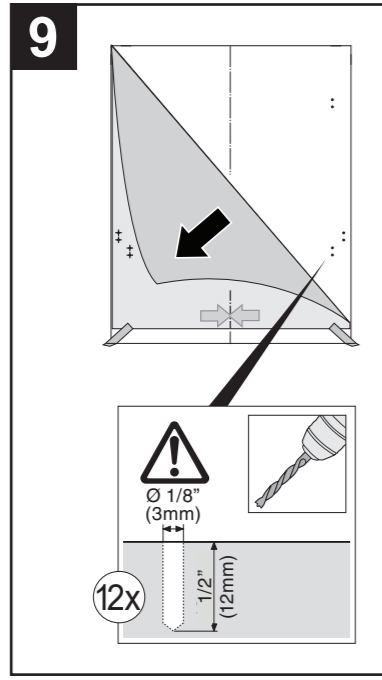
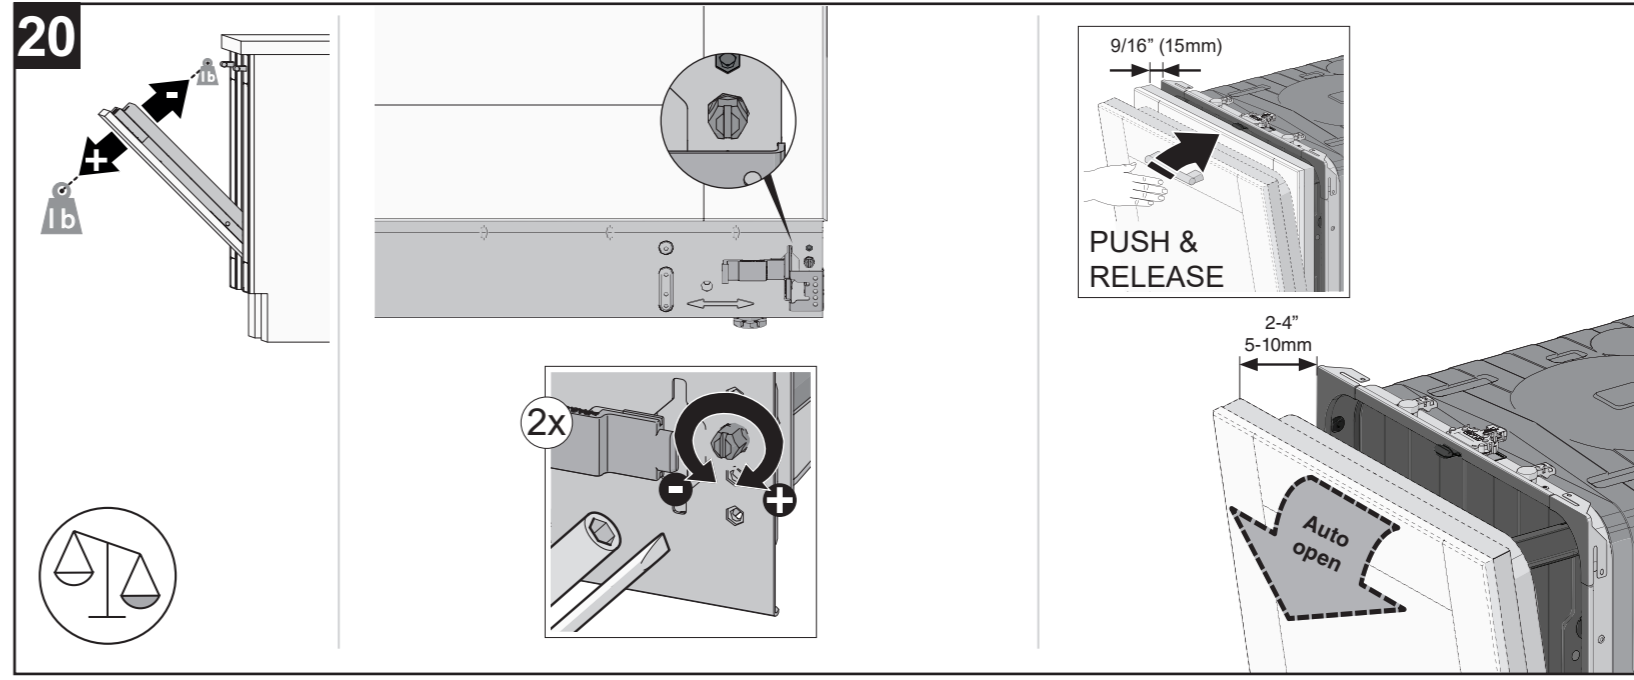
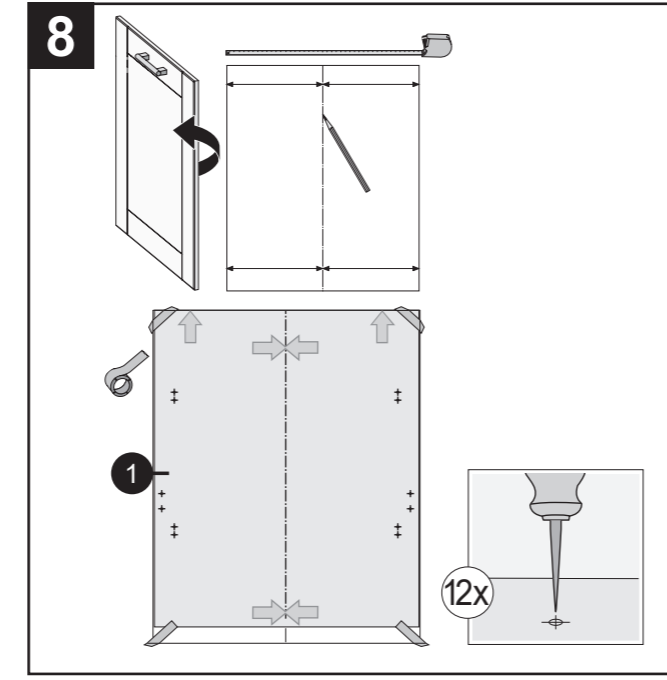
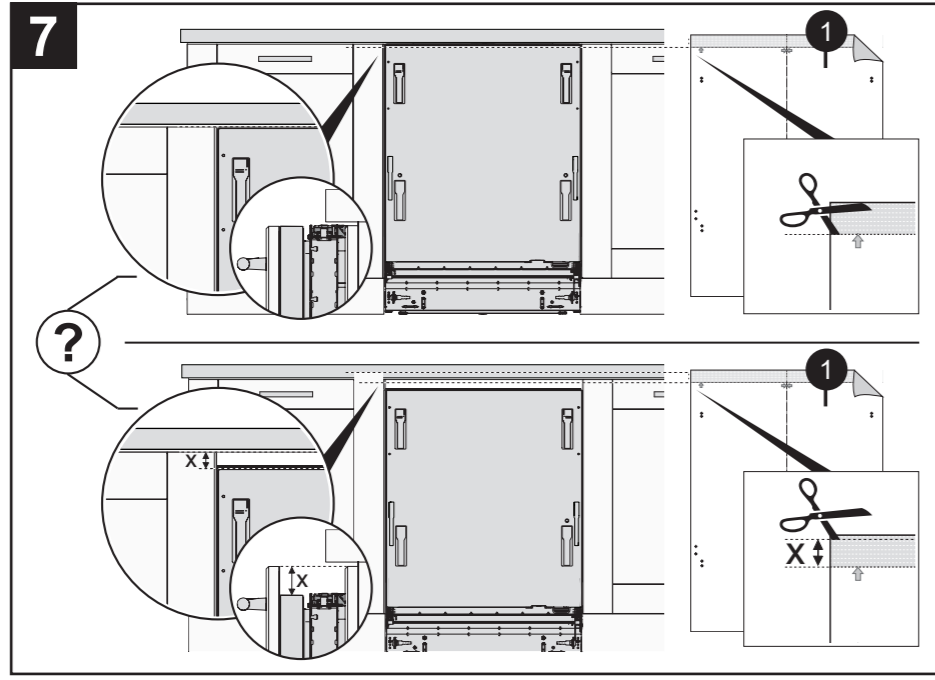
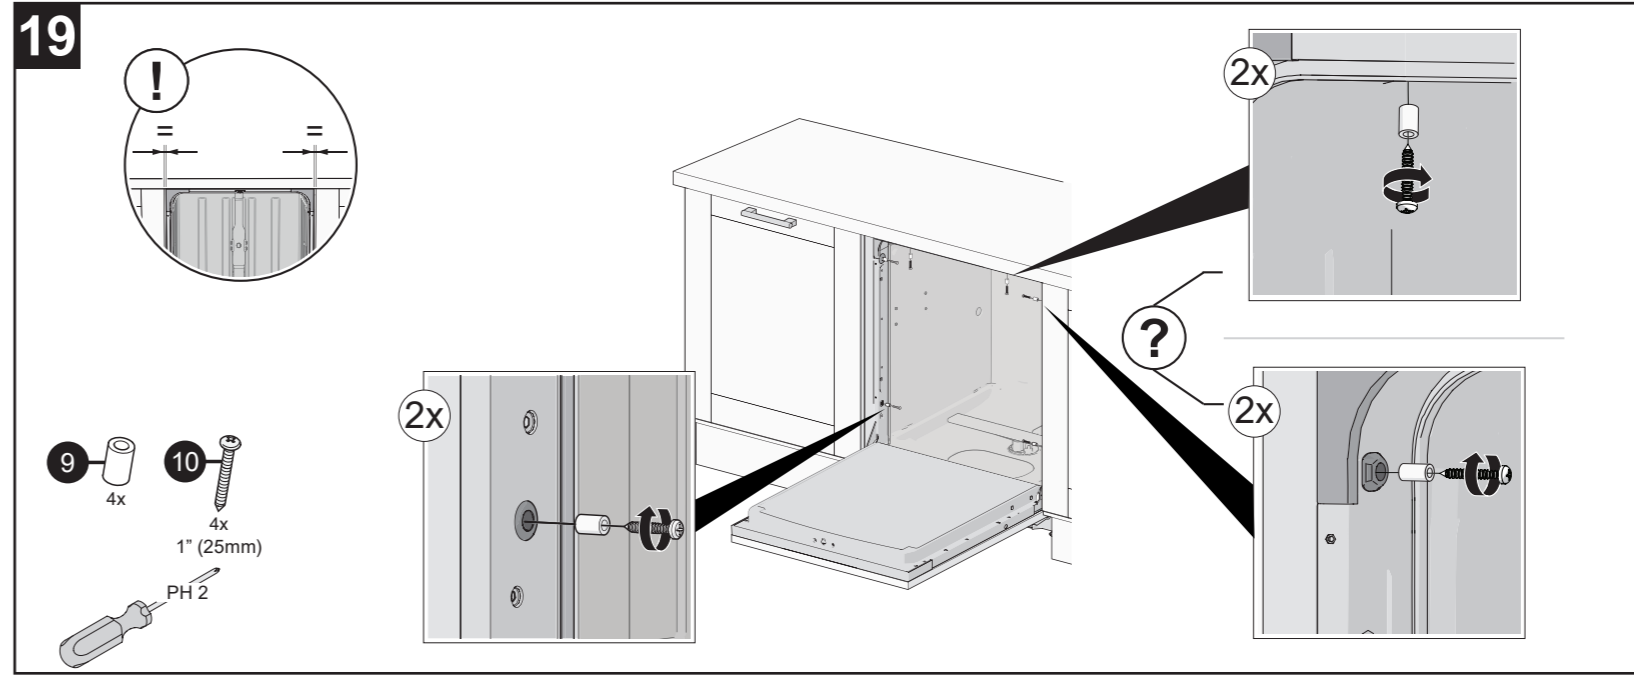
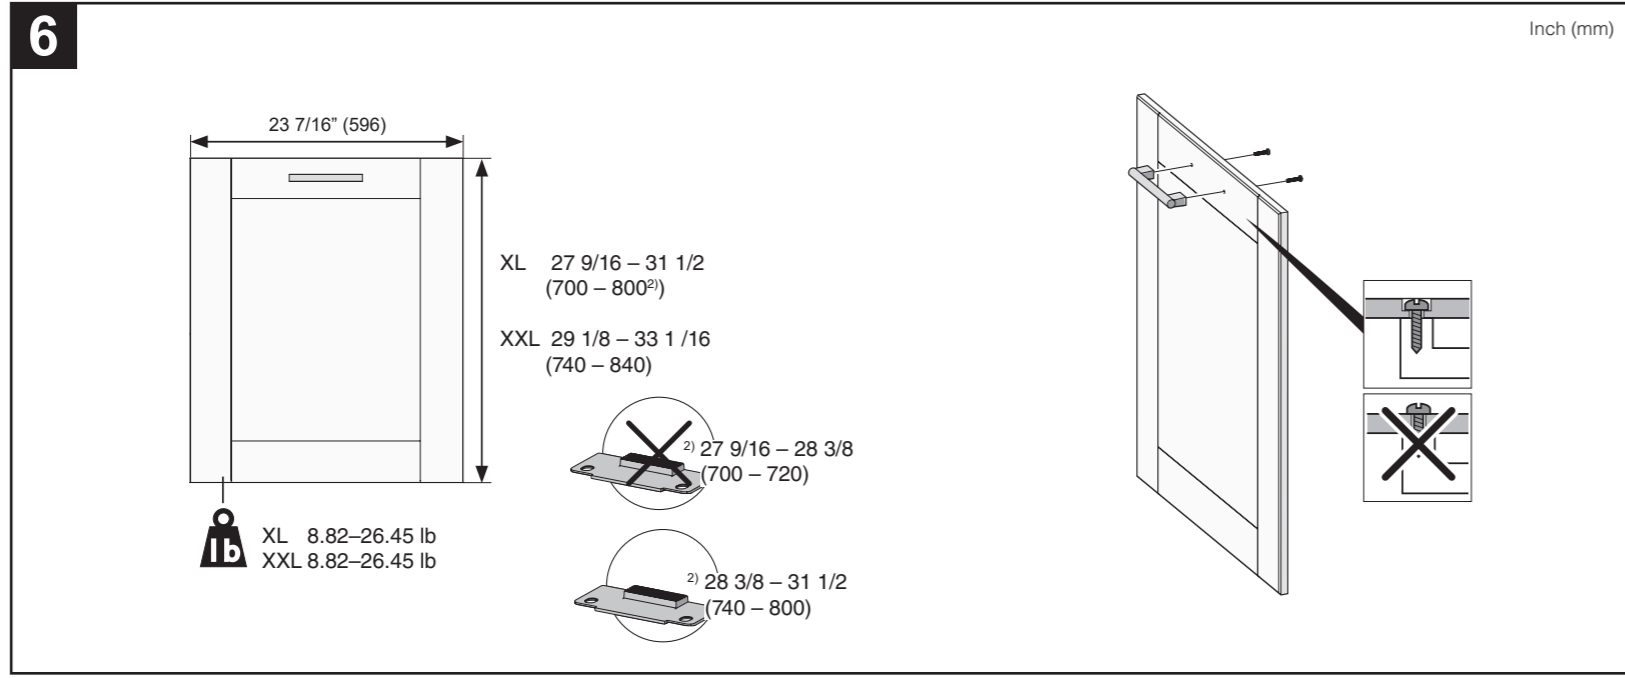
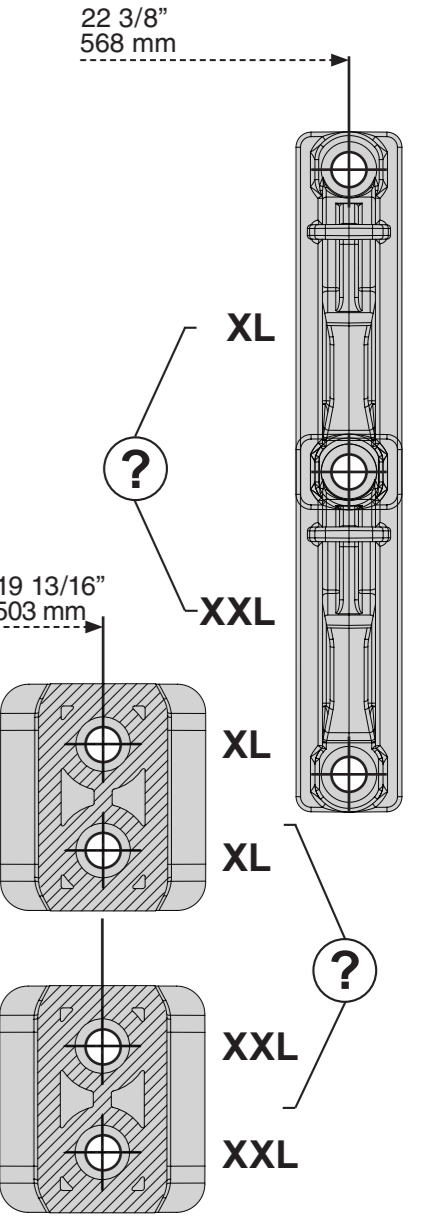
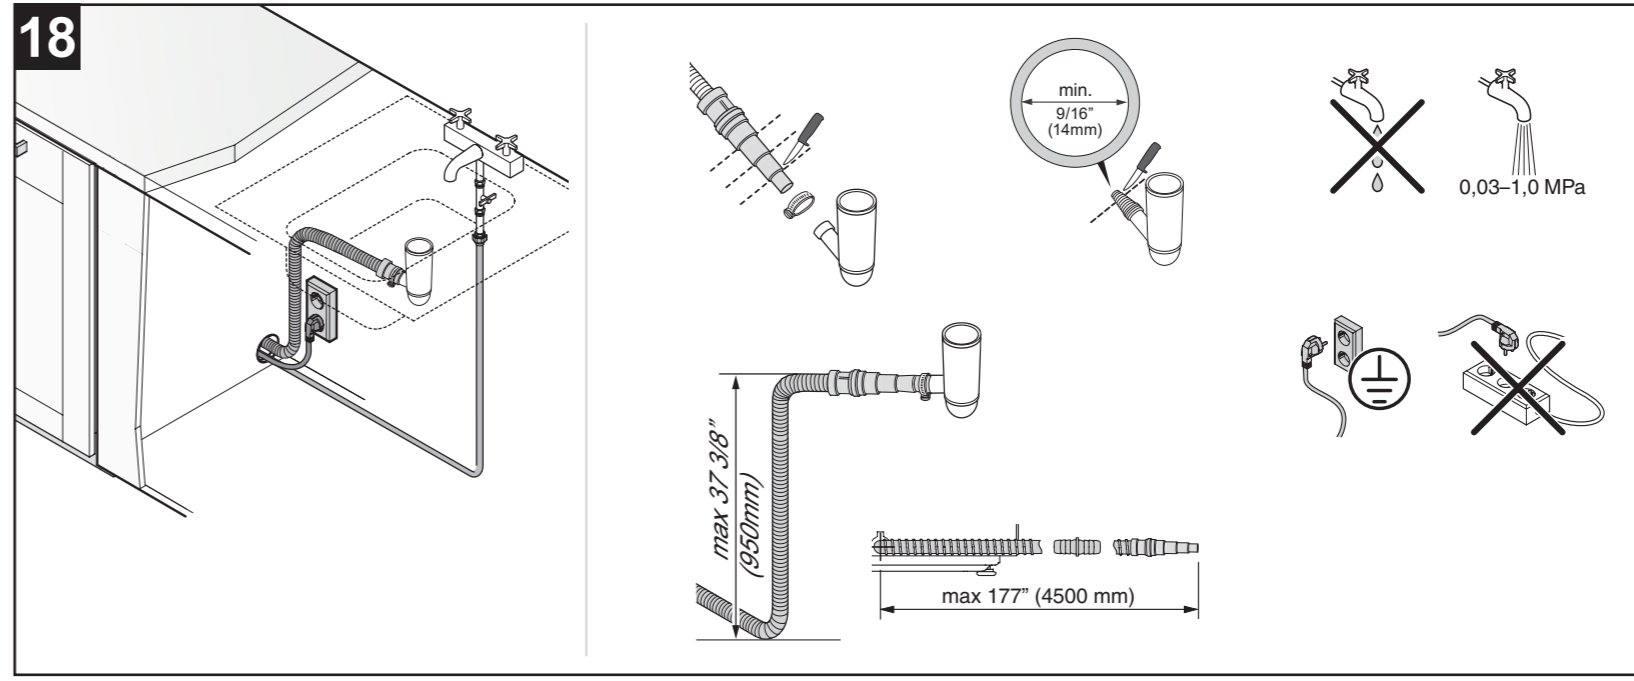
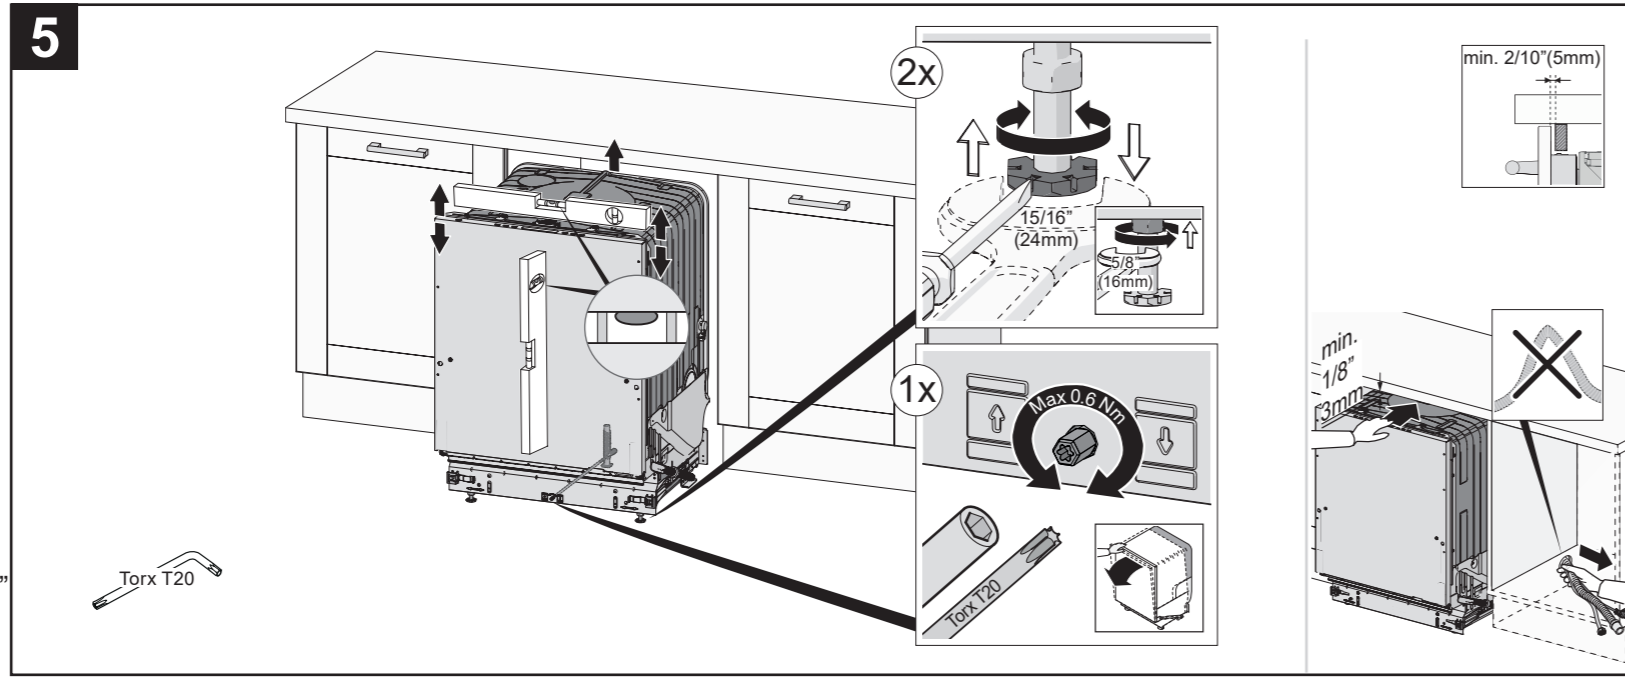
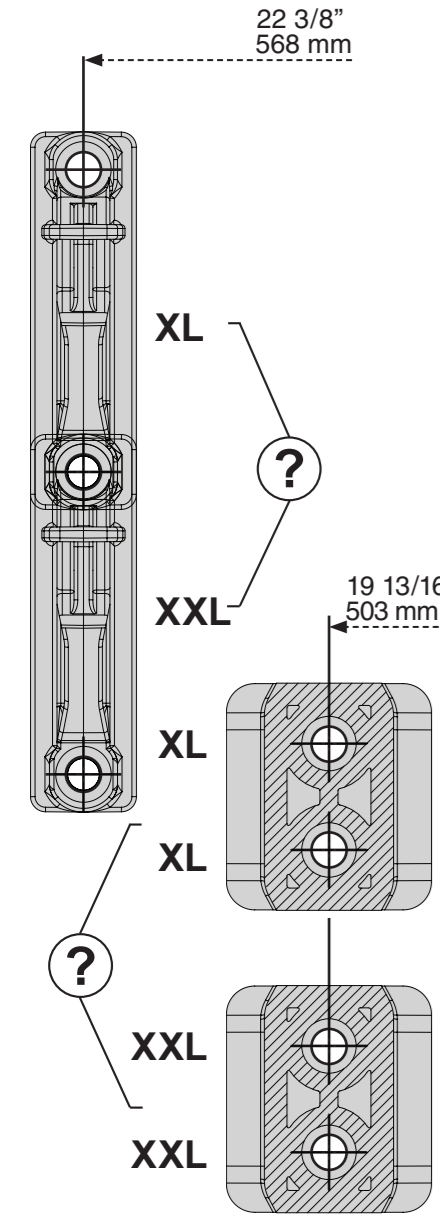
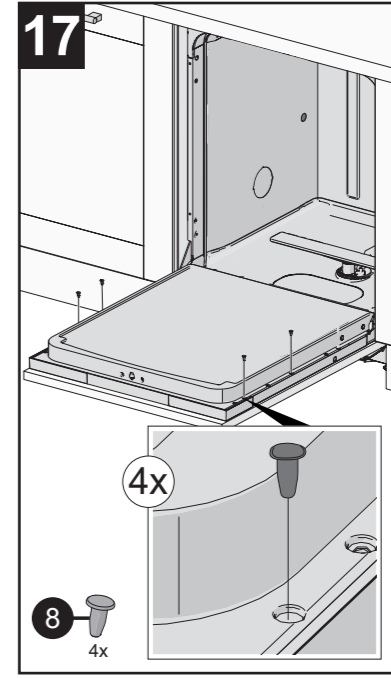
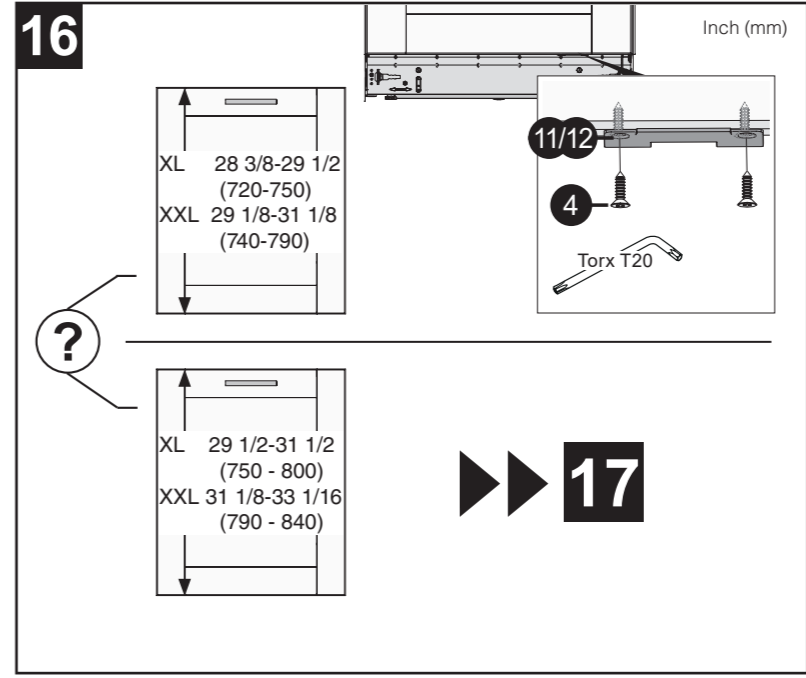
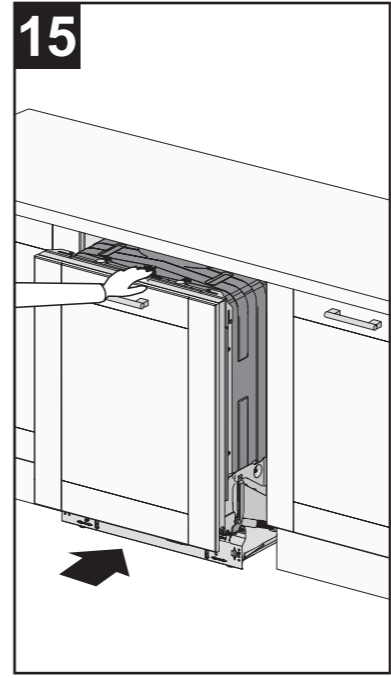
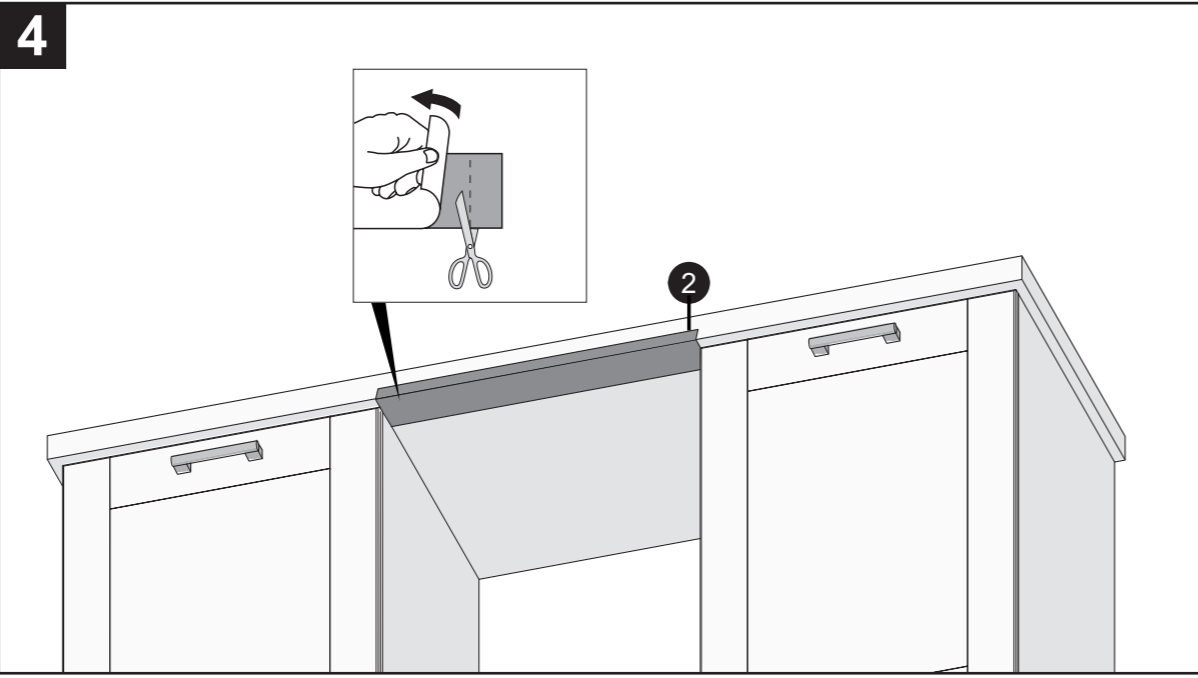
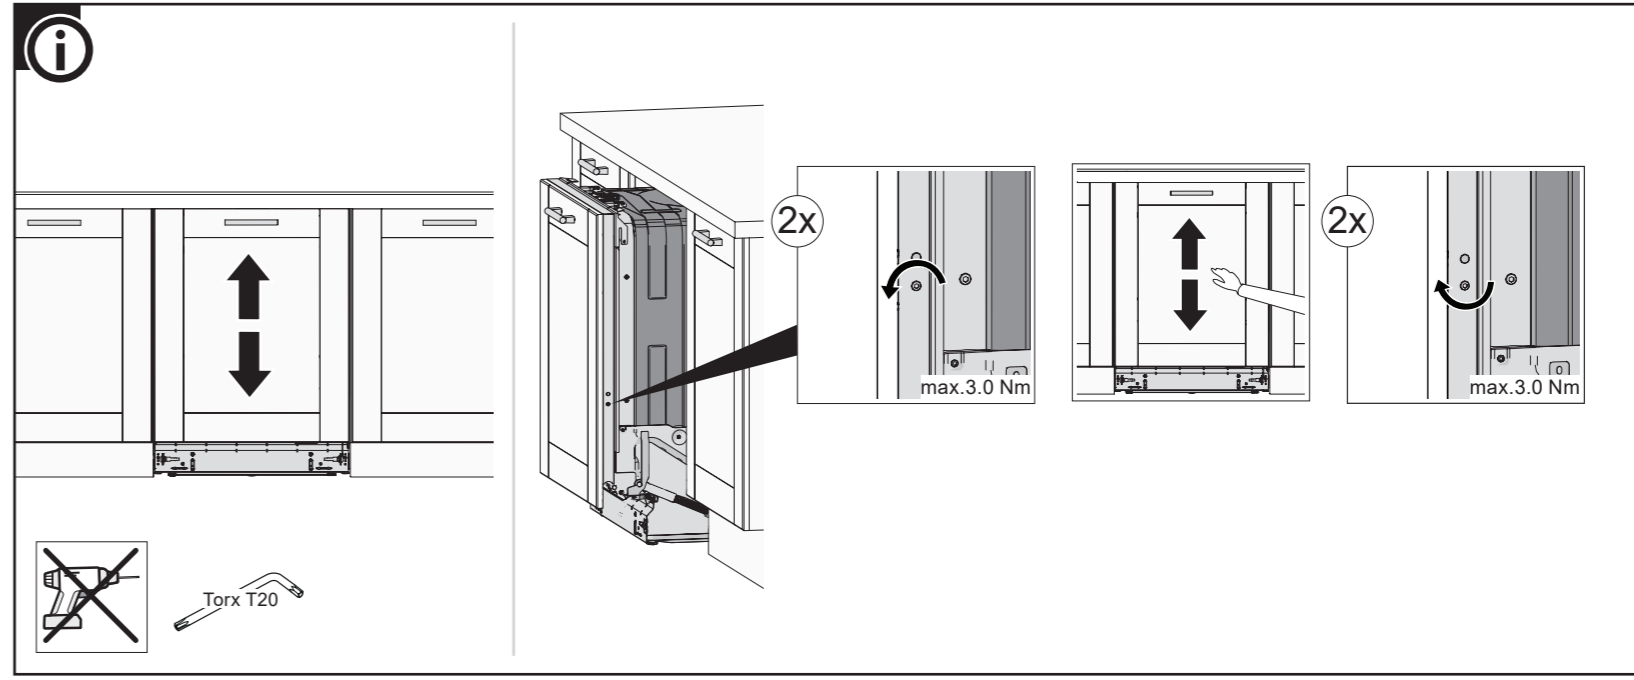
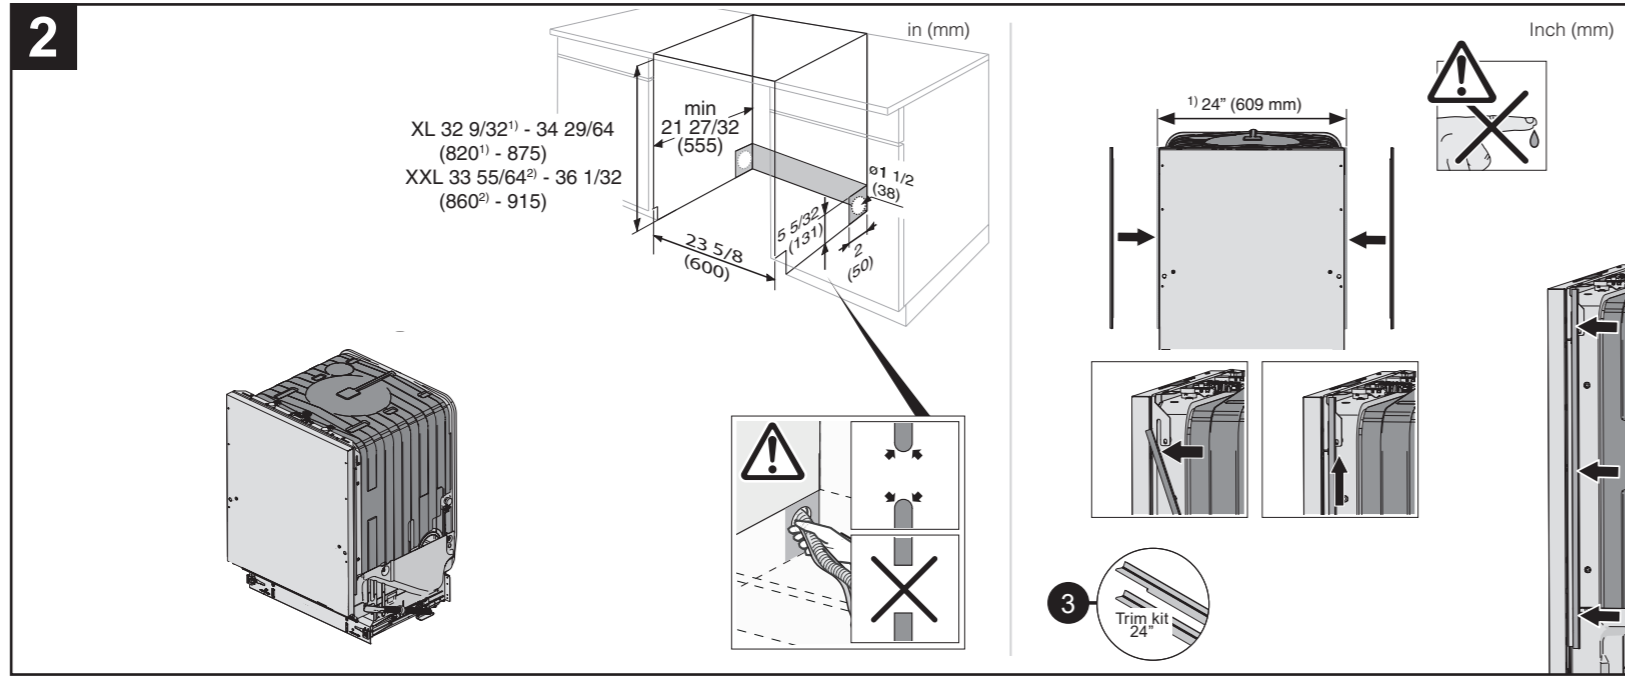
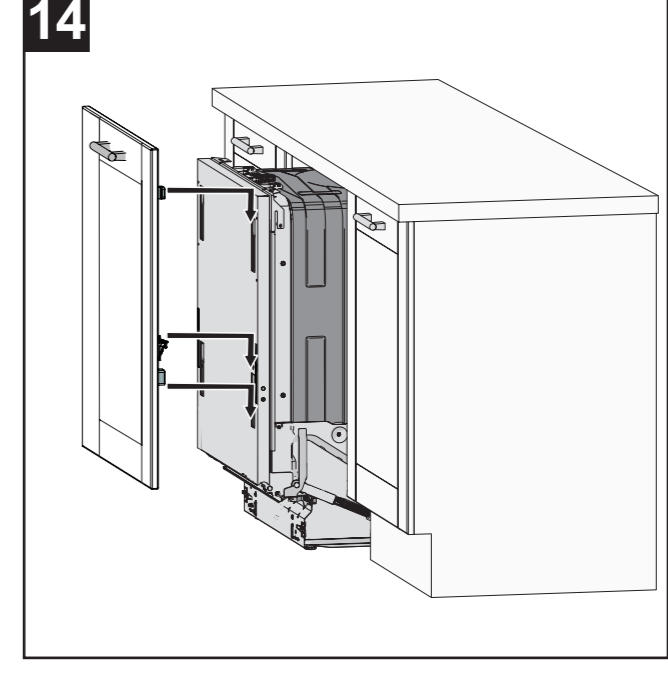
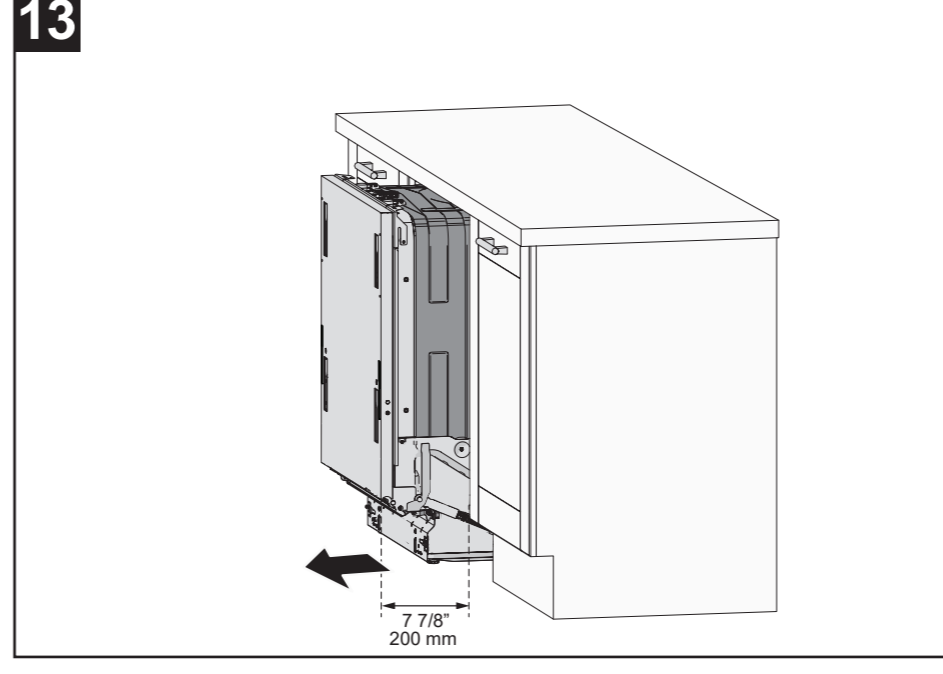
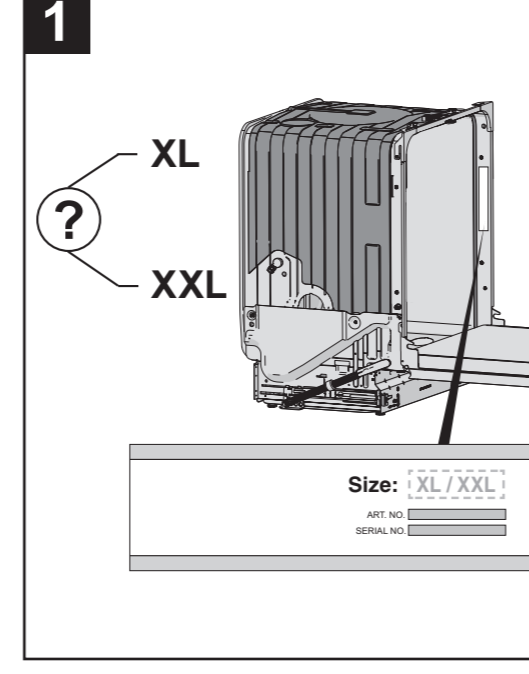


We reserve the right to make changes.

X
Inch
mm

B

                       EN Fixed cover door
ES Panel de la puerta fijo
FR Porte fixe

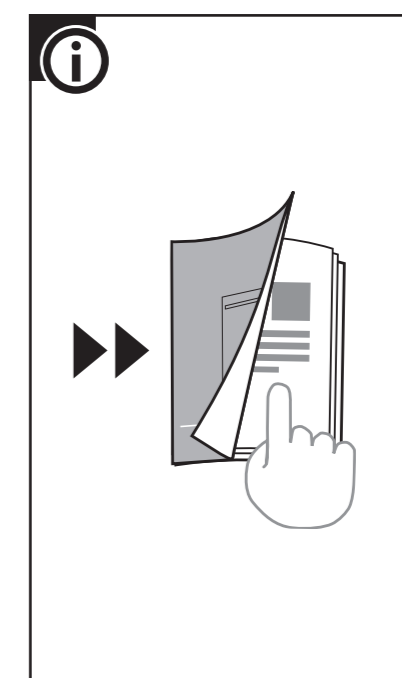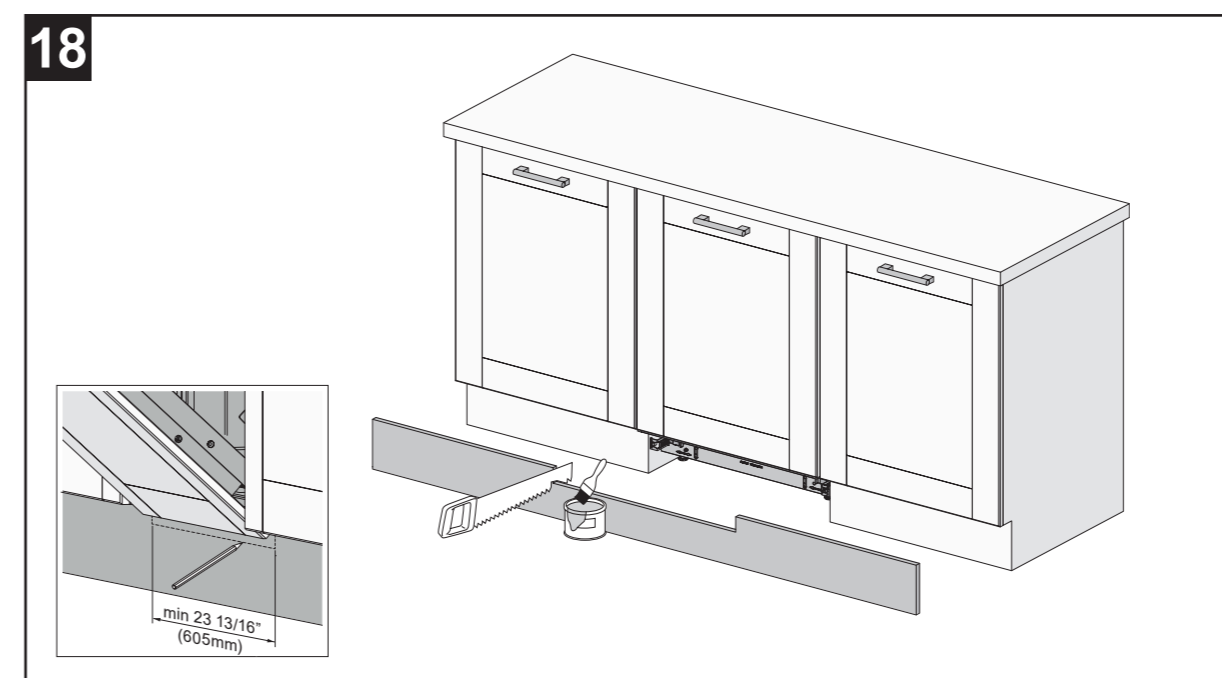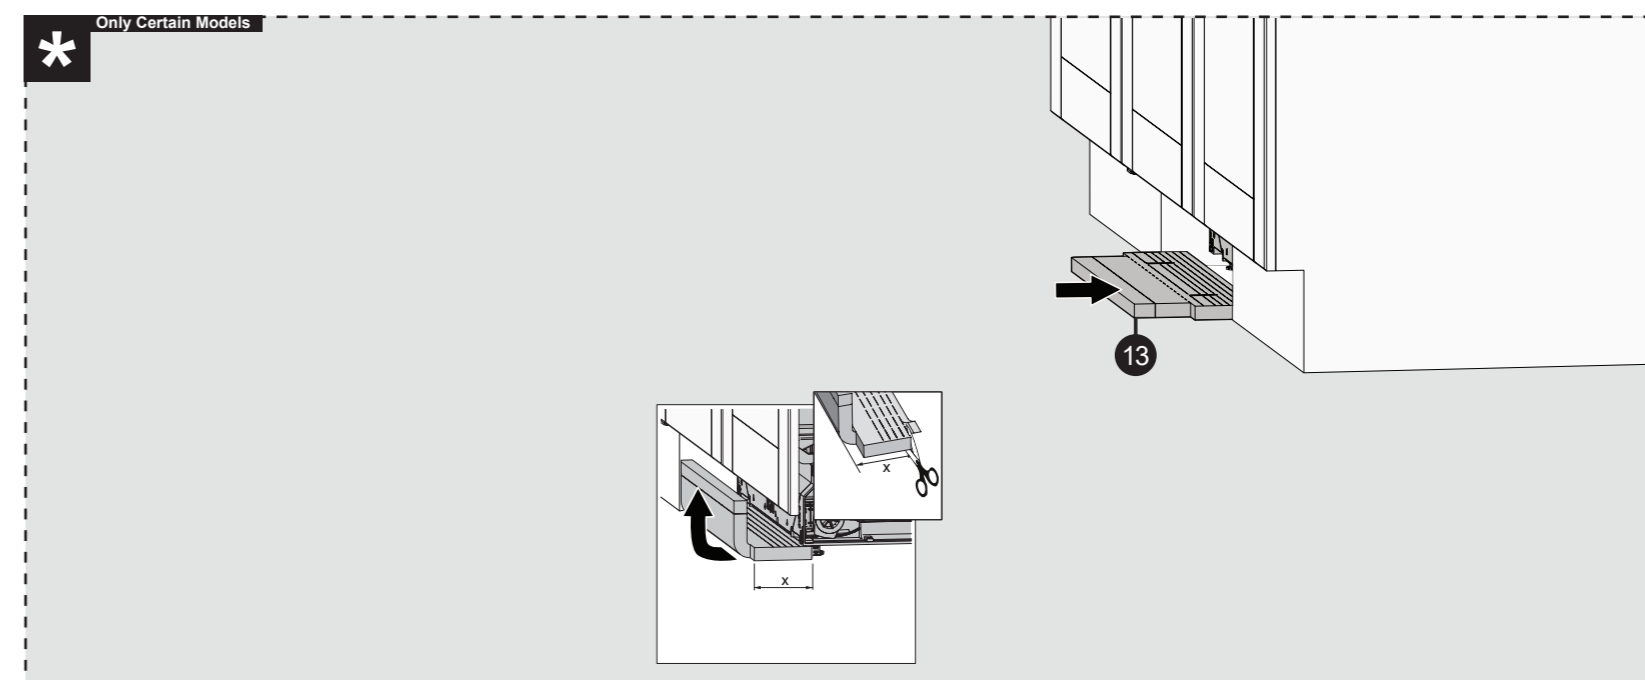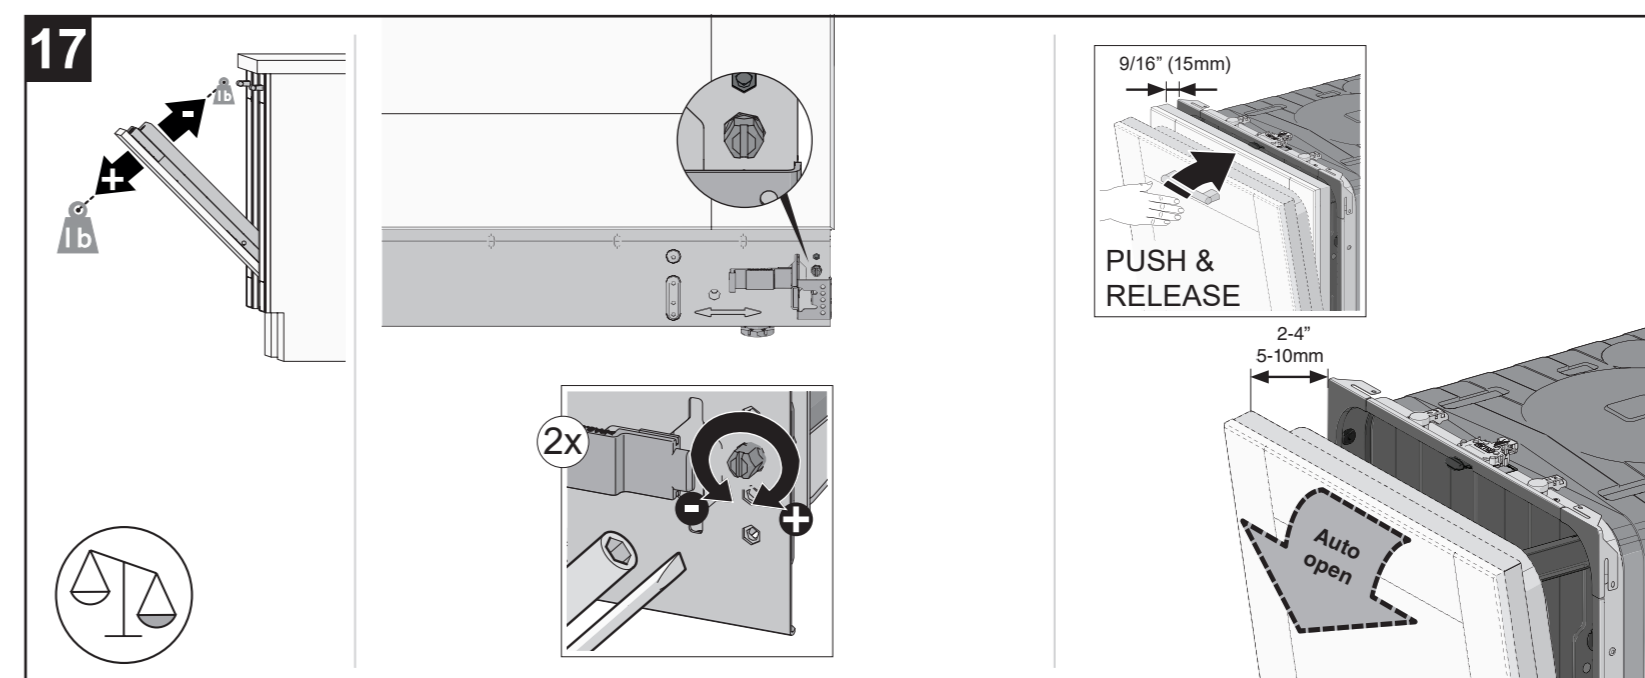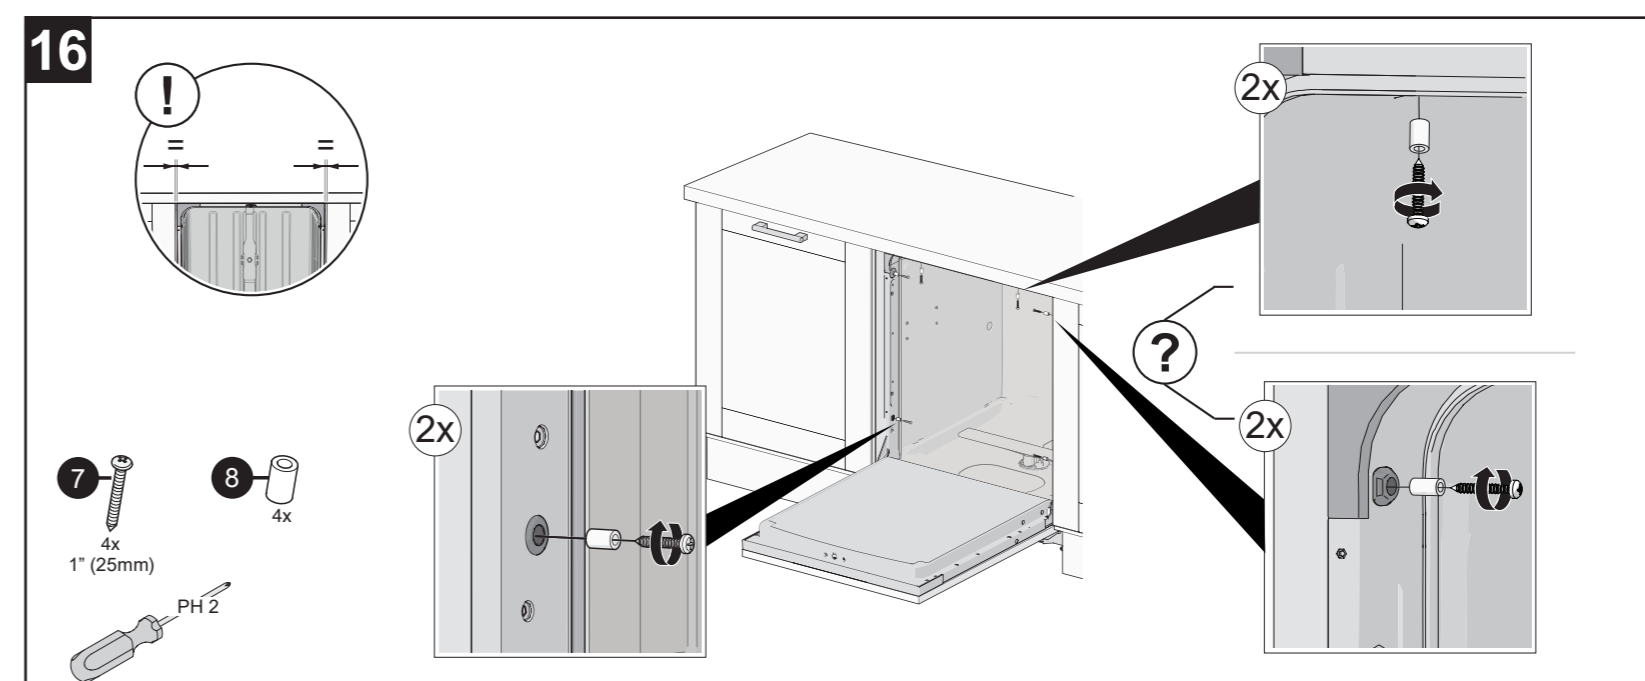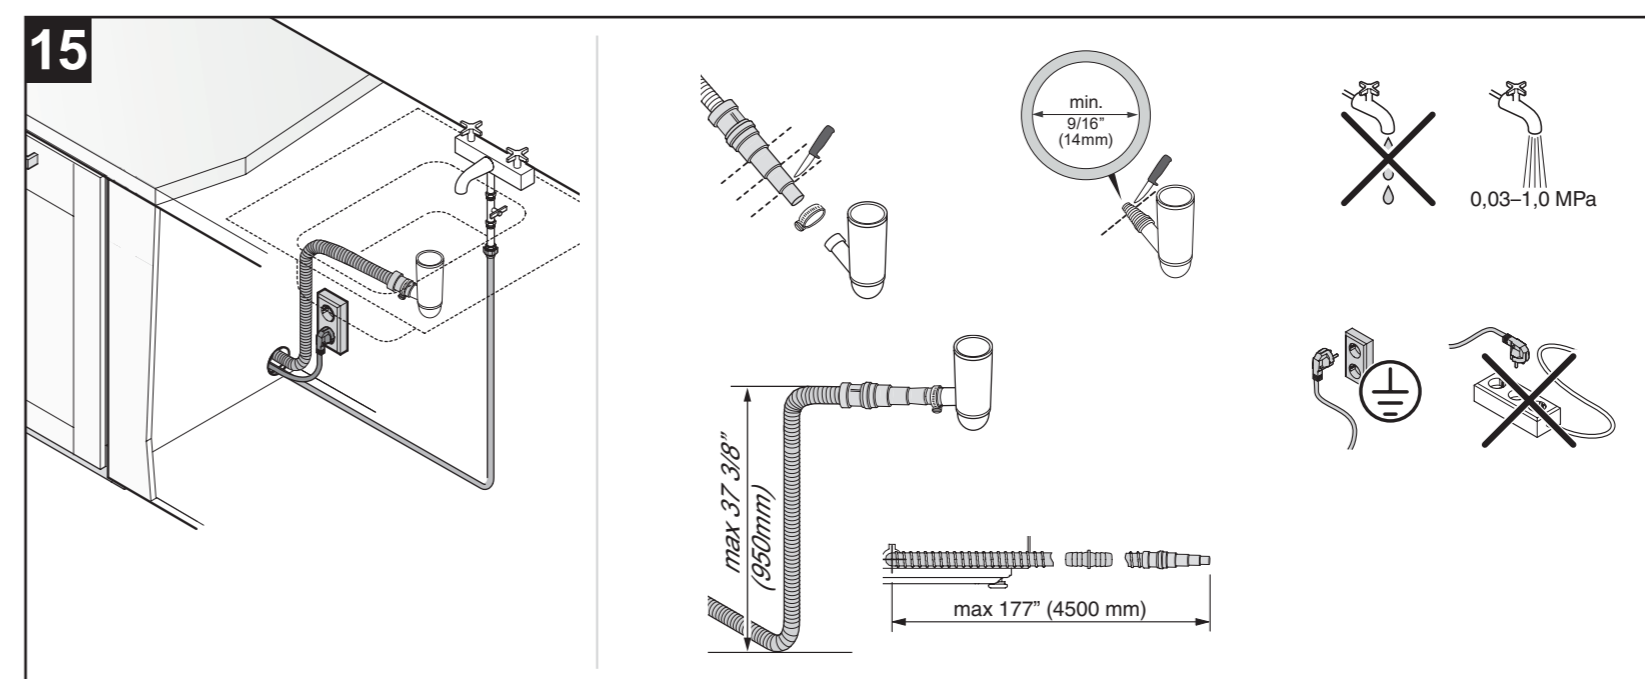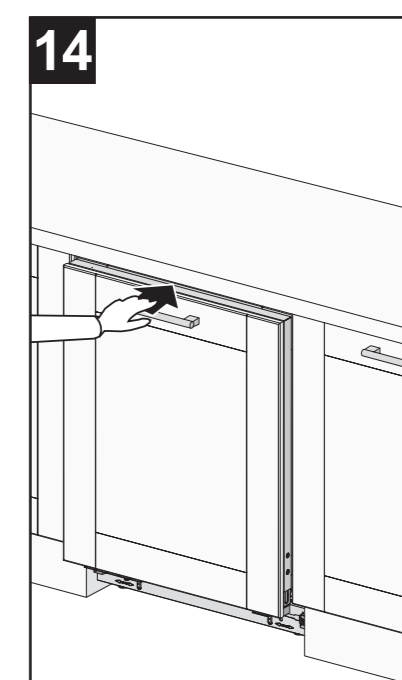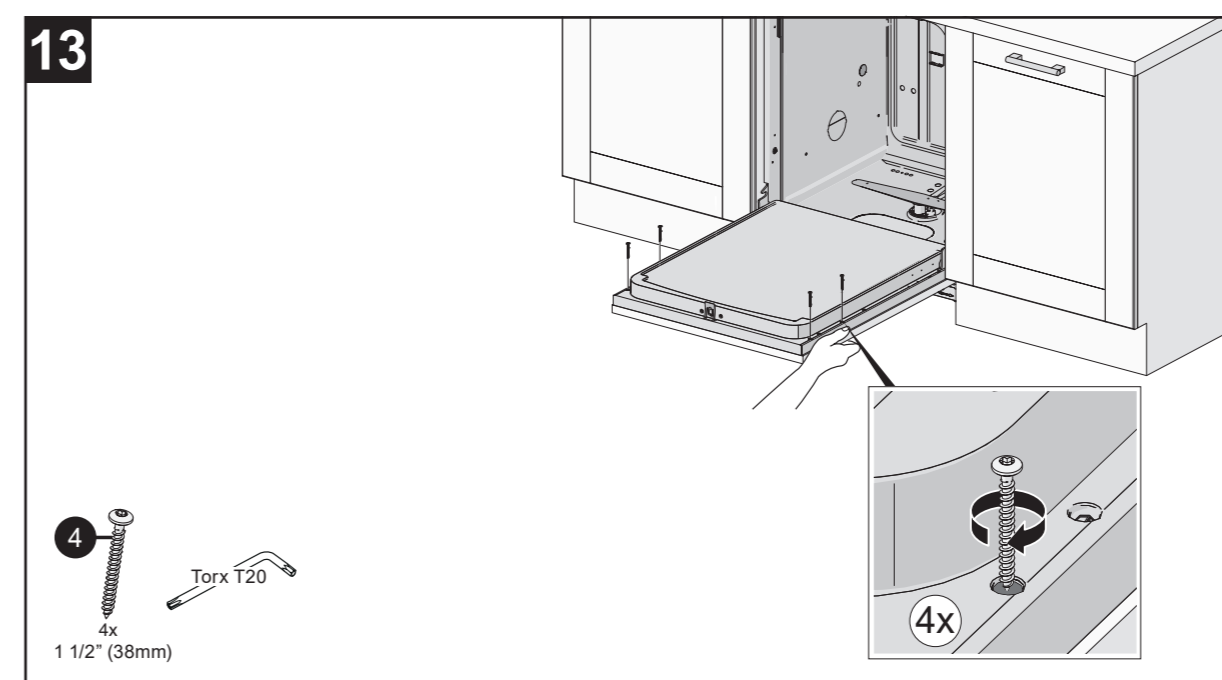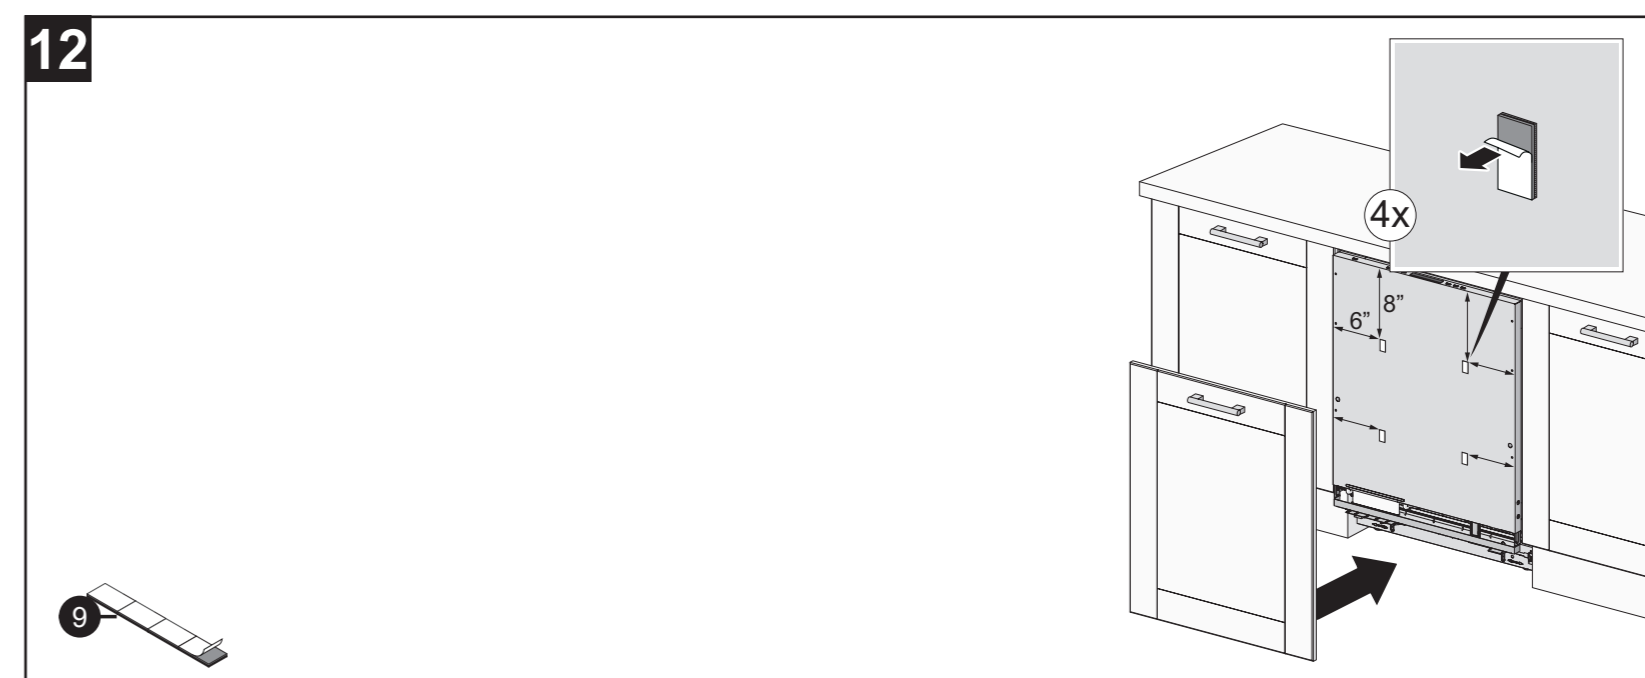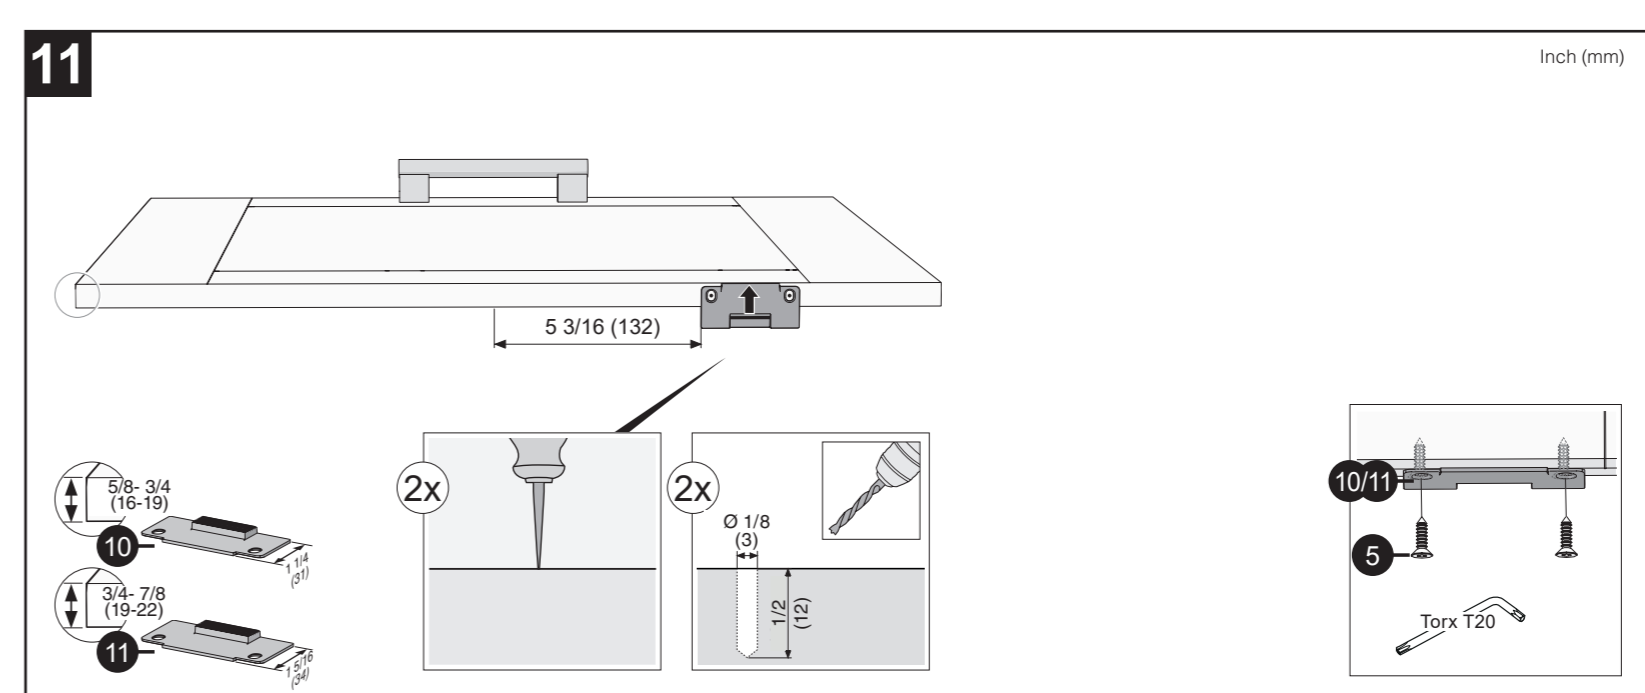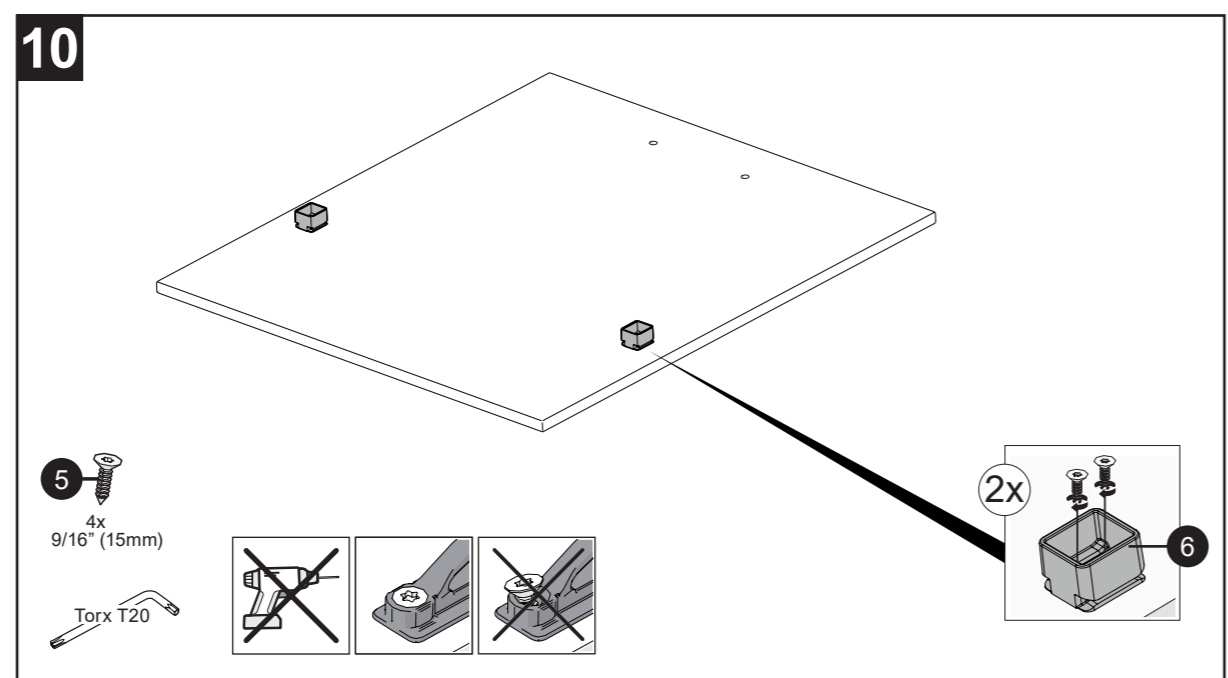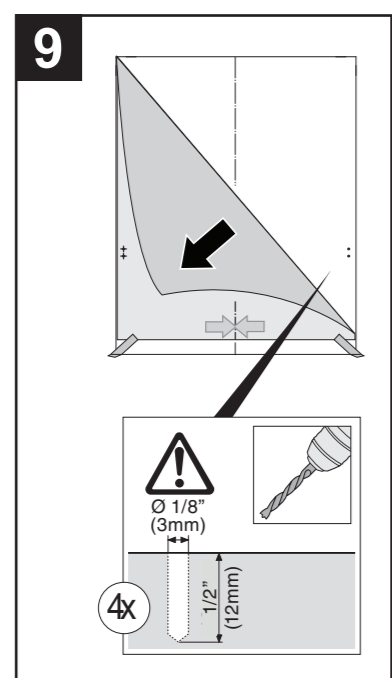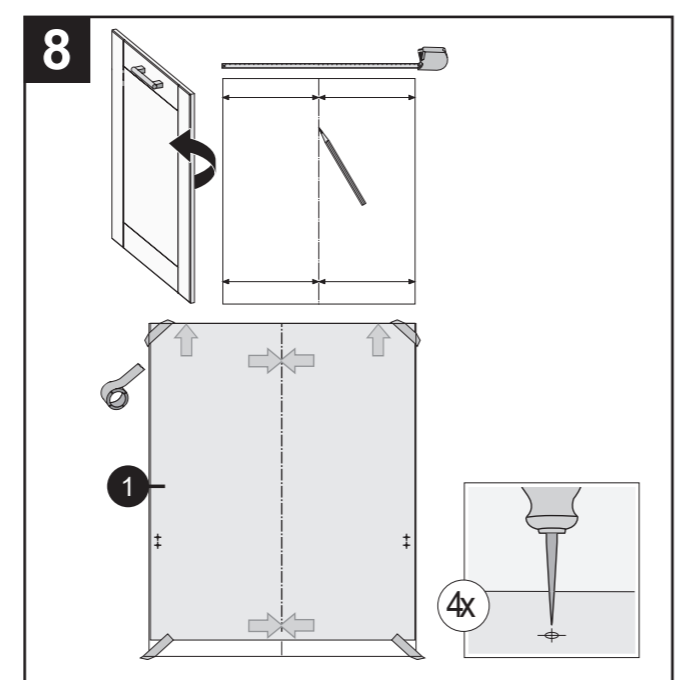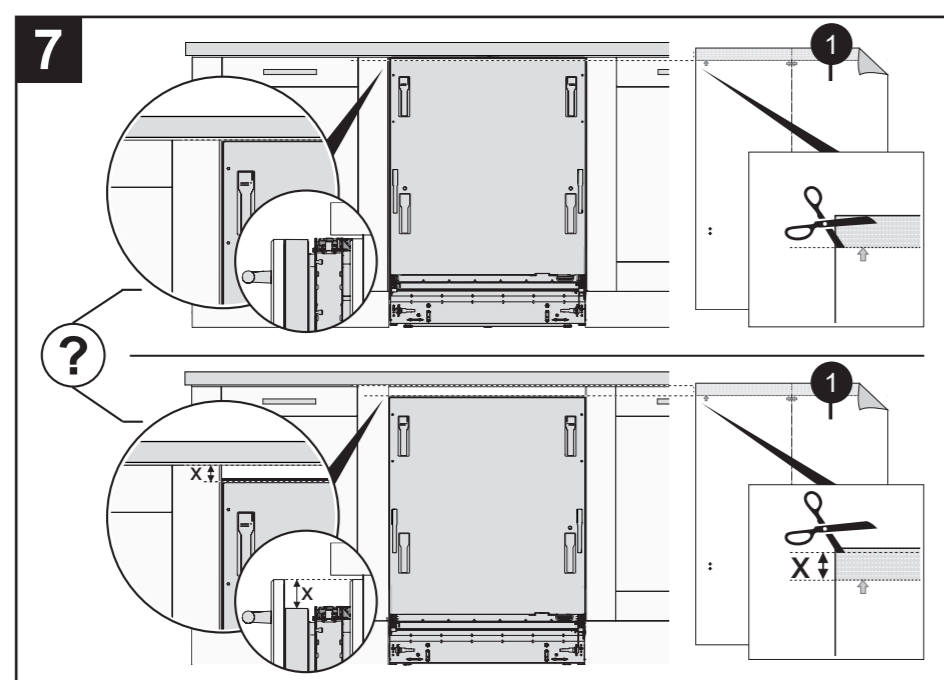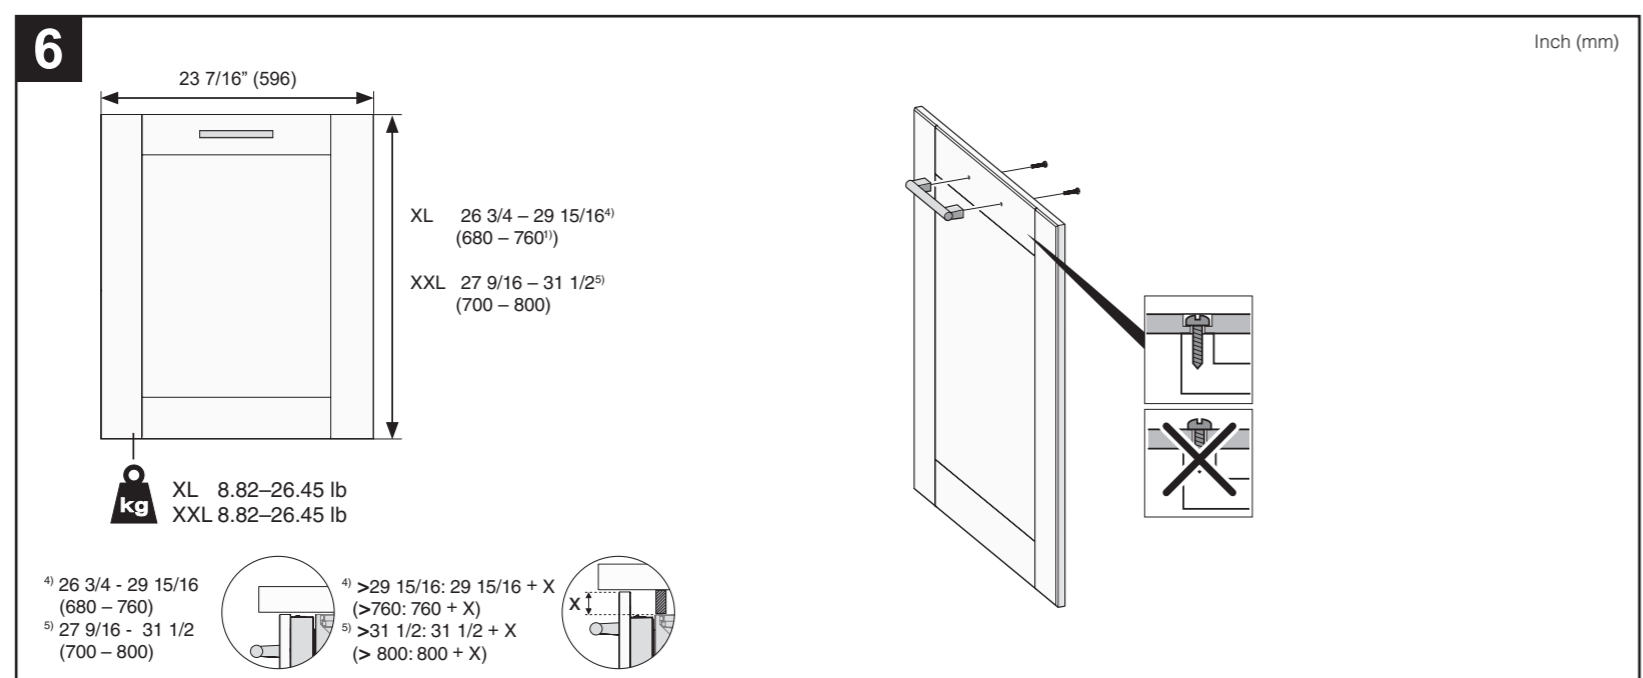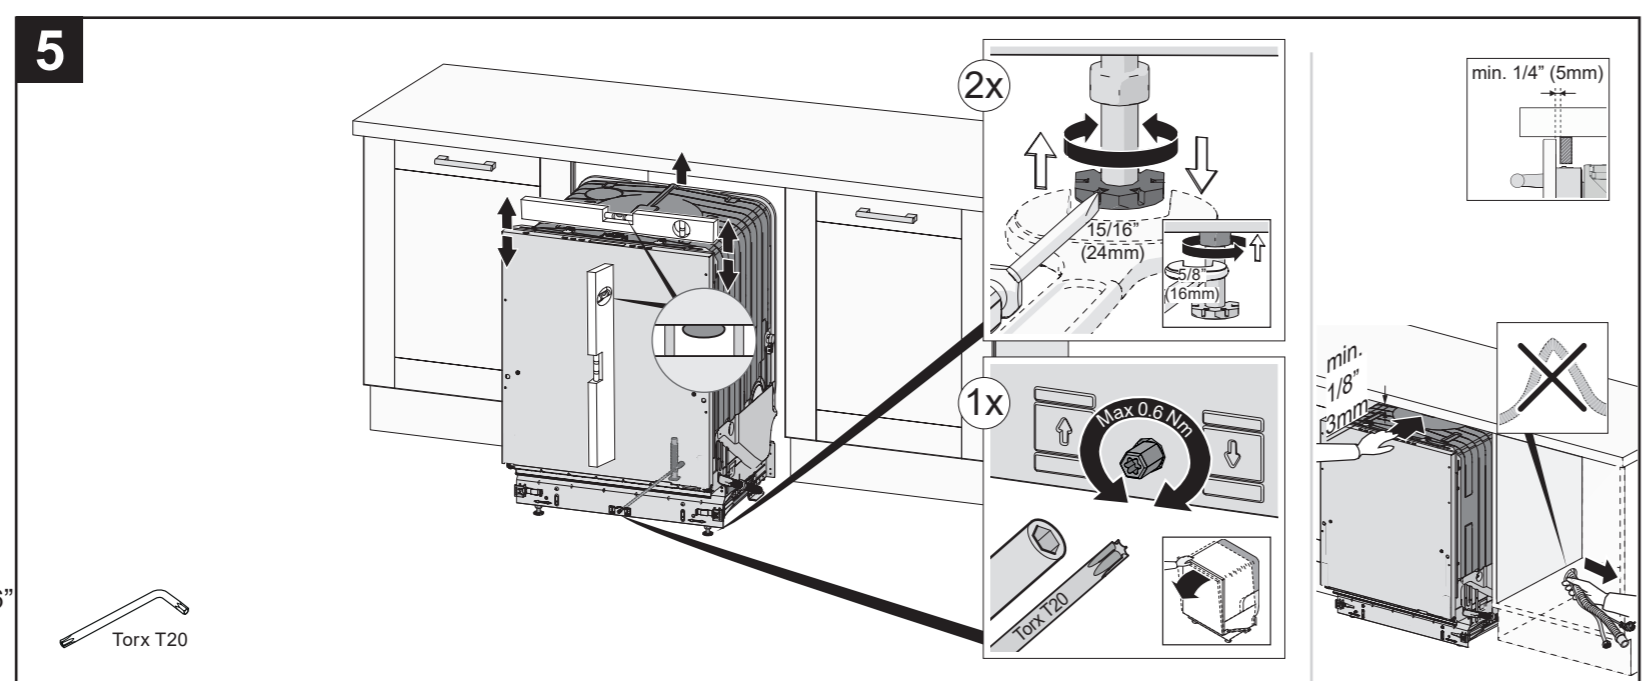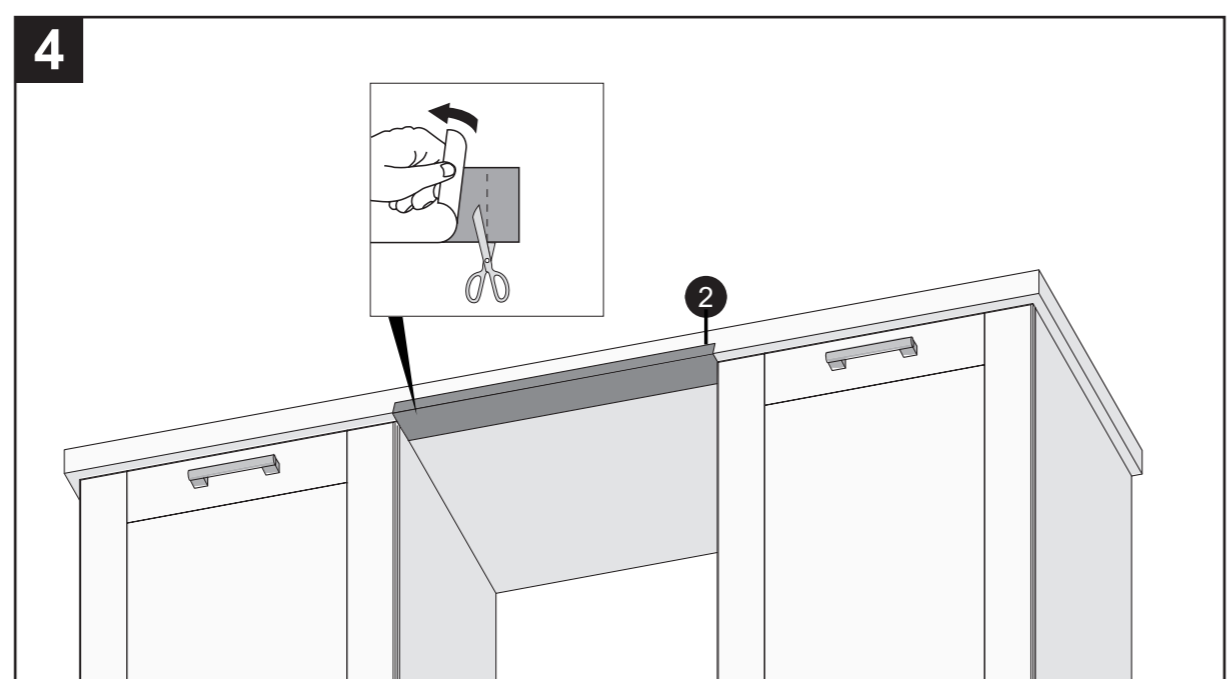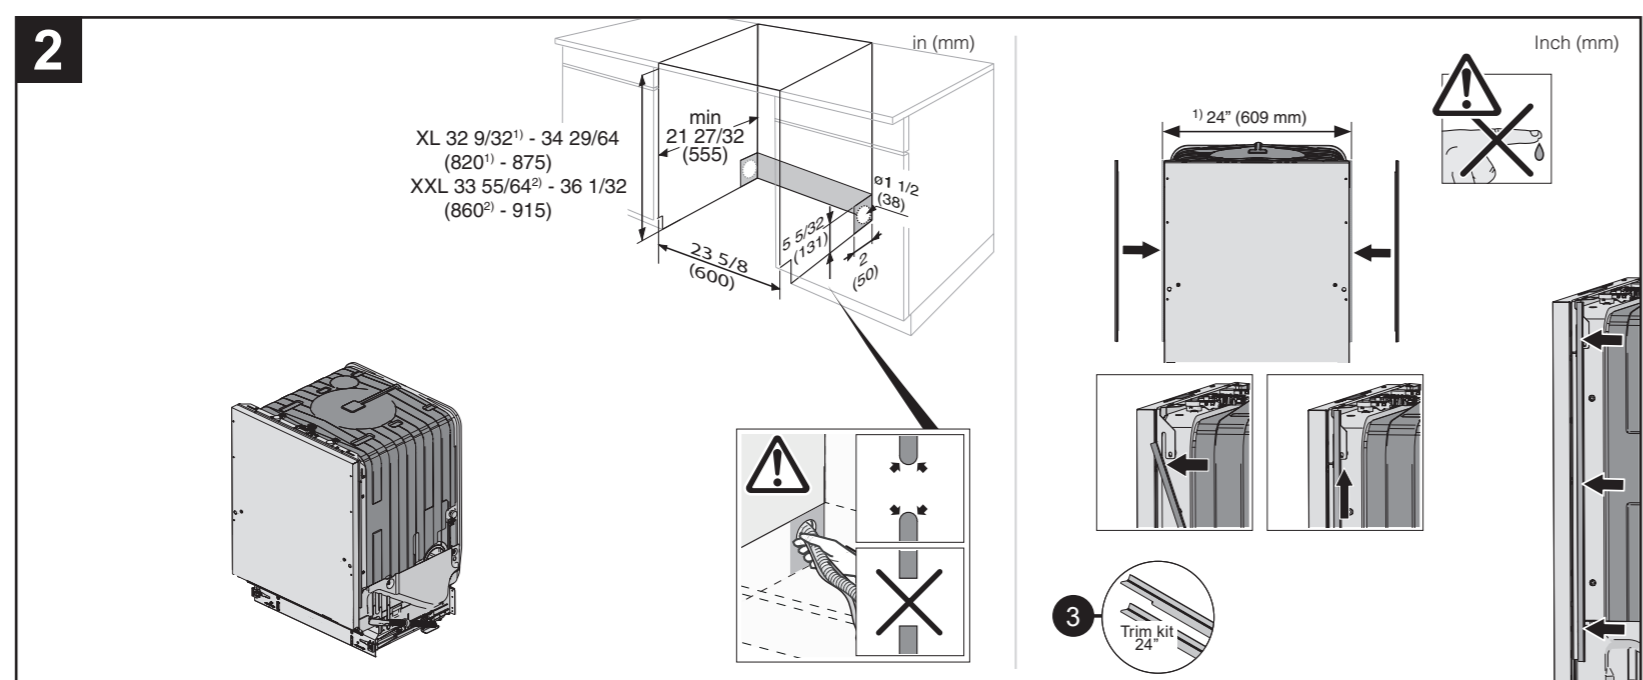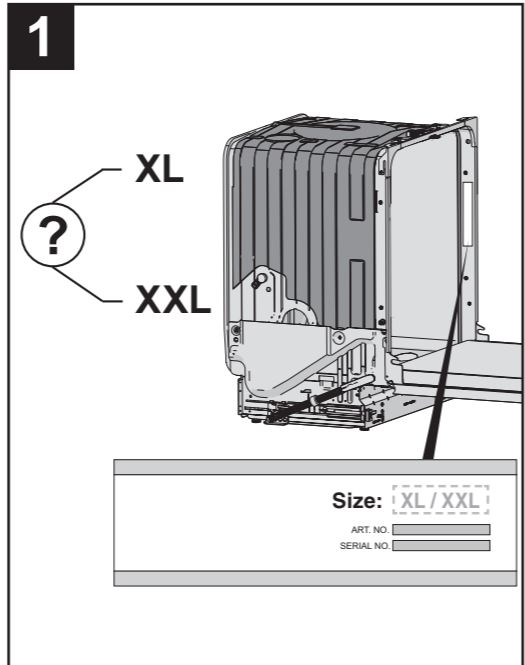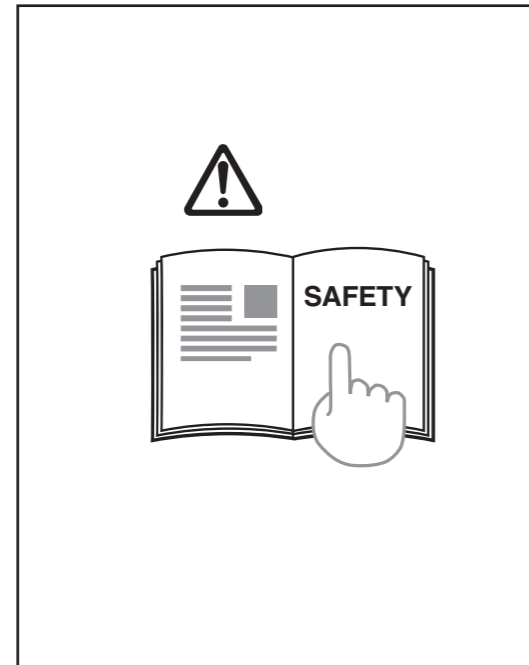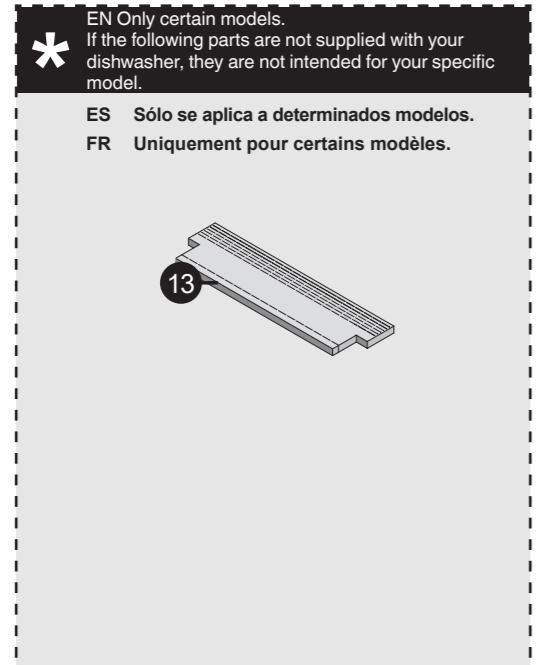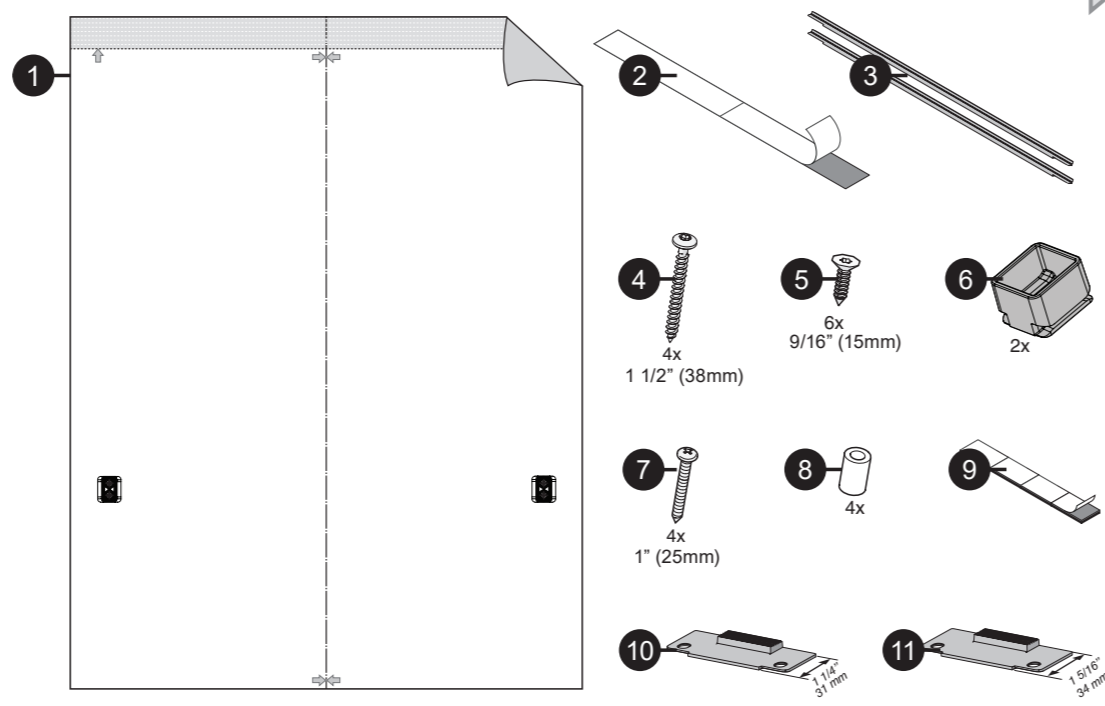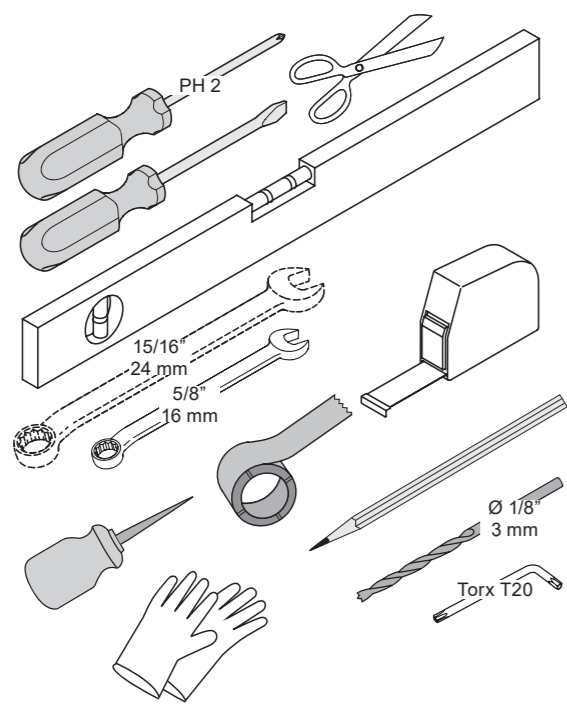

X
Inch
mm

