


# ASSEMBLY INSTRUCTIONS

ITEM NO: EC-1000FL

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

1. SCREW THE POLE (B) CLOCKWISE INTO THE BASE (A) TO TIGHTEN.
2. SCREW THE POLE (C) CLOCKWISE INTO THE POLE (B) TO TIGHTEN.
3. SCREW THE POLE (D) CLOCKWISE INTO THE POLE (C) TO TIGHTEN.
4. SCREW SOCKET ASSEMBLY (E) CLOCKWISE INTO THE POLE (D) TO TIGHTEN. GET THE REMAINING SLACK OF THE POWER CORD OUT FROM BASE HOLD. (MAKING SURE THE SOCKET IS FACING IN FRONT OF THE LAMP. IF NOT, USING A WRENCH TO ADJUST THE DIRECTION AND TIGHTEN.)
5. REMOVE THE SOCKET RING (G) FROM SOCKET ASSEMBLY (E).
6. PLACE TIFFANY SHADE (F) INTO THE SOCKET (E). THEN TIGHTEN SOCKET RING (G) SECURING THE SHADE IN PLACE.
7. INSTALL BULB ( NOT INCLUDED) INTO THE SOCKET.
8. INSERT THE POWER PLUG INTO AN OUTLET AND ENJOY !!

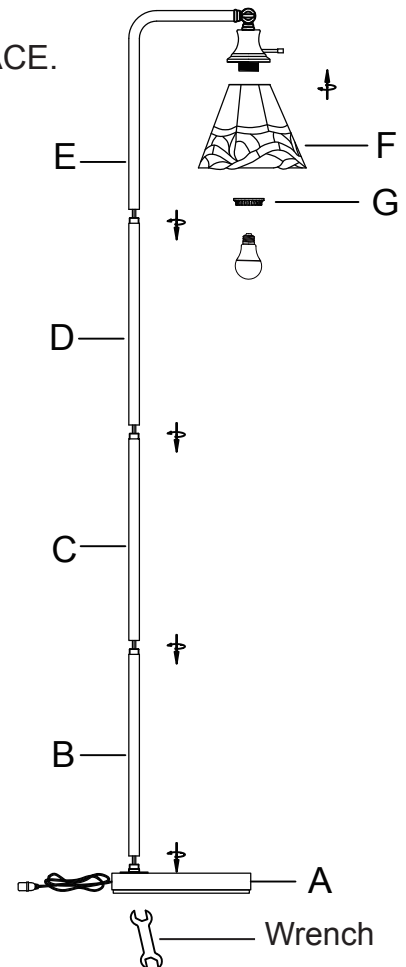

**Use MAX 60 Wattage type A bulb ( Bulb not included)**

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**