


ASSEMBLY INSTRUCTIONS

ITEM NO: EC-1006FL

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

1. SCREW THE POLE (B) CLOCKWISE INTO THE BASE (A) TO TIGHTEN.
2. SCREW THE POLE (C) CLOCKWISE INTO THE POLE (B) TO TIGHTEN.
3. SCREW THE POLE (D) CLOCKWISE INTO THE POLE (C) TO TIGHTEN.
4. SCREW SOCKET ASSEMBLY (E) CLOCKWISE INTO THE POLE (D) TO TIGHTEN.
GET THE REMAINING SLACK OF THE POWER CORD OUT FROM BASE HOLD.
5. INSERT HARP (G) TO THE SADDLE (F) .
6. REMOVE THE FINIAL (I) FROM THE HARP (G).
7. PLACE SHADE (H) ONTO HARP (G) BY FINIAL (I)
CLOCKWISE TO TIGHTEN.
8. INSTALL BULB (NOT INCLUDED) INTO THE SOCKET.
9. INSERT THE POWER PLUG INTO AN OUTLET AND
ENJOY !!

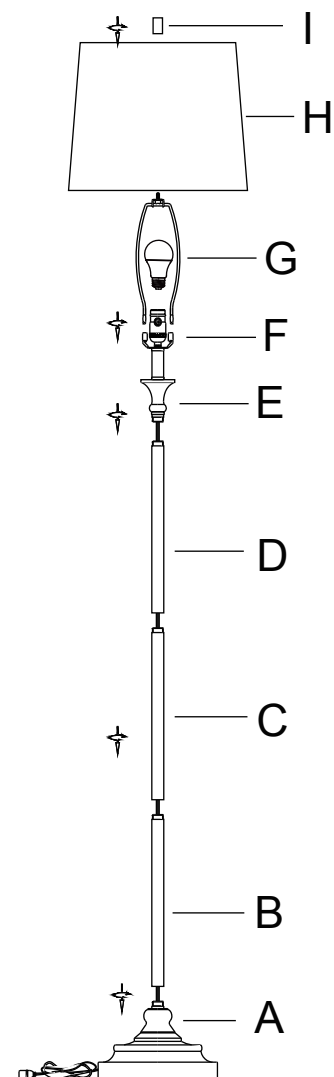

Use MAX 100 Wattage type A bulb (Bulb not included)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.