
K55-100(SQ)/101(SQ)/102(SQ)/103(SQ)

# Kitchen/Prep Pull-Down Faucet Installation Instructions

# CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

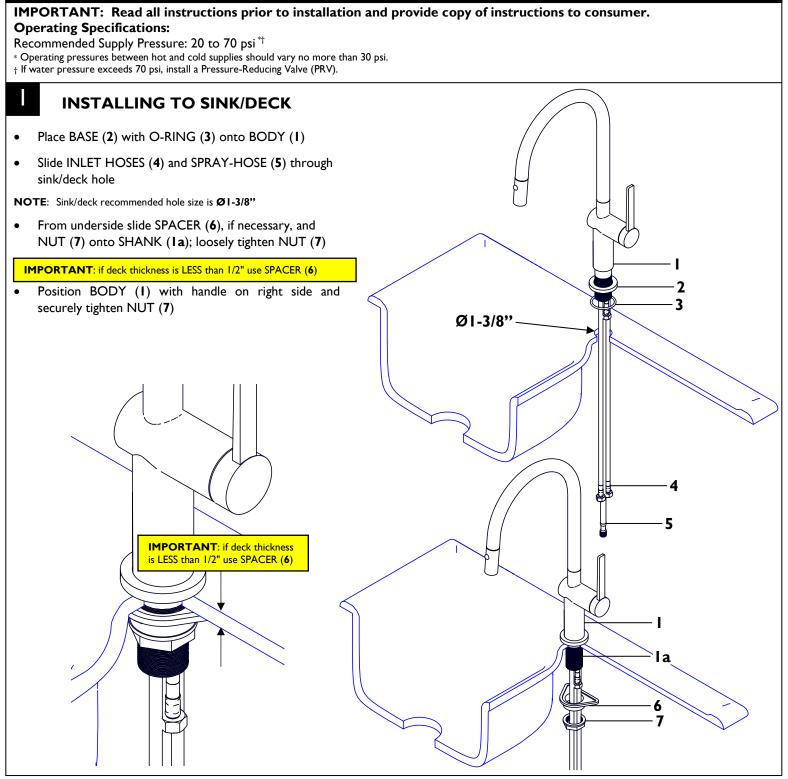


California Faucets

## WATER CONNECTIONS

**IMPORTANT**: Water supplies MUST be flushed before running water through SPRAYHEAD (8); the following procedure will ensure debris removal

- Tighten red colored nut on HOT INLET HOSE (4a) to HOT SUPPLY (9a)
- Tighten blue colored nut on COLD INLET HOSE (4b) 
  to COLD SUPPLY (9b)
- Ensure that faucet HANDLE (10) is in closed position as shown (straight up)
- Turn on **HOT** and **COLD** SUPPLY VALVES (9)
- Place BUCKET (11) (not supplied) under MIX HOSE (12)
- Slowly open HANDLE (10) on faucet and cycle through cold and hot water until water runs clear

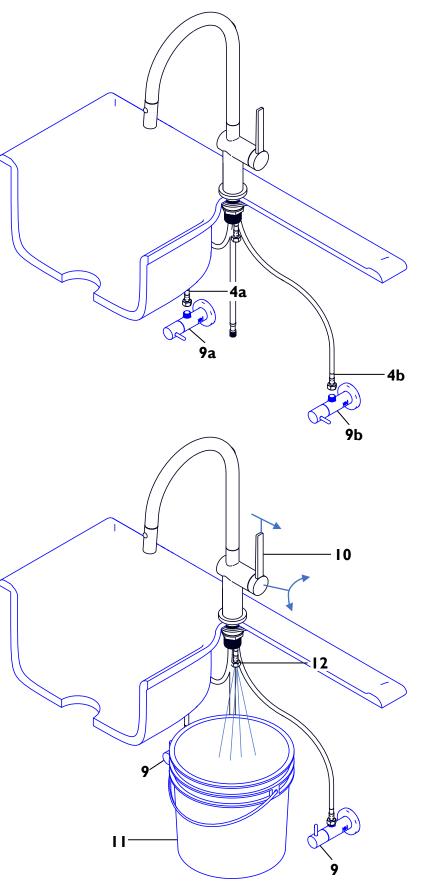

### FINAL CONNECTIONS

- Tighten CHECK ASSEMBLY (13) onto end of MIX HOSE (12)
- Attach SPRAY-HOSE (5) onto end of CHECK . ASSEMBLY (13)

### CHECK ASSEMBLY MAINTENANCE

- Disconnect CHECK ASSEMBLY (13) from 0 SPRAY-HOSE and MIX HOSE (12)
- Unscrew UPPER HOUSING (13a), 0 remove both CHECK VALVES (13b) by gently pushing through hole in LOWER HOUSING (13c)
- Rinse both CHECK VALVES (13b) with 0 clean water
- Assemble CHECK VALVES (13b) into 0 LOWER HOUSING (13c) using plumbers grease on orings as needed

**IMPORTANT:** Both CHECK VALVES (13b) must be orientated in LOWER HOUSING (13c) as shown.

- Apply thin film of plumber's grease to 0 HOUSING O-RING (13d) and tighten UPPER HOUSING (13a) onto LOWER HOUSING (13c)
- Attach CHECK ASSEMBLY (13) to MIX 0 HOSE (12)


### **ATTACHING WEIGHT**


- Separate FEMALE WEIGHT (14a) and MALE WEIGHT (14b) sections by loosening SCREWS (14c)
- Place FEMALE WEIGHT (14a) at lowest straight point on SPRAY-HOSE (5) just above curve of hose

**IMPORTANT**: The placement of WEIGHT (14) shall be at the lowest portion of the SPRAY-HOSE (5).

Secure MALE WEIGHT (14b) onto SPRAY-HOSE (5) by tightening both SCREWS (14c)

**IMPORTANT**: The area below hose/weight must be clear of all items.

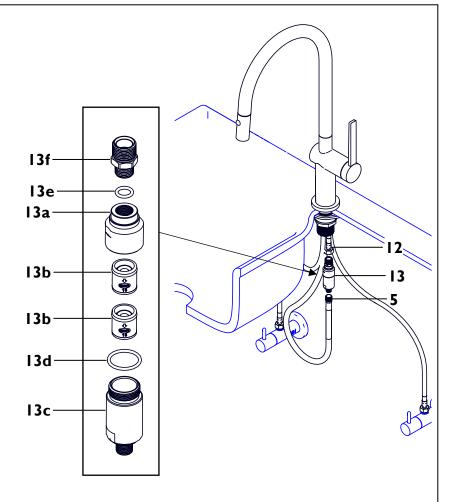

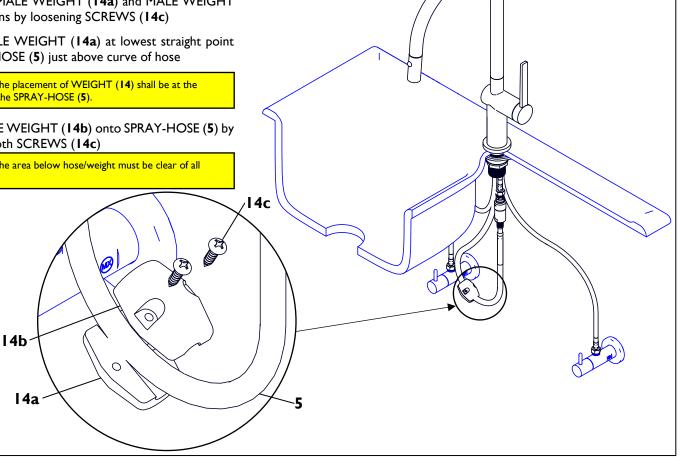

### MAINTENANCE

### **SPRAYHEAD - BUTTON**

- Place drain strainer or towel in sink drain to prevent parts from falling down the drain
- Use KEY (15) to remove retaining RING (8a) and SPRAY-FACE (8b)

**IMPORTANT**: Once SPRAY-FACE (**8b**) is removed **DO NOT** operate water through SPRAYHEAD (**8**) as internal damage may be done to SPRAYHEAD (**8**)

- Rinse all parts with clean water to remove debris
- Replace all parts in opposite order as described above

#### **SPRAYHEAD - SQUEEZE**

- Place drain strainer or towel in sink drain to prevent parts from falling down the drain
- Use WRENCH (18) to remove decorative TIP (16a), aerator INSERT (16b) and WASHER (16c)
- Use HEX KEY (17) to remove SPRAY-FACE (16d)

**IMPORTANT:** Once SPRAY-FACE (16d) is removed **DO NOT** operate water through SPRAYHEAD (16) as internal damage may be done to SPRAYHEAD (16)

• Rinse all parts with clean water to remove debris

• Replace all parts in opposite order as described above

CARTRIDGE

- Turn off HOT and COLD supply stops
- Remove SETSCREW (10a) from HANDLE (10)
- Slide HANDLE (10) off CARTRIDGE (18)
- Remove BONNET (19), PACKING NUT (20), and slide CARTRIDGE (18) out
- Rinse CARTRIDGE (18) with clean water to remove debris
- Replace CARTRIDGE (18) and secure with PACKING NUT (20) torqued to 70-90 lb-in

**IMPORTANT**: Over tightening PACKING NUT (**20**) will cause damage to CARTRIDGE (**18**). Under tightening PACKING NUT (**20**) will cause CARTRIDGE (**18**) to leak.

 Replace remaining parts in opposite order as described above

