

# OUTDOOR LIGHTING

IOL304  
09/16

QUESTIONS OR CONCERNS CONTACT AT:

1-800-265-1833 (English) / 1-800-567-2513 (French)  
Monday through Friday 8:00 AM to 5:00 PM E.S.T.



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS  
READ ALL INSTRUCTIONS

**IMPORTANT SAFETY INSTRUCTIONS**  
**SAVE THESE INSTRUCTIONS**

**TOOLS AND MATERIALS REQUIRED:**



Phillips Screwdriver



Wire Cutters



Pliers



Wrench


Wiring supplies as required by local electrical code

## SAFETY PRECAUTIONS:


1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CONNECT THE GROUND WIRES (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL BOX.
4. TO CLEAN THE FIXTURE, TURN OFF THE POWER, WAIT FOR IT TO COOL, AND WIPE THE FIXTURE WITH A CLEAN, SOFT CLOTH.

**NOTE: Product may not look exactly as shown in figures.**


## INSTALLATION:

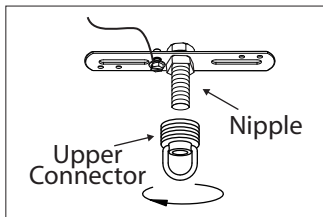


1. Determine the height that you would like to hang your fixture. Trim the cord and chain. Allow 10" of extra wiring for the electrical box connections.

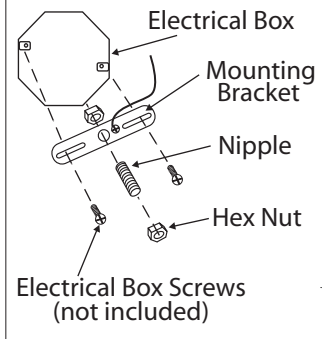


2. Loosen the upper connector from nipple. Thread nipple into mounting bracket, adjust nipple so it clears the canopy when installed. Lock in place by threading hex nut onto nipple and tighten against mounting bracket. Attach mounting bracket to electrical box with electrical box screws (not included).

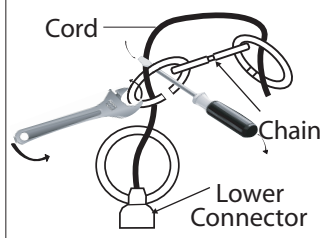


3. Slide the nut and canopy over the chain. Open the last link of the chain furthest from the fixture and hang the fixture on the lower connector. Ensure the opening on the chain is closed after connection. Feed the cord through the chain, nut and canopy.

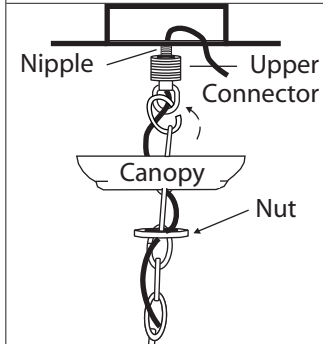


4. Feed the cord through upper connector and nipple. Tighten the upper connector onto the nipple. Spread the other end of the chain. Open and connect to the upper connector. Ensure the opening on chain is closed after connection.

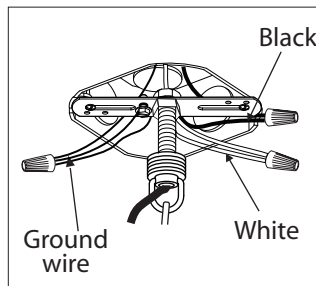


5. Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical box. Connect black wire from fixture to black wire in electrical box and connect the white wire from fixture to white wire in electrical box.

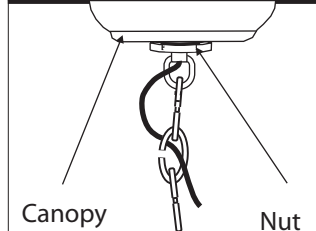

6. Once connections of wires are completed, carefully tuck wires and wire nuts into the outlet box making sure no bare wire is visible at the wire nuts.

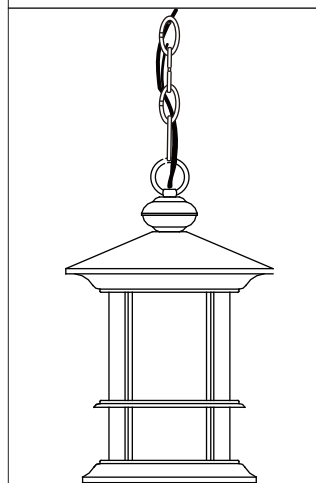

7. Slide the canopy up the chain and over the upper connector. Slide the nut up the chain and thread onto the upper connector.

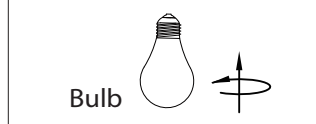

8. Install specified bulb type and wattage (not included).