

PARTS LIST

BY:

JAR



FINISH:


AS SPECIFIED

CHK'D:

DATE:

9-25-01

782-VB

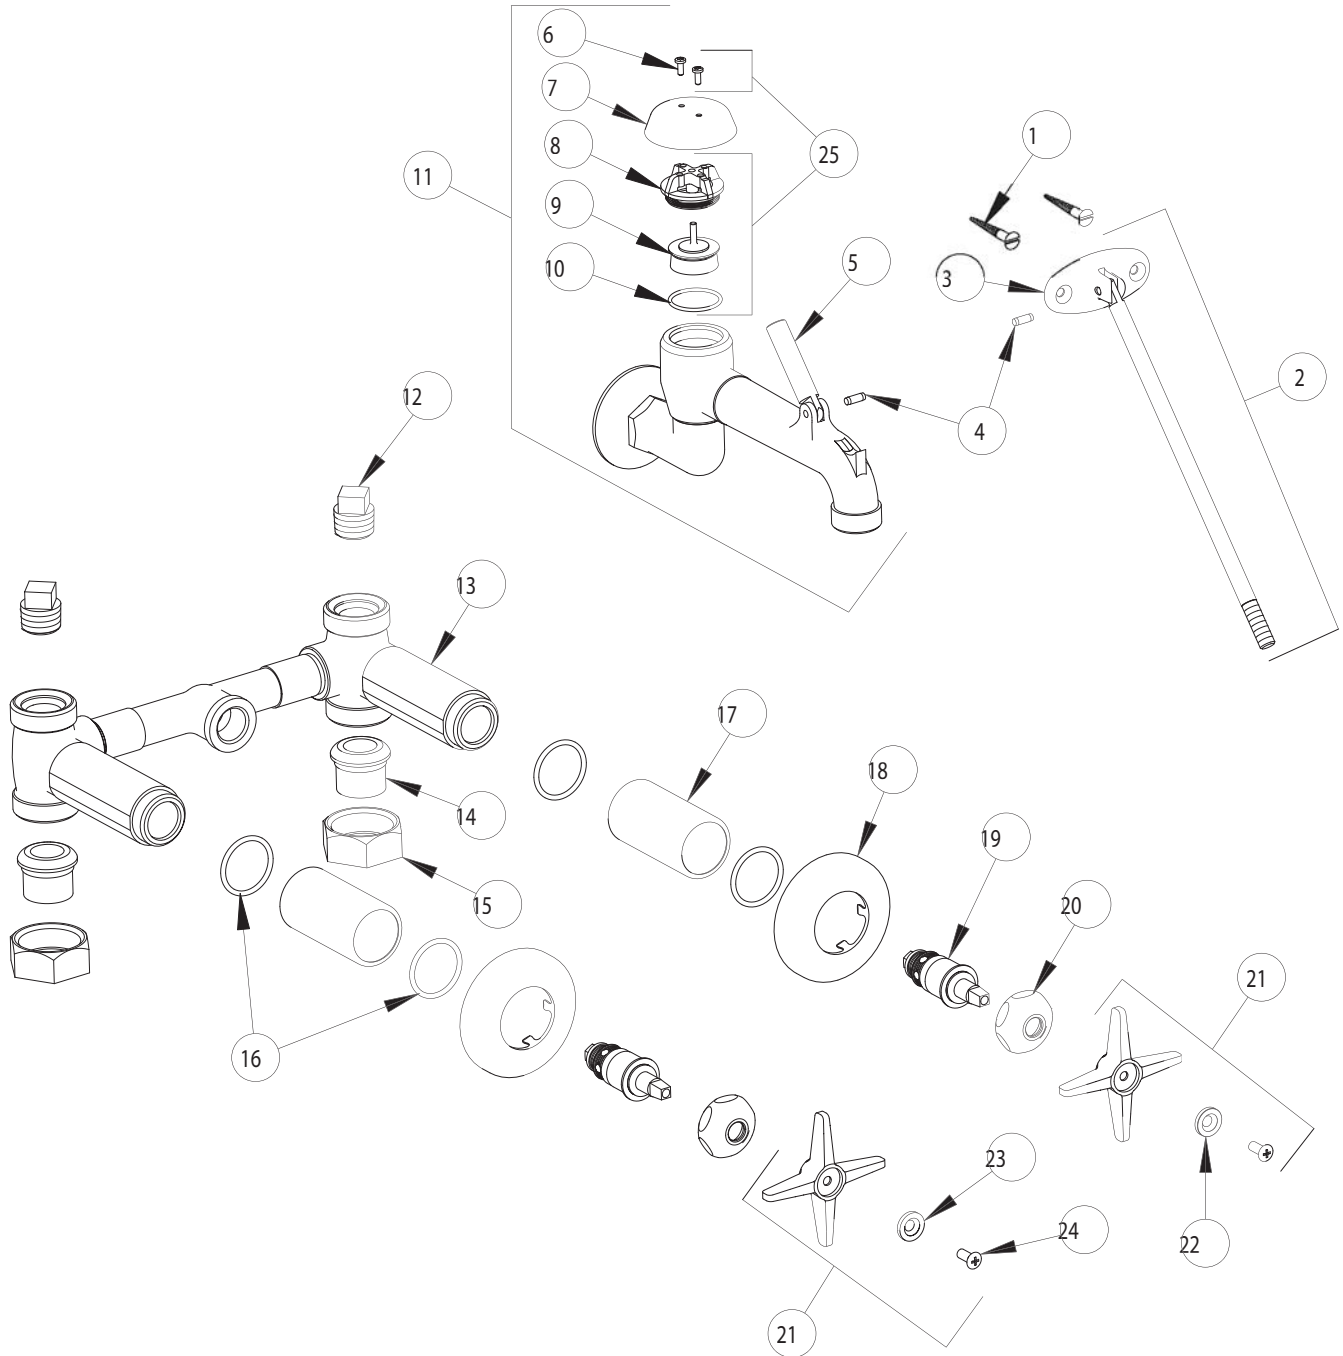

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	173-006	FLAT HEAD WOOD SCREW	14	177-003	UNION TAILPIECE
2	173-003K	ROD ASSEMBLY	15	177-002	UNION NUT
3	173-105	WALL BRACKET	16	5235-107	O-RING
4	50-007	PIN	17	5235-106	SLEEVE
5	173-026	SLEEVE	18	633-201	WALL FLANGE
6	333-321	VACUUM BREAKER TORX SCREW	19	217XTLH	SLO-COMPRESSION UNIT (LH)
7	892-154	VACUUM BREAKER COVER	20	1-214	CAP
8	892-202	VACUUM BREAKER SEAT	21	633-PR	4-ARM CROSS HANDLE ASSEMBLY
9	892-032K	VACUUM BREAKER DISC ASSEMBLY	22	633-123	INDEX BUTTON (BLUE)
10	80-007	O-RING	23	633-023	INDEX BUTTON (RED)
11	782-001KVB	V.B. SPOUT ASSEMBLY	24	420-010	SCREW
12	234-032	1/2 NPT PLUG	25	892-202K	VACUUM BREAKER REPAIR KIT
13	-----	VALVE BODY (NOT SOLD SEPARATELY)			